

---

# Service Guide

Publication Number 54904-97005  
October 2009

© Copyright Agilent Technologies 2009  
All Rights Reserved.

---

## 9000 Series Infiniium Oscilloscopes



---

## The Agilent Technologies Infiniium Oscilloscope at a Glance

### Ease of use with high performance

The Agilent Technologies Infiniium oscilloscopes combine unprecedented ease-of-use with high-performance digitizing oscilloscope functionality to simplify your design and analysis measurement tasks.

- Traditional oscilloscope front-panel interface provides direct access to the controls needed for most troubleshooting tasks.
- Graphical user interface with menus, windows, dialogs, and toolbars provides easy access to dozens of configuration and analysis tools, ensuring you can set up and make the most complex measurements.
- Models with bandwidths from 600 MHz to 4 GHz.

### Display shows waveforms and graphical user interface

- Graphical interface allows direct interaction with waveforms, including drag-and-drop positioning and instant waveform zoom.
- Touchscreen display allows oscilloscope operation without an external pointing device.
- Waveforms displayed in color, making correlation easy.
- Current configuration parameters displayed near the waveform display and are color-coded to make identification easy.
- Graphical interface menus and toolbars simplify complex measurement setups.

### Horizontal controls set sweep speed and position

- Main sweep speeds from 5 ps/div to 20 s/div.
- Zoom mode is from 1 ps/div to main time base setting.
- Intensified waveforms on main sweep window make it easy to see what will appear in the zoom window.

### Acquisition and general controls start and stop the scope and do basic setup

- Run and stop controls for continuous or single acquisitions.
- Clear display before one or more acquisitions.
- Default setup and Autoscale set initial configuration.

### Hard disk drive and USB 2.0 port for saving and restoring setups and measurement results

- Store measurement displays for inclusion in reports and test setup guides.
- Store oscilloscope setups to repeat tests another time.
- Hard disk stores oscilloscope operating system.

### Trigger setup controls set mode and basic parameters

- Select Edge, Glitch, or Advanced Modes.
- Choose input source and slope.
- Use graphical user interface to simplify configuration of pattern, state, delay, and violation trigger modes.

### Vertical controls set attenuation, and position

- Input attenuation adjustable from 1 mV/div to 1 V/div.
- Color-coded knobs make it easy to find the controls that affect each waveform.

### Marker and quick measurements help measure waveform parameters

- Waveform markers A and B to check voltage or  $\Delta$ -time at any point on the displayed waveform.

### Service Policy

The service policy of this instrument requires replacing defective assemblies. Some assemblies can be replaced on an exchange basis.

---

## In This Book

This book provides the service documentation for the Agilent Technologies 9000 Series oscilloscopes. It is divided into eight chapters.

Chapter 1, "General Information," provides information about which oscilloscopes are covered by this manual, environmental requirements, and oscilloscope dimensions.

Chapter 2, "Setting Up the Oscilloscope," explains how to prepare the oscilloscope for use.

Chapter 3, "Calibration," explains how and when you should run the user calibration procedure.

Chapter 4, "Testing Performance," provides information about testing the oscilloscope to verify that it performs according to specifications.

Chapter 5, "Troubleshooting," provides information about how to identify defective assemblies.

Chapter 6, "Replacing Assemblies," gives the procedures and techniques for replacing defective parts.

Chapter 7, "Replaceable Parts," includes a list of exchange assemblies and other replaceable parts, part ordering information, and shipping information.

Chapter 8, "Theory of Operation," briefly describes the internal operation of the oscilloscope.

At the back of the book you will find safety notices.



## **General Information 7**

- Instruments covered by this service guide 9
- Accessories supplied 10
- Specifications and Characteristics 10
- Environmental Conditions 11
- Measurement Category 11
- Oscilloscope Dimensions 12

## **Setting Up the Oscilloscope 13**

- To inspect package contents 15
- To inspect options and accessories 16
- Technical Specifications 20
- To position for proper airflow 25
- To connect power 27
- To connect the mouse, the keyboard, a LAN cable, a USB device, and a printer 27
- To connect oscilloscope probes 30
- To tilt the oscilloscope upward for easier viewing 32
- To turn on the oscilloscope 33
- To turn off the oscilloscope 34
- To verify basic operation for the 9000A series oscilloscope 35
- Installing application programs on Infiniium 37
- Changing Windows System Settings 38
- To clean the oscilloscope 39

## **Calibration 43**

- To run the self calibration 45

## **Testing Performance 47**

- Performing Self-Test and Calibration 49
- To test input impedance 51
- Offset Accuracy Test 52
- DC Gain Accuracy Test 59
- Analog Bandwidth - Maximum Frequency Check 65
- Time Scale Accuracy (TSA) 72
- Performance Test Record 75

## **Troubleshooting 83**

- To troubleshoot the oscilloscope 86
- Primary Trouble Isolation 87
- Power Supply Trouble Isolation 91
- How to Use the Power Fault LEDs 92
- Display Trouble Isolation 96
- To check the backlight inverter voltages 98
- To check the display board video signals 99
- Front Panel Display Trouble Isolation 100
- Front Panel Trouble Isolation 102
- Motherboard Verification 103

## Chapter :

- To setup the BIOS 104
- Acquisition Board Trouble Isolation - Scope Self Tests 105
- AutoProbe Board Trouble Isolation 107
- To check the keyboard; Trouble Isolation Procedure 108
- To check the LEDs 109
- Software Revisions 110
- To check probe power outputs 111

### **Replacing Assemblies 113**

- To return the oscilloscope to Agilent Technologies for service 115
- To remove and replace the handle and rear cover 116
- To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board 119
- To remove and replace the backlight inverter board 128
- To remove and replace the touch screen controller board 130
- To remove and replace the motherboard 132
- To remove and replace the acquisition board assembly 135
- To set the calibration factors after replacing the acquisition board 140
- To remove and replace the power supply 142
- To remove and replace the hard disk drive 144

### **Replaceable Parts 145**

- Ordering Replaceable Parts 146
- Exploded Views 147
- Replaceable Parts List 151

### **Theory of Operation 155**

- Block-Level Theory 156

Instruments covered by this service guide 9  
Accessories supplied 10  
Specifications and Characteristics 10  
Environmental Conditions 11  
Measurement Category 11  
Oscilloscope Dimensions 12

---

## General Information

This chapter of the *Agilent Technologies Infiniium Oscilloscope Service Guide* gives you general information about the oscilloscope. The following topics are covered in this chapter.

- Instruments covered by this guide
- How to determine whether the instrument is under warranty
- Accessories
- Where to find the oscilloscope's specifications
- Environmental conditions and measurement category
- Oscilloscope dimensions

---

## Instruments covered by this service guide

Oscilloscopes manufactured after the date this manual was released may be different from those described in this manual. The release date of this manual is shown on the title page. This manual will be revised when necessary.

If you have an oscilloscope that was manufactured after the release of this manual, please check the Agilent Technologies website at [www.agilent.com](http://www.agilent.com) to see whether a newer version of this manual is available.

You can determine the year the oscilloscope was manufactured by examining the serial number label that is affixed to the rear panel of the oscilloscope. The serial number is composed of two parts. The first part contains two letters and two numbers that signify the oscilloscope's county of origin and year date code. A year date code of "09" indicates that the oscilloscope was manufactured in 2009. The second part of the serial number contains a rolling number that is different for each oscilloscope.

The following 9000 Series oscilloscopes are covered in this guide.

**Table 1 -1**

---

**Oscilloscopes Covered by this Service Guide**

---

<b>Model</b>	<b>Bandwidth</b>
<b>DSO/MSO9064A</b>	<b>600 MHz bandwidth</b>
<b>DSO/MSO9104A</b>	<b>1 GHz bandwidth</b>
<b>DSO/MSO9254A</b>	<b>2.5 GHz bandwidth</b>
<b>DSO/MSO9404A</b>	<b>4 GHz bandwidth</b>

The oscilloscope can be identified by the product number on the front or rear panel.

## Accessories supplied

The following accessories are supplied.

- Mouse
- Stylus
- Keyboard
- Accessory Pouch
- Front-panel Cover
- Localized Power Cord
- N2873A 10:1 Divider Passive Probe (one per scope channel)
- Channel Flying Lead Set Logic Probe, MSO Cable, and Calibration Fixture (MSO models only)
- Agilent I/O Libraries Suite 15.0

---

## Specifications and Characteristics

For complete specifications and characteristics, direct your web browser to [www.agilent.com](http://www.agilent.com) and perform a search for the oscilloscope's model number. Then select "Data Sheets" from the Library.

Specifications that are pertinent to each test are given in the "Testing Performance" chapter.

Specifications are valid after a 30 minute warm-up period, and within  $\pm 5^{\circ}\text{C}$  from the temperature at which the last self-calibration was performed.

---

## Environmental Conditions

### Overvoltage Category

This product is intended to be powered by MAINS that comply to Overvoltage Category II, which is typical of cord-and-plug connected equipment.

### Pollution Degree

The 9000 Series Oscilloscope may be operated in environments of Pollution Degree 2 (or Pollution Degree 1).

### Pollution Degree Definitions

Pollution Degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence. Example: A clean room or climate controlled office environment.

Pollution Degree 2. Normally only dry non-conductive pollution occurs. Occasionally a temporary conductivity caused by condensation may occur. Example: General indoor environment.

Pollution Degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. Example: Sheltered outdoor environment.

---

## Measurement Category



### Measurement Category

The 9000 Series oscilloscope is intended to be used for measurements in Measurement Category I.

### Measurement Category Definitions

Measurement Category I is for measurements performed on circuits not directly connected to MAINS. Examples are measurements on circuits not derived from MAINS, and specially protected (internal) MAINS derived circuits. In the latter case, transient stresses are variable; for that reason, the transient withstand capability of the equipment is made known to the user.

Measurement Category II is for measurements performed on circuits directly connected to the low voltage installation. Examples are measurements on household appliances, portable tools and similar equipment.

Measurement Category III is for measurements performed in the building installation. Examples are measurements on distribution boards, circuit-breakers, wiring, including cables, bus-bars, junction boxes, switches, socket-outlets in the fixed installation, and equipment for industrial use and some other equipment, for example, stationary motors with permanent connection to the fixed installation.

Measurement Category IV is for measurements performed at the source of the low-voltage installation. Examples are electricity meters and measurements on primary overcurrent protection devices and ripple control units.

### Transient Withstand Capability

The maximum transient withstand capability of this instrument is not specified. Do not apply more than 5 volts rms at the oscilloscope's vertical input BNC connectors.

## Oscilloscope Dimensions

<b>Height</b>	<b>12.9 in (33 cm)</b>
<b>Width</b>	<b>16.8 in (43 cm)</b>
<b>Depth</b>	<b>9 in (23 cm)</b>
<b>Net Weight</b>	<b>11.8 kg (26 lbs)</b>

---

## Setting Up the Oscilloscope

---

# Setting Up the Oscilloscope

This chapter shows you how to set up your Infiniium oscilloscope, connect power and accessories, and verify general operation.

## To inspect package contents

- o Inspect the shipping container for damage.

Keep a damaged shipping container or cushioning material until you have inspected the contents of the shipment for completeness and have checked the oscilloscope mechanically and electrically.

- o Inspect the oscilloscope.
  - If there is mechanical damage or a defect, or if the oscilloscope does not operate properly or does not pass performance tests, notify your Agilent Technologies Sales Office.
  - If the shipping container is damaged, or the cushioning materials show signs of stress, notify the carrier and your Agilent Technologies Sales Office. Keep the shipping materials for the carrier's inspection. The Agilent Technologies Sales Office will arrange for repair or replacement at Agilent's option without waiting for claim settlement.
- o Verify that you received the following items in the Infiniium Oscilloscope packaging.
  - Infiniium Oscilloscope
  - Mouse
  - Touchscreen Stylus
  - Front Panel Cover
  - N2873A 10:1 Divider Passive Probe per Scope Channel
  - Channel Flying Lead Set Logic Probe, MSO Cable, and Calibration Fixture (MSO models only)
  - Probe Accessory Pouch (mounts on rear of oscilloscope)
  - Agilent I/O Libraries Suite 15.0
  - Localized Power Cord
  - Keyboard

If anything is missing, contact your nearest Agilent Technologies Sales Office. If the shipment was damaged, contact the carrier, then contact the nearest Agilent Technologies Sales Office.

---

## To inspect options and accessories

- o Verify that you received the options and accessories you ordered and that none were damaged.

If anything is missing, contact your nearest Agilent Technologies Sales Office. If the shipment was damaged, or the cushioning materials show signs of stress, contact the carrier and your Agilent Technologies Sales Office.

Some accessories that will enhance your work with the 9000A series oscilloscopes are listed in table 0-1.

**Table 0-1**

---

**Accessories and Software for the 9000A Series Infiniium Oscilloscopes**

---

Agilent Model Number	Description
	<b>Probes</b>
1131A	3.5 GHz Infiniium Probe Amplifier
1132A	5 GHz Infiniium Probe Amplifier
1134A	7 GHz Infiniium Probe Amplifier
1168A	10 GHz Infiniium II Probe Amplifier
1169A	12 GHz Infiniium II Probe Amplifier
E2668A	Infiniium Single-ended Connectivity Kit
E2669A	Infiniium Differential Connectivity Kit
N5381A	12 GHz Solder-in Differential Probe Head
N5382A	12 GHz Differential Browser Probe Head
N5380A	SMA Probe Head
1156A	1.5 GHz Single-ended Active Probe
1157A	2.5 GHz Single-ended Active Probe
1158A	4 GHz Single-ended Active Probe
N2774A	50 MHz Current Probe
N2775A	Probe Power Supply for N2774A
E2697A	High Impedance Adapter, option 807 (includes one 10073C passive probe)
54006A	6 GHz probe, 10:1 (500 Ω) or 20:1 (1 kΩ), .25 pf
E2655A	Additional probe deskew and performance verification kit

**Setting Up the Oscilloscope  
To inspect options and accessories**

<b>Agilent Model Number</b>	<b>Description</b>
<b>N2870A Series</b>	<b>Passive Probe Family (Deluxe, Fine Pitch, and General Purpose Accessory Kits are available as well)</b>
	<b>Rackmount Kit</b>
<b>N2902A or Option 1CM</b>	<b>Rackmount Kit, option 1CM</b>
	<b>Software Applications and Upgrades</b>
<b>Option A6J</b>	<b>ANSI Z540 Compliant Calibration</b>
<b>Option-001</b>	<b>RS-232/UART Triggering and Decode - installed</b>
<b>Option-002</b>	<b>EZJIT jitter analysis software - installed</b>
<b>Option-003</b>	<b>High-speed SDA and Clock Recover - installed</b>
<b>Option-004</b>	<b>EZJIT Plus jitter analysis software - installed</b>
<b>Option-005</b>	<b>USB Triggering and Decode - installed</b>
<b>Option-006</b>	<b>PCIe 1.1 Triggering and Decode - installed</b>
<b>Option-007</b>	<b>I2C/SPI Triggering and Decode - installed</b>
<b>Option-008</b>	<b>CAN/Flexray Triggering and Decode - installed</b>
<b>Option-009</b>	<b>InfiniiScan - installed</b>
<b>Option-010</b>	<b>User Defined Function - installed</b>
<b>Option-011</b>	<b>App Remote Programming Interface - installed</b>
<b>Option-012</b>	<b>Infiniium Signal Equalization - installed</b>
<b>Option-013</b>	<b>InfiniiSim Waveform Transformation Toolset (Basic) - installed</b>
<b>Option-014</b>	<b>InfiniiSim Waveform Transformation Toolset (Advanced) - installed</b>
<b>Option-015</b>	<b>Power Measurement application software - installed</b>
<b>Option-016</b>	<b>Xilinx FPGA dynamic probe - installed</b>
<b>Option-017</b>	<b>Altera FPGA dynamic probe - installed</b>
<b>Option-018</b>	<b>RS-232, SPI, and I2C Triggering and Decode Bundle - installed</b>
<b>Option-021</b>	<b>Ethernet compliance application - installed</b>
<b>Option-029</b>	<b>USB2.0 compliance application - installed</b>
<b>Option-031</b>	<b>DDR1 validation application - installed</b>
<b>Option-032</b>	<b>DDR2 validation application - installed</b>
<b>Option-033</b>	<b>DDR3 validation application - installed</b>
<b>Option-040</b>	<b>User Definable Application</b>

**Setting Up the Oscilloscope  
To inspect options and accessories**

<b>Agilent Model Number</b>	<b>Description</b>
<b>DSO9000A-820</b>	<b>DVD-RW with USB connection</b>
<b>N2902A</b>	<b>9000A Series rackmount kit</b>
<b>N2903</b>	<b>Additional removable hard disk drive</b>
<b>Gemstar 5000 custom-molded case</b>	<b>Available from <a href="http://www.gemstarmfg.com">www.gemstarmfg.com</a></b>
	<b>Stand-alone SW Products</b>
<b>N5464B</b>	<b>USB Triggering and Decode Application for Infiniium 9000A Series</b>
<b>N5463B</b>	<b>PCIe Triggering and Decode Application for Infiniium 9000A Series</b>
<b>N5462B</b>	<b>RS-232 / UART Triggering and Decode Application for Infiniium 9000A Series</b>
<b>N5391B</b>	<b>I2C/SPI Triggering and Decode Application for Infiniium 9000A Series</b>
<b>E2681A</b>	<b>EZJIT Jitter Analysis Software</b>
<b>N5384A</b>	<b>High-speed Serial Data Analysis and Clock Recovery</b>
<b>N5400A</b>	<b>EZJIT Plus Jitter Analysis Software</b>
<b>N8803A</b>	<b>CAN/Flexray Triggering and Decode Application for Infiniium 9000A Series</b>
<b>N5415A</b>	<b>InfiniiScan</b>
<b>N5430A</b>	<b>User Defined Function</b>
<b>N5452A</b>	<b>Application Remote Programming Interface</b>
<b>N5461A</b>	<b>Infiniium Signal Equalization</b>
<b>N5465A 001</b>	<b>InfiniiSim Waveform Transformation Toolset (Basic)</b>
<b>N5465A 002</b>	<b>InfiniiSim Waveform Transformation Toolset (Advanced)</b>
<b>U1882A</b>	<b>Power Measurement Application Software</b>
<b>N5397A</b>	<b>Xilinx FPGA Dynamic Probe</b>
<b>N5433A</b>	<b>Altera FPGA Dynamic Probe</b>
<b>N5392A</b>	<b>Ethernet Compliance Application</b>
<b>N5416A</b>	<b>USB 2.0 Compliance Application</b>
<b>U7233A</b>	<b>DDR1 Validation Application</b>
<b>N5413A</b>	<b>DDR2 Validation Application</b>

<b>Agilent Model Number</b>	<b>Description</b>
<b>U7231A</b>	<b>DDR3 up to 800 MHz Validation Application</b>
<b>N5467A</b>	<b>User Definable Application</b>
<b>E2625A</b>	<b>Communication Mask Test Kit</b>
<b>E2682A</b>	<b>VoiceControl Software for Infiniium Oscilloscopes</b>

DSO to MSO upgrades are available and are listed in table 0-2.

**Table 0-2**

---

**DSO to MSO upgrades for Infiniium 9000A Series Oscilloscopes**

---

<b>Agilent Model Number</b>	<b>Description</b>
<b>N2901D</b>	<b>DSO9064A to MSO9064A</b>
<b>N2901A</b>	<b>DSO9104A to MSO9104A</b>
<b>N2901B</b>	<b>DSO9254A to MSO9254A</b>
<b>N2901C</b>	<b>DSO9404A to MSO9404A</b>

Acquisition memory upgrades are available to protect your Infiniium oscilloscope investment when acquisition memory needs change. You can install memory upgrades without opening the oscilloscope case or requiring on-site service. Acquisition memory upgrades are listed in table 0-3.

**Table 0-3**

---

**Acquisition memory upgrades for Infiniium Oscilloscopes**

---

<b>Agilent Model Number</b>	<b>Description (memory is 2x in 2-channel mode)</b>
<b>N2900A-020</b>	<b>Upgrade to 20 MPts</b>
<b>N2900A-050</b>	<b>Upgrade to 50 MPts</b>
<b>N2900A-100</b>	<b>Upgrade to 100 MPts</b>
<b>N2900A-200</b>	<b>Upgrade to 200 MPts</b>
<b>N2900A-500</b>	<b>Upgrade to 500 MPts</b>

---

## Technical Specifications

Below are the technical specifications for the Infiniium 9000A Series oscilloscopes.

---

### Vertical: Analog Channels

<b>Analog Bandwidth (-3 db) 50 Ω*</b>	<b>9064A: 600 MHz,</b> <b>9104A: 1.0 GHz,</b> <b>9254A: 2.5 GHz,</b> <b>9404A: 4.0 GHz</b>
<b>Calculated Rise Time / Fall Time, 10%-90% at 50 Ω</b>	<b>9064A: 540 ps,</b> <b>9104A: 253 ps,</b> <b>9254A: 142 ps,</b> <b>9404A: 85 ps</b>
<b>Calculated Rise Time / Fall Time, 20%-80% at 50 Ω</b>	<b>9064A: 310 ps</b> <b>9104A: 174 ps,</b> <b>9254A: 98 ps,</b> <b>9404A: 59 ps</b>
<b>Input channels</b>	<b>DSO models: 4 analog</b> <b>MSO models: 4 analog + 16 digital</b>
<b>Input impedance*</b>	<b>50 Ω ±2.5%, 1 MΩ ±1% (11 pF typical)</b>
<b>Input sensitivity</b>	<b>1 MΩ: 1 mV/div to 5 V/div</b> <b>50 Ω: 1 mV/ to 1 V/div</b>
<b>Input coupling</b>	<b>1 MΩ: AC / DC</b> <b>50 Ω: DC</b>
<b>Hardware bandwidth limit</b>	<b>20 MHz on 1 MΩ input only</b>
<b>Vertical resolution**</b>	<b>8 bits, &gt;=12 bits with averaging</b>
<b>Channel-to-channel isolation</b>	<b>DC to 50 MHz: 50 dB</b> <b>&gt;50 MHz to 1 GHz: 40 dB</b> <b>&gt;1 GHz to 4 GHz: 25 dB</b>
<b>DC gain accuracy**</b>	<b>±2% of full scale at full resolution on channel scale ±5 °C from cal temp</b>

\*Denotes warranted specification, all others are typical. Specifications are valid only after a 30 minute warm-up period and ±5 °C from firmware calibration temperature.

\*\*Vertical resolution for 8 bits = 0.4% of full scale, for 12 bits = 0.024% of full scale

\*\*\*Calculated from the bandwidth

---

**Vertical: Analog Channels**

---

**Maximum input voltage\*** 1 M $\Omega$ : 150 Vrms or dc, CAT I,  $\pm 250$  V (dc + ac) in ac coupling  
50  $\Omega$ : 5 Vrms

---

**Offset range** 1 M $\Omega$   
(vertical sensitivity: offset)  
1 mV to < 10 mV/div:  $\pm 2$  V  
10 mV to < 20 mV/div:  $\pm 5$  V  
20 mV to < 100 mV/div:  $\pm 10$  V  
100 mV to 1 V/div:  $\pm 20$  V  
1 V to 5 V/div:  $\pm 100$  V

50  $\Omega$   
 $\pm 12$  div or  $\pm 4$  V, whichever is smallest  
**Offset accuracy\*\***  $\pm (1.25\%$  of channel offset + 1% of full scale + 1 mV)

**Dynamic range** 1 M $\Omega$ :  $\pm 8$  div from center screen  
50  $\Omega$ :  $\pm 8$  div from center screen

**DC voltage measurement accuracy\*, \*\*, \*\*\*** Dual Cursor:  $\pm [(dc\ gain\ accuracy) + resolution]$   
Single Cursor:  $\pm [(dc\ gain\ accuracy) + offset\ accuracy + (resolution/2)]$

---

\*Denotes warranted specification, all others are typical. Specifications are valid only after a 30 minute warm-up period and  $\pm 5$  °C from firmware calibration temperature.

\*\*Vertical resolution for 8 bits = 0.4% of full scale, for 12 bits = 0.024% of full scale

\*\*\*Calculated from the bandwidth

---

**Vertical: Digital Channels (on all MSO models)**

---

**Input channels** 16 digital channels  
**Threshold groupings** Pod 1: D7 - D0  
Pod 2: D15 - D8  
**User-defined threshold range**  $\pm 8.00$  V in 10 mV increments  
**Maximum input voltage**  $\pm 40$  V peak, CAT I  
**Threshold accuracy**  $\pm (100\ mV + 3\%$  of threshold setting)  
**Input dynamic range**  $\pm 10$  V about threshold  
**Minimum input voltage swing** 500 mV peak-to-peak  
**Input impedance (flying leads)** 100 K $\Omega$   $\pm 2\%$  (app. 8 pF) at probe tip  
**Resolution** 1 bit

---

## Setting Up the Oscilloscope Technical Specifications

---

<b>Horizontal</b>	
Channel-to-channel skew (digital)	2 ns typical
Glitch detect	>= 2.0 ns
Main time base range	5 ps/div to 20 s/div
Horizontal position range	0 to ±200 s
Delayed sweep range	1 ps/div to current main time base setting
Resolution	1 ps
Time scale accuracy*	±(0.4 + 0.5*YrsSinceCal) ppm pk

---

\*Denotes warranted specification, all others are typical. Specifications are valid only after a 30 minute warm-up period and ±5 °C from firmware calibration temperature.

---

<b>Acquisition</b>	
Maximum real-time sample rate	4 ch x 10 GSa/s or 2 ch x 20 GSa/s *The DSO/MSO 9064A model has a maximum real-time sampling rate of 5 GSa/s (4 ch mode), 10 GSa/s (2 ch mode)
Memory depth per channel	Standard: 10 Mpts on 4 channels, 20 Mpts on 2 channels Option 20M: 20 Mpts on 4 channels, 40 Mpts on 2 channels Option 50M: 50 Mpts on 4 channels, 100 Mpts on 2 channels Option 100: 100 Mpts on 4 channels, 200 Mpts on 2 channels Option 200: 200 Mpts on 4 channels, 400 Mpts on 2 channels Option 500: 500 Mpts on 4 channels, 1 Gpts on 2 channels
Maximum real-time sample rate (digital channels)	2 GSa/s
Maximum memory depth per channel (digital channels)	128 M (64 M in Glitch mode)
Minimum width glitch detection (digital channels)	2 ns

---

---

<b>Computer System</b>	
<b>Operating System</b>	Windows XP Pro
<b>CPU</b>	Intel Celeron M530 1.733 GHz microprocessor
<b>PC system memory</b>	2 GB
<b>Drives</b>	>= 250 GB internal hard drive (optional removable hard drive), external DVD-RW drive (optional)
<b>LXI compliance</b>	LXI Class C

---



---

<b>General Characteristics</b>	
<b>Temperature</b>	Operating: 5 °C to 40 °C Non-operating: -40 °C to 70 °C
<b>Humidity (non-condensing)</b>	Operating: Up to 95% relative humidity at 40 °C Non-operating: Up to 90% relative humidity at 65 °C
<b>Altitude</b>	Operating: Up to 4,000 meters (12,000 feet) Non-operating: Up to 15,300 meters (50,000 feet)
<b>Vibration</b>	Operating: Random vibration 5-500 Hz, 10 minutes per axis, 0.21 g (rms) Non-operating: Random vibration 5-500 Hz, 10 minutes per axis, 2.0 g (rms); resonant search 5-500 Hz, swept sine, 1 octave/minute sweep rate, (0.50 g), 5 minute resonant dwell at 4 resonances per axis
<b>Power</b>	100-120 V, 50/60/400 Hz 100-240 V, 50/60 Hz Max power dissipated: 375 W
<b>Weight</b>	Net: 11.8 kg (26 lbs)
<b>Dimensions (with feet retracted)</b>	Height: 12.9 in (33 cm) Width: 16.8 in (43 cm) Depth: 9 in (23 cm)
<b>Safety</b>	Meets IEC1010-1 +A2, CSA certified to C22.2 No. 1010.1, Self certified to UL 3111

---

**Setting Up the Oscilloscope  
Technical Specifications**

---

**General Characteristics**

---

<b>Connections</b>	<b>4 BNC analog channel inputs 1 Digital channels input 1 LAN 10/100/1000Base-Tport 1 Parallel printer port 1 Serial printer port Probe compensation connection 7 Host USB 2.0 port, 1 Device USB 2.0 port 2 PS/2 connections 1 Aux Out BNC 1 Time base reference output BNC 1 Time base reference input BNC 1 VGA connection speaker/microphone connections AC power cord connection</b>
<b>Measurement Category</b>	<b>Measurement Category I; Warning: Do not use this equipment for measurements within measurement categories II, III, and IV</b>
<b>Sound Power Level Produced by Instrument</b>	<b>45 dB</b>


---

### To position for proper airflow

- 1** Position the oscilloscope where it will have sufficient clearance for airflow around the top, back, and sides (see diagram on next page). Also, only place the oscilloscope on a hard surface so as not to block the airflow underneath the oscilloscope (for example, a piece of paper or carpet could block these fans and cause the instrument to overheat).

**Setting Up the Oscilloscope  
To position for proper airflow**

**Figure 0-1**

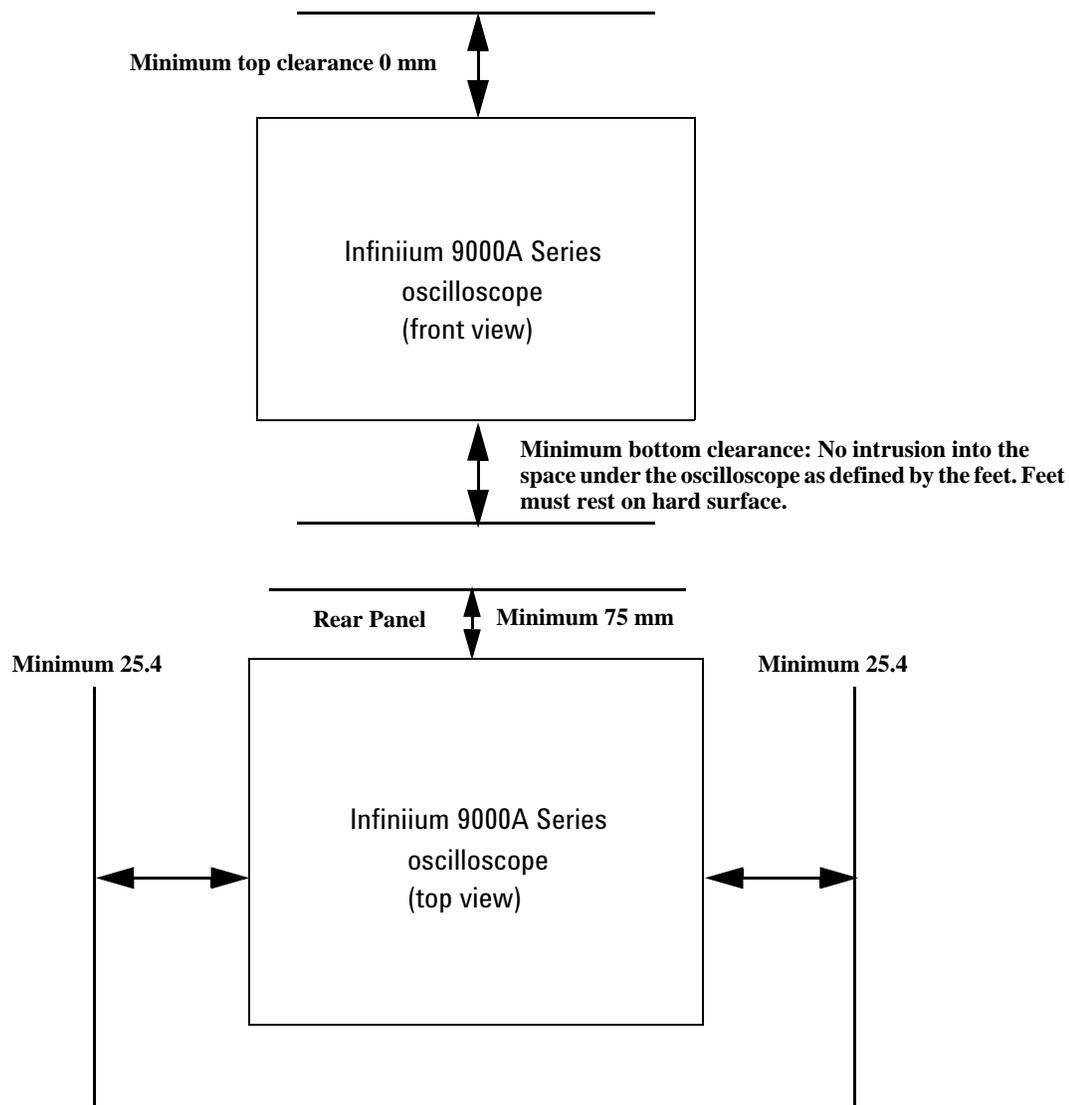

**The airflow requirement is 300 cfm  
Positioning the Infiniium Oscilloscope with Sufficient Clearance**

---


## To connect power

- 1 Position the oscilloscope so that it is not difficult to unplug the power cord.
- 2 Connect the power cord to the side panel of the oscilloscope and then to a suitable ac voltage source (100 to 120 V, 50/60/400 Hz and 100 to 240 V, 50/60 Hz for the 9000A series). The power cord serves as the main disconnecting device. Please refer to page 1-12 for rating specifications.

Maximum power dissipation: 9000A series is 375 W

The oscilloscope power supply automatically adjusts for line input voltages in the range 100 to 240 VAC. Therefore, you do not need to adjust an input line voltage setting. The line cord provided is matched by Agilent Technologies to the country of origin of the order.

You should regularly check the condition of the power cord.

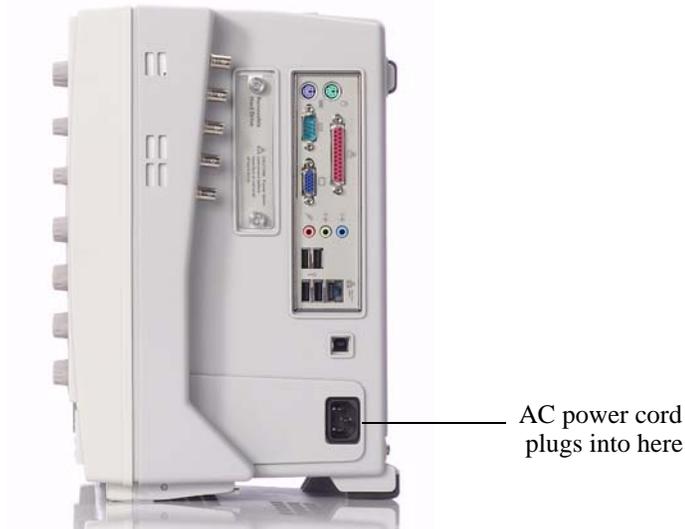

---

## To connect the mouse, the keyboard, a LAN cable, a USB

## Setting Up the Oscilloscope

To connect the mouse, the keyboard, a LAN cable, a USB device, and a printer

### device, and a printer

See Figure 0-2 on the next page for the location of the side panel connectors described below.

**Mouse** The mouse can be plugged into either a USB port or into a PS2 port. There are several USB connectors on the front panel or the side panel of the oscilloscope that can be used. When using the PS2 port, the mouse must be plugged in prior to turning on power to the oscilloscope

**Keyboard** The keyboard can be plugged into either a USB port or into a PS2 port. There are several USB connectors on the front panel or the side panel of the oscilloscope that can be used. When using the PS2 port, the keyboard must be plugged in prior to turning on power to the oscilloscope.

**LAN Cable** Connect your LAN cable to the RJ-45 connector on the side panel of the oscilloscope.


**After you have connected to the LAN card, you must set up the network. Before you try to setup your network, you should exit the oscilloscope application. If you do not know how to setup a network in Windows XP, see your network administrator or use the Windows XP on-line help.**

**USB Connectors** Side panel USB connectors can be used for any USB devices. There are also three USB connectors in the lower right-hand corner of the front panel.

**Printer Cable** If you have a parallel (Centronics) printer, you will need a parallel printer cable. Connect cable to parallel port on side panel of oscilloscope.  
If you have a serial printer, you will need a 9-pin to 25-pin serial printer cable. Some printers may require other cable configurations, but the oscilloscope has a 9-pin serial connector. Connect cable into the RS-232 port.

**Setting Up the Oscilloscope**  
**To connect the mouse, the keyboard, a LAN cable, a USB device, and a printer**

**Figure 0-2**

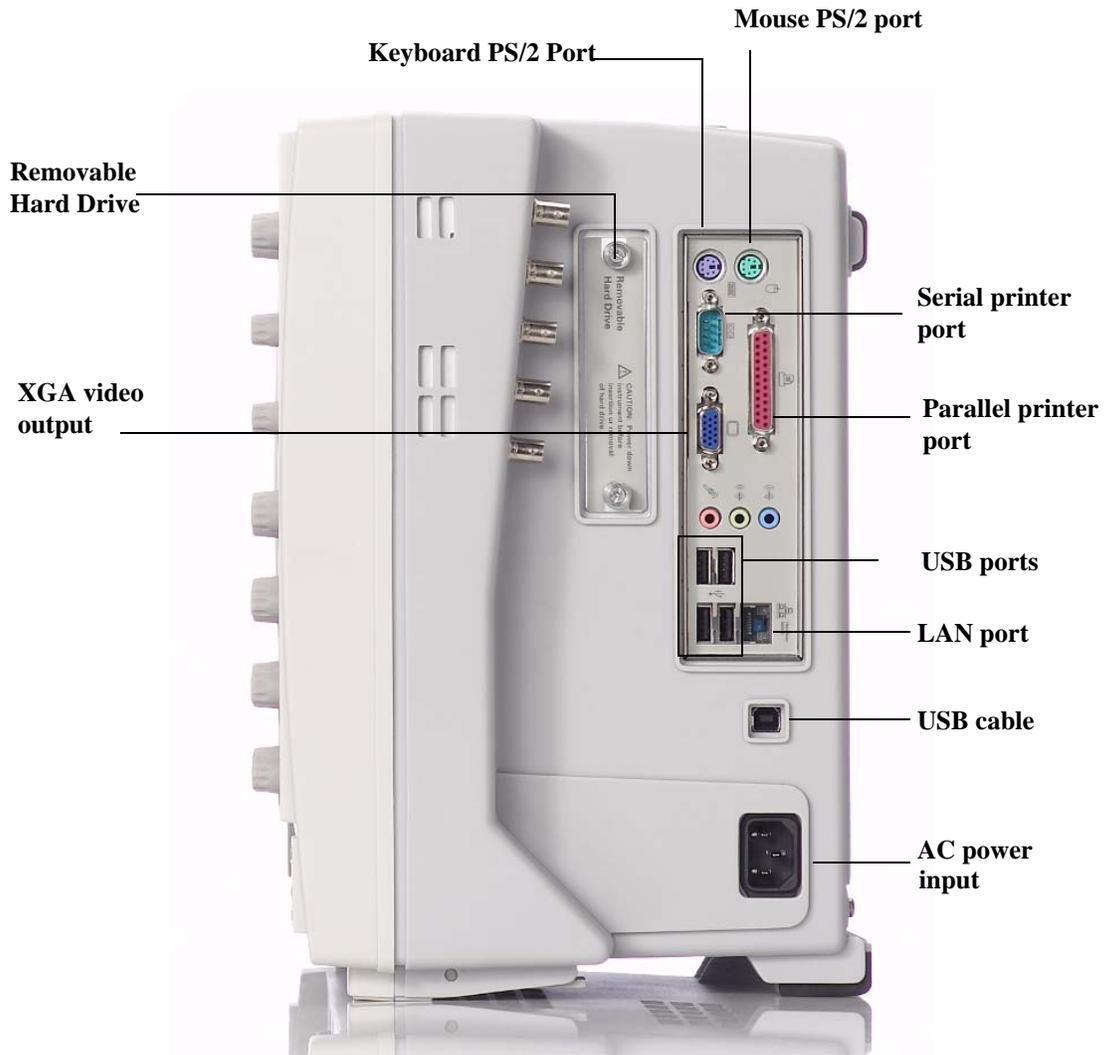

**Side Panel**


## Setting Up the Oscilloscope To connect oscilloscope probes

### To connect oscilloscope probes

There are optional Infiniium oscilloscope probes, such as the InfiniiMax 1130A and 1168A/69A series probes, that connect to the oscilloscope differently than other oscilloscope probes. Use the following steps to connect these snap-on probes to the oscilloscope.


- 1 Attach the probe connector to the desired oscilloscope channel or trigger input. Push it straight on until it latches into place.

Figure 0-3

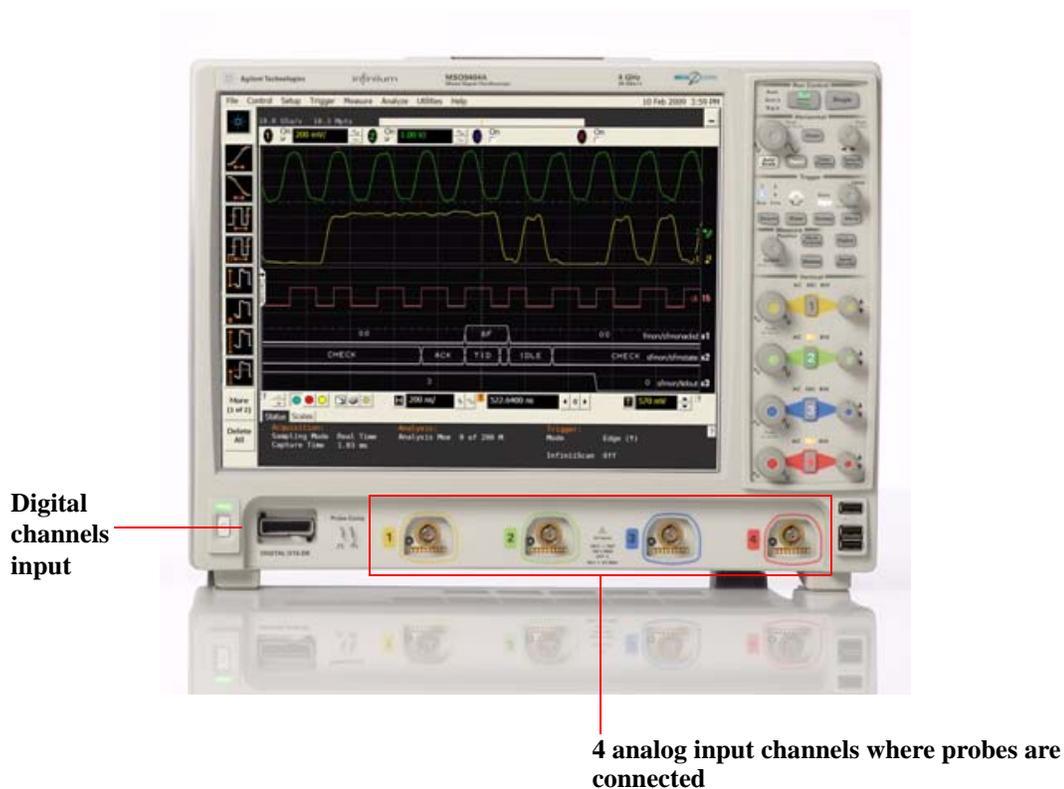

- 2 Connect the probe to the circuit of interest using the browser or other probing accessories.

Figure 0-4

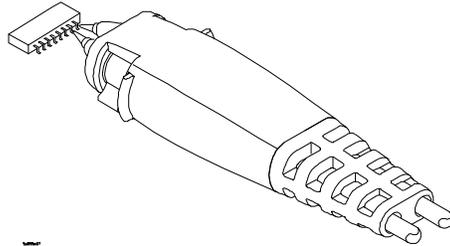

#### Probing the Circuit

- 3 To disconnect the probe, push the small latch on top of the probe connector to the left, then pull the connector body away from the front panel of the oscilloscope without twisting it.

---

**CAUTION**

Do not attempt to twist the snap-on probes on or off the oscilloscope's BNC connector. Twisting the probe connector body will damage it.

---

**CAUTION**

For the 9000A series oscilloscopes do not exceed the maximum input voltage rating. The maximum input voltage for the 50  $\Omega$  inputs is  $\pm 5$  V<sub>peak</sub>, CAT I and for the 1 M $\Omega$  inputs, it is 150 V<sub>rms</sub> (or dc), CAT I,  $\pm 250$  V (dc + ac) in ac coupling.


**Setting Up the Oscilloscope**  
**To tilt the oscilloscope upward for easier viewing**

---

**To tilt the oscilloscope upward for easier viewing**

- 1** Lift up the front of the oscilloscope, grasp one of the plastic feet on either side, and pull it down and forward until it latches into place. Repeat for the other side.

**Figure 0-5**

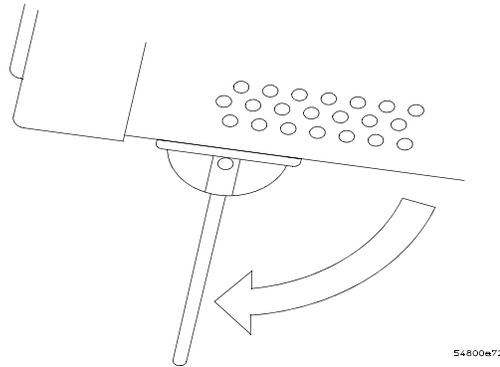

**Latching the Oscilloscope Front Feet**


---

To turn on the oscilloscope

**The first time that you turn on the oscilloscope, you will need to have a mouse connected. The mouse is needed to accept the Microsoft end-user license agreement for Windows XP Pro.**

- 1 Depress the power switch in the lower left-hand corner of the oscilloscope front panel.

Figure 0-6

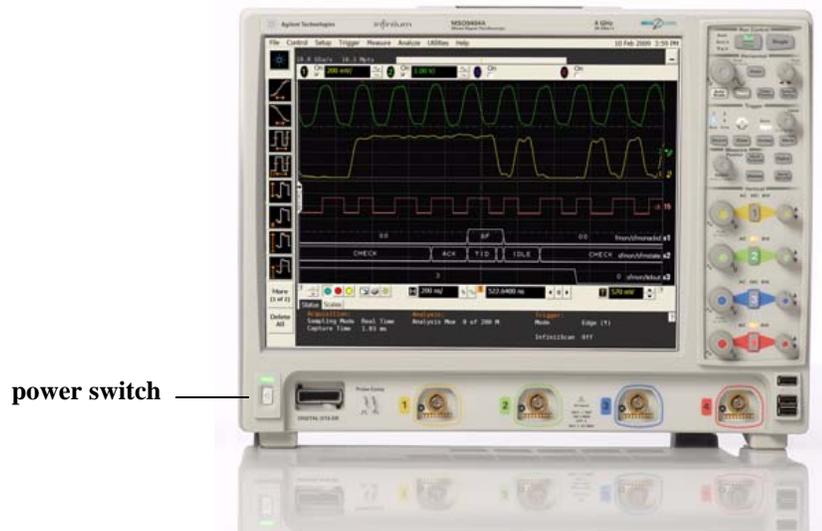

**Turning on the Oscilloscope**

After a short initialization period, the oscilloscope display appears. The oscilloscope is ready to use.

- 2 You can connect and disconnect probes and BNC cables while the oscilloscope is turned on.


### To turn off the oscilloscope

- 1** Momentarily depress the power switch at the lower left-hand corner of the oscilloscope front panel. The oscilloscope will go through a normal Windows shutdown process.

To verify basic operation for the 9000A series oscilloscope

- 1 Connect one end of the calibration cable using SMA to precision BNC adaptors to channel 1.
- 2 Connect the other end of the calibration cable to the front panel connector with the square wave label.

Figure 0-7

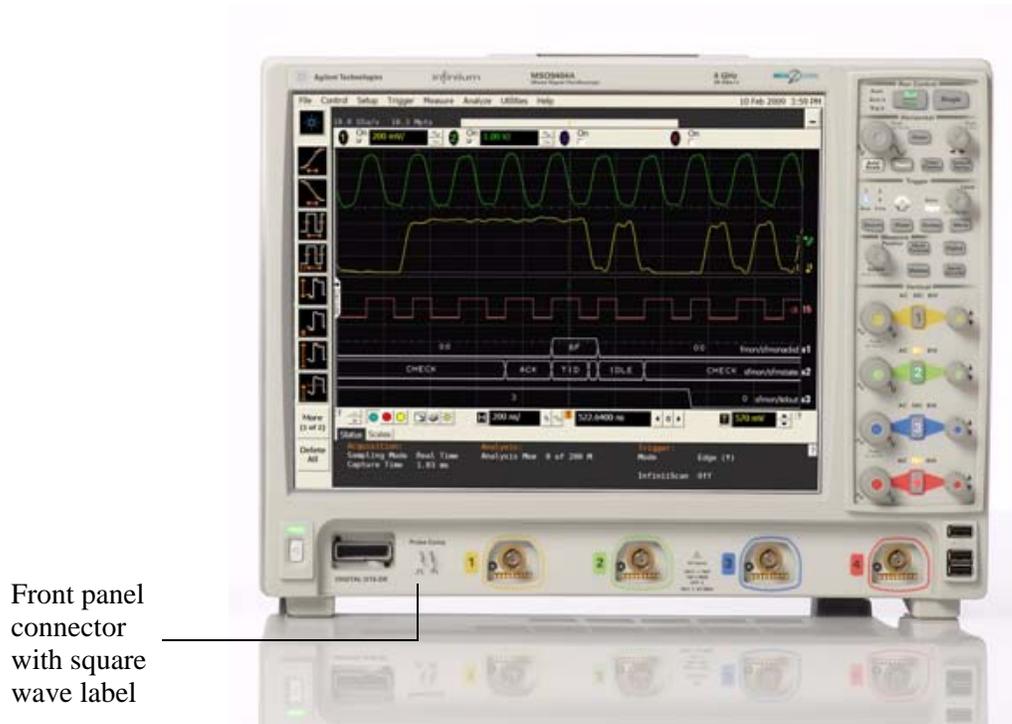

**Verifying Basic Oscilloscope Operation for 9000A Series Oscilloscopes.**

- 3 Press the Default Setup key on the front panel.  
The display will pause momentarily while the oscilloscope is configured to its default settings.
- 4 Press the Autoscale key on the front panel.

## **Setting Up the Oscilloscope**

### **To verify basic operation for the 9000A series oscilloscope**

The display will pause momentarily while the oscilloscope adjusts the sweep speed and vertical scale. You should then see a square wave with peak-to-peak amplitude of approximately 5 divisions and about four cycles on screen. If you do not see the waveform, ensure your power source is adequate, the oscilloscope is properly powered-on, and the probe is connected securely to the front-panel channel input BNC and to the probe calibration output.

- 5** Move the mouse around the mouse surface and verify that the on screen pointer follows the mouse movement.
- 6** Touch the pointer of the touch screen stylus to the surface of the screen and move it around while verifying that the pointer follows the movement. Ensure that the front panel Touchscreen button is illuminated (symbolizing that the touch screen is enabled). You do not need to use the stylus in many instances when controlling the oscilloscope via the touch screen - a finger is effective as well.

## Installing application programs on Infiniium

Infiniium is an open Windows system. This allows you to install your own application software. Agilent has verified that the following applications are compatible with the Infiniium oscilloscope application.

- Agilent Vector Signal Analysis
- Agilent VEE Pro
- Amherst Systems Oscilloscope Tools
- Microsoft Office 2000, 2003, 2007
- MathWorks MATLAB
- Mathsoft MathCad 2001i
- McAfee VirusScan
- Symantec Norton AntiVirus

**Before installing any software, you should exit the oscilloscope application.**

If you install an application other than those which Agilent has tested, it is possible that it could break the oscilloscope application. This would potentially require you to recover the oscilloscope hard drive using the hard drive's hidden recovery partition.

---

## Changing Windows System Settings

**Before changing any Windows System settings outside of the oscilloscope application you should Exit the oscilloscope application.**

There are several Windows System settings that can be changed to suit your own personal preferences. However, there are some system settings that you should avoid changing because it will interfere with the proper operation of the oscilloscope.

- Do not change the Power Options.
- Do not change the System Properties Hardware Tab settings.
- Do not change the Regional and Language Options Advanced Tab settings.
- Do not remove Fonts.
- Display Settings
  - Do not change the screen resolution or the color quality from Highest (32 bit).
  - Do not change the Font size to Extra Large.
  - Do not use a Menu font size greater than 14 points.
- Do not use the Administrative Tools to enable or disable Internet Information Services (Web Server). Use the Infiniium Web Control dialog box to enable or disable the Web Server.
- Do not delete or modify the InfiniiumAdmin user account.

---

To clean the oscilloscope

- Clean the oscilloscope with a soft cloth dampened with a mild soap and water solution.

---

**CAUTION**

Do not use too much liquid in cleaning the oscilloscope. Water can enter the Infiniium front panel, damaging sensitive electronic components.



**Setting Up the Oscilloscope**  
**To clean the oscilloscope**

**Setting Up the Oscilloscope**  
**To clean the oscilloscope**

To run the self calibration 45

---

# Calibration

This chapter provides self calibration procedures for the oscilloscope.

## To run the self calibration

**Let the Oscilloscope Warm Up Before Adjusting**  
Warm up the oscilloscope for 30 minutes before starting calibration procedure. Failure to allow warm up may result in inaccurate calibration.

The self calibration uses signals generated in the oscilloscope to calibrate channel sensitivity, offsets, and trigger parameters. You should run the self calibration

- yearly, or according to your periodic needs,
- when you replace the acquisition assembly or acquisition hybrids,
- when you replace the hard drive or any other assembly,
- when the oscilloscope's operating temperature (after the 30 minute warm-up period) is more than  $\pm 5$  °C different from that of the last calibration.

### Equipment Required

Equipment	Critical Specifications	Agilent Part Number
50 $\Omega$ BNC Cable	50 $\Omega$ characteristic impedance BNC cable	
10 MHz Signal Source (required for time scale calibration)	Frequency accuracy better than 0.4 ppm	Agilent 53131A with Opt. 010
MSO calibration fixture that ships with the oscilloscope (MSO models only)		
MSO cable that ships with the oscilloscope (MSO models only)		Agilent 54904-61615

### Self calibration


**Calibration time**  
It will take approximately 1 hour to run the self calibration on the oscilloscope, including the time required to change cables from channel to channel.

- 1 Let the Oscilloscope Warm Up Before Running the Self Calibration.  
The self calibration should only be done after the oscilloscope has run for 30 minutes at ambient temperature with the cover installed. Calibration of an oscilloscope that has not warmed up may result in an inaccurate calibration.
- 2 Pull down the Utilities menu and Select Calibration.
- 3 Click the check box to clear the Cal Memory Protect condition.  
You cannot run self calibration if this box is checked. See Figure 3-1.

## Chapter 3: Calibration

### To run the self calibration

Figure 3-1

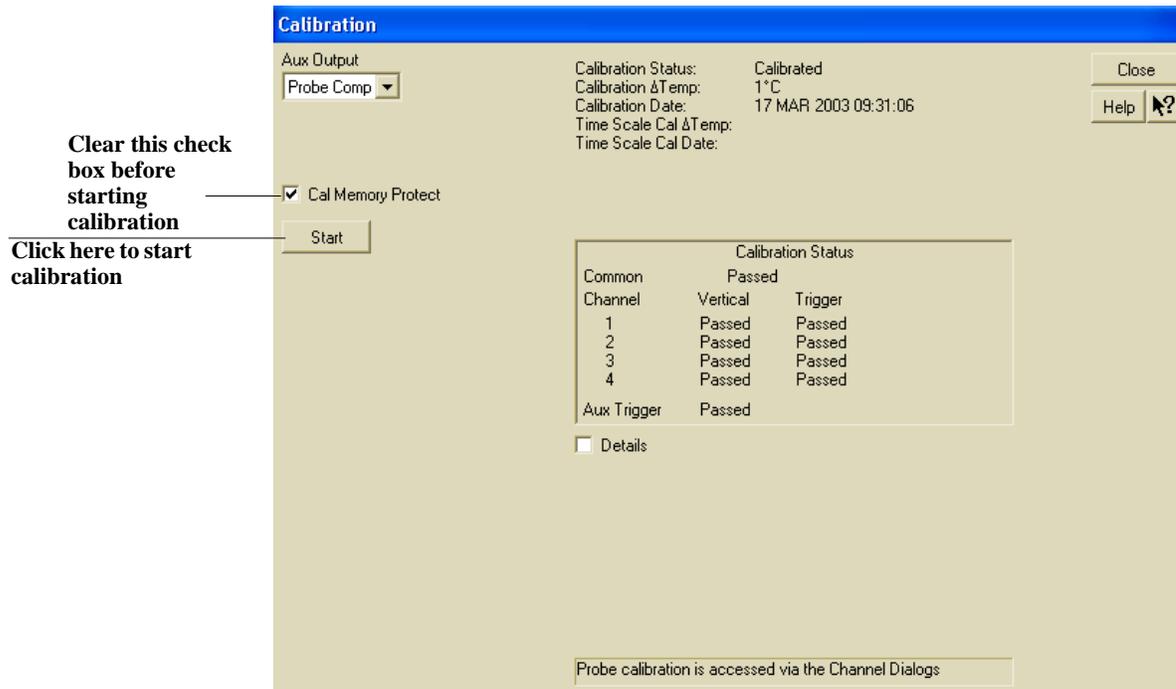

#### Calibration Dialog

- 4 Click Start, then follow the instructions on the screen.

The routine will ask you to do the following things in sequence:

  - a Decide if you want to perform the Time Scale Calibration. Your choices are:
    - Standard Calibration - Time scale calibration will not be performed. Time scale calibration factors from the previous time scale calibration will be used and the 10 MHz reference signal will not be required. The remaining calibration procedure will continue.
    - Standard Calibration and Time Scale Calibration - Performs the time scale calibration. This option requires you to connect a 10 MHz reference signal to channel 1 that meets the following specifications. Failure to use a reference signal that meets this specification will result in an inaccurate calibration.
      - Frequency: 10 MHz  $\pm$ 0.4 ppm = 10 MHz  $\pm$ 4 Hz
      - Amplitude: 0.2 V<sub>peak-to-peak</sub> to 5.0 V<sub>peak-to-peak</sub>
      - Wave shape: Sine or Square
    - Standard Calibration and Reset Time Scale Calibration - Factory time scale calibration factors will be used. The 10 MHz reference signal will not be required. The remaining calibration procedure will continue.
  - b Disconnect everything from all inputs and Aux Out.
  - c Connect the 50  $\Omega$  BNC cable from Aux Out to channel 1.
  - d Connect the 50  $\Omega$  BNC cable from Aux Out to each of the channel inputs as requested.
  - e Follow the directions for calibrating the digital channels (MSO models only).
  - f A Passed/Failed indication is displayed for each calibration section. If any section fails, check the calibration cables and run the oscilloscope Self Test in the Utilities menu. Page 87 also has a little section on what to do if a self cal fails in terms of replacing assemblies.
- 5 After the calibration procedure is completed, click Close.

Performance Test Interval 48  
Performing Self-Test and Calibration 49  
Vertical Performance Verification 50  
    Impedance Test 51  
    Offset Accuracy Test 52  
    DC Gain Accuracy Test 59  
    Analog Bandwidth - Maximum Frequency Check 65  
    Time Scale Accuracy (TSA) 72  
Performance Test Record 77

This section documents performance test procedures. Performance verification for the products covered by this manual consists of three main steps:

- Performing the internal product self-tests to ensure that the measurement system is functioning properly
- Calibrating the product
- Testing the product to ensure that it is performing to specification

### **Performance Test Interval**

The procedures in this section may be performed for incoming inspection and should be performed periodically to verify that the oscilloscope is operating within specification. The recommended test interval is once per year or after 2000 hours of operation. Performance should also be tested after repairs or major upgrades.

### **Performance Test Record**

A test record form is provided at the end of this section. This record lists performance tests, test limits and provides space to record test results.

### **Test Order**

The tests in this section may be performed in any order desired. However, it is recommended to conduct the tests in the order presented in this manual as this represents an incremental approach to performance verification. This may be useful if you are attempting to troubleshoot a suspected problem.

### **Test Equipment**

Lists of equipment needed to conduct each test are provided for each test procedure. The procedures are written to minimize the number and types of test equipment and accessories required. The test equipment in these lists are ones that are currently available for sale by Agilent at the time of writing this document. In some cases, the test procedures use features specific to the test equipment in the recommended equipment list. However, with some modification to the test procedures, equipment, cables and accessories that satisfy the critical specifications in these lists may be substituted for the recommended models with some modification to the test procedures.

Contact Agilent Technologies for more information about the Agilent products in these lists.

## Performing Self-Test and Calibration

- 1** Warm up the oscilloscope for at least 30 minutes
- 2** Perform self tests
  - a** Pull down the Utilities menu and select Self Test.
  - b** Select Scope Self Test from the Self Test list.
  - c** Click on Start Self Test to start the self test procedure.  
If any of the self-tests fail, ensure that the failure is diagnosed and repaired before calibrating and testing performance.
- 3** Perform calibration. See “To run the self calibration” on page 45.

---

## Vertical Performance Verification

This section contains the following vertical performance verification:

- Impedance Test
- Offset Accuracy Test
- DC Gain Accuracy Test
- Analog Bandwidth Test
- Time Scale Accuracy (TSA)

## To test input impedance

This test checks the input impedance of the vertical inputs. A four-wire measurement is used to accurately measure the 50  $\Omega$  and 1 M $\Omega$  inputs.

**Specification:** 1 M $\Omega$   $\pm$ 1% and 50  $\Omega$   $\pm$ 2.5%


### Equipment Required

Equipment	Critical Specifications	Recommended Model/Part
Digital Multimeter	Measure resistance (4-wire) at better than $\pm$ 0.1% accuracy	Agilent 34401A
Cables (2)	BNC	Agilent 10503A
Adapter	BNC Tee (m)(f)(f)	Agilent 1250-0781
Adapters (2)	BNC (f) to dual banana (m)	Agilent 1251-2277

### Procedure

- 1 Set up the multimeter to make a four-wire resistance measurement.
- 2 Assemble the test cables.
  - a Use the two BNC-to-banana adapters to connect one end of each BNC cable to the four-wire resistance connections on the multimeter.
  - b Connect the free ends of the cables to the BNC tee. See Figure 4-1.

Figure 4-1

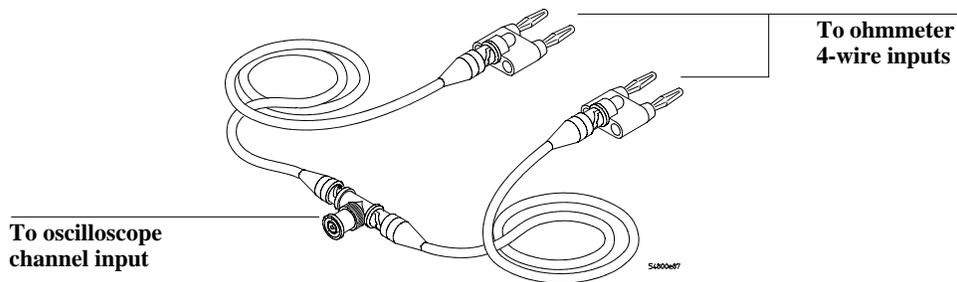

### Input Resistance Equipment Setup

- 3 Connect the male end of the BNC tee to the channel 1 input of the oscilloscope.
- 4 Press Default Setup to set the oscilloscope to default conditions. Then set the sensitivity for Channel 1 to 5 mV/div.
- 5 Open the Channel Setup dialog box for Channel 1 (Setup > Channel 1) to set the channel input resistance to 50  $\Omega$  and verify a resistance reading of 50  $\Omega$   $\pm$ 1.25  $\Omega$ .
- 6 Record the readings in the Performance Test Record at the end of this chapter (Impedance Test table).
- 7 Repeat steps 5 and 6 for the remaining 50  $\Omega$  vertical sensitivities in the Impedance Test table located at the end of this chapter.
- 8 Repeat steps 3 through 7 on the remaining channels of the oscilloscope.
- 9 Repeat steps 3 through 8 using an input resistance of 1 M $\Omega$  instead of 50  $\Omega$  and verify resistance readings of 1 M $\Omega$   $\pm$ 10 k $\Omega$ .

## Offset Accuracy Test

**CAUTION**

Ensure that the input voltage to the oscilloscope never exceeds  $\pm 5$  V.

Let the oscilloscope warm up before testing

The oscilloscope and other equipment under test must be warmed up (with the oscilloscope application running) for at least 30 minutes prior to the start of any performance test.

### Specifications

Offset Accuracy	$\pm(1.25\%$ of channel offset + 1% of full scale + 1 mV)
<p><b>50 Ohm Input Impedance:</b> Full scale is defined as 8 vertical divisions. Magnification is used below 10 mV/div. Below 10 mV full scale is defined as 80 mV. The major scale settings are 5 mV, 10 mV, 20 mV, 50 mV, 100 mV, 200 mV, 500 mV and 1 V.</p> <p><b>1 MOhm Input Impedance:</b> Full scale is defined as 8 vertical divisions. The major scale settings are 5 mV, 10 mV, 20 mV, 50 mV, 100 mV, 200 mV, 500 mV, 1 V, 2 V, and 5 V.</p>	

### Equipment Required

Description	Critical Specifications	Recommended Model/ Part Numbers
Digital Multimeter	DC voltage measurement accuracy better than $\pm 0.1\%$ of reading	Agilent 34401A or Agilent 3458A
Cable Assembly (2 required)	50 $\Omega$ characteristic impedance, BNC (m) connectors	Agilent 8120-1840
DC Power Supply	100V	Agilent 6614C
Adapter	BNC Tee (m)(f)(f)	Agilent 1250-0781
2 Adapters	2 BNC (f) to dual banana	Agilent 1251-2277


The offset accuracy specification consists of two terms: offset gain and zero error. The offset gain characteristic is  $\pm 1.25\%$  of channel offset and the zero error characteristic is  $\pm 1\%$  of full scale. The offset accuracy test procedure tests the zero error and offset accuracy.

### Procedure


**Zero Error Test**

- 1 Disconnect all cables from the scope channel inputs.
- 2 Press Default Setup, then configure the scope as follows:
  - a Pull down the Setup menu and select Acquisition.

- b When the Acquisition Setup window is displayed, enable averaging and set the # of averages to 256 as shown below.

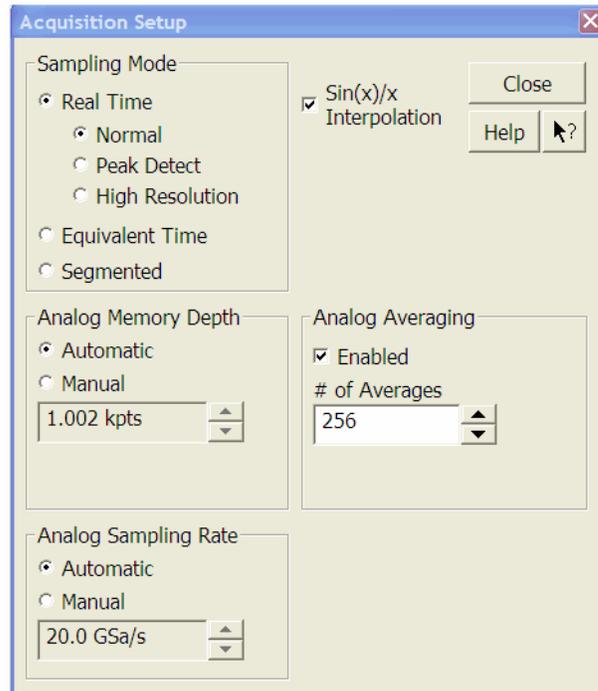


- 3 Configure the scope to measure Average voltage on channel 1 as follows:
  - a Change the vertical sensitivity of channel 1 to 5 mV/div.
  - b Click the V avg measurement on the left side of the screen.

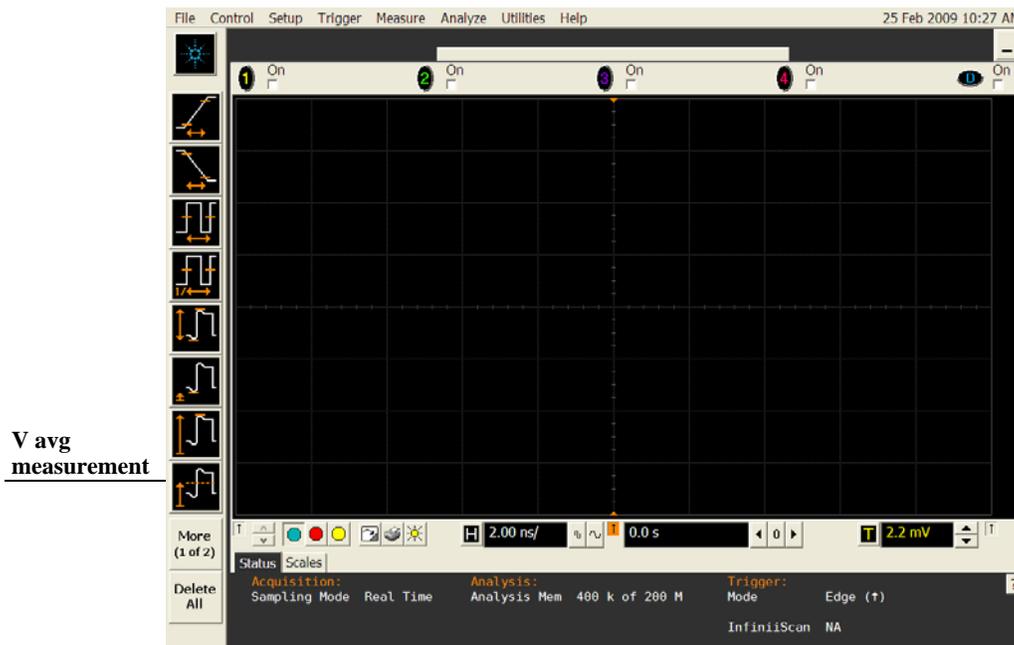

## Chapter 4: Testing Performance Offset Accuracy Test

- c When the Enter Measurement Info window is displayed, ensure that the V avg function is set up as follows and then click OK:  
 Source = Channel 1  
 Measurement Area = Entire Display

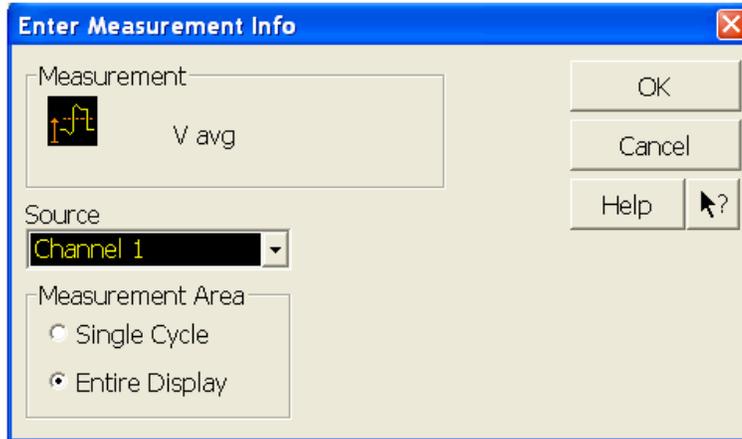

- 4 Press the Clear Display key on the scope and wait for the #Avs value (top left corner of screen) to return to 256. Record the scope's mean V avg reading in the  $V_{\text{zero-error}}$  column (Offset Accuracy Test tables - both the 50  $\Omega$  table and 1 M $\Omega$  table) of the Performance Test Record at the end of this chapter.

### Notes

- For all scope readings in this procedure, use the mean value in the Measurements display area at the bottom of the screen.
- If a question mark is displayed in front of any of the values at the bottom of the screen, press the Clear Display key on the scope, wait for the #Avs value to return to 256 and then record the scope reading. The question mark indicates that the oscilloscope could not make a reliable measurement. Therefore, any results that contain a question mark should be considered suspect and you should follow the directions above.

Vertical sensitivity control for step 5

Record the mean reading




- 5 Change the vertical sensitivity of channel 1 to 10 mV/div, press the Clear Display key, wait for the #Aves value (top left corner of screen) to return to 256 and then record the scope V avg reading in the  $V_{\text{zero-error}}$  column (Offset Accuracy Test tables - both the 50  $\Omega$  table and 1 M $\Omega$  table) in the Performance Test Record section at the end of this chapter.
- 6 Repeat step 5 for the remaining vertical sensitivities for channel 1 in the Offset Accuracy Test tables in the Performance Test Record section.
- 7 Press Default Setup, then turn off channel 1 and turn channel 2 display on.
- 8 Configure the scope to measure V avg on Channel 2 as follows:
  - a Pull down the Setup menu and select Acquisition. When the Acquisition Setup window is displayed, enable averaging and set the # of averages to 256.
  - b Change the vertical sensitivity of channel 2 to 5 mV/div.
  - c Click the V avg measurement icon on the left side of the screen.
  - d When the Enter Measurement Info window is displayed, ensure that the Vavg function is set up as follows and then click OK:  
Source = Channel 2  
Measurement area = Entire Display
- 9 Press the Clear Display key on the scope, wait for the #Aves value to return to 256 and then record the scope's mean V avg reading in the  $V_{\text{zero-error}}$  column (Offset Accuracy Test tables - both the 50  $\Omega$  table and 1 M $\Omega$  table) in the Performance Test Record section at the end of this chapter.
- 10 Repeat step 9 for the remaining vertical sensitivities for channel 2 in the Offset Accuracy Test table of the Performance Test Record.
- 11 Repeat steps 7 through 10 for channels 3 and 4.
- 12 Ensure that each  $V_{\text{zero-error}}$  is less than the corresponding  $V_{\text{zero-error}}$  Limit entry in the Offset Accuracy Test table.

**Offset Accuracy Test**

13 Make the connections to scope channel 1 as shown below.

**Connections**

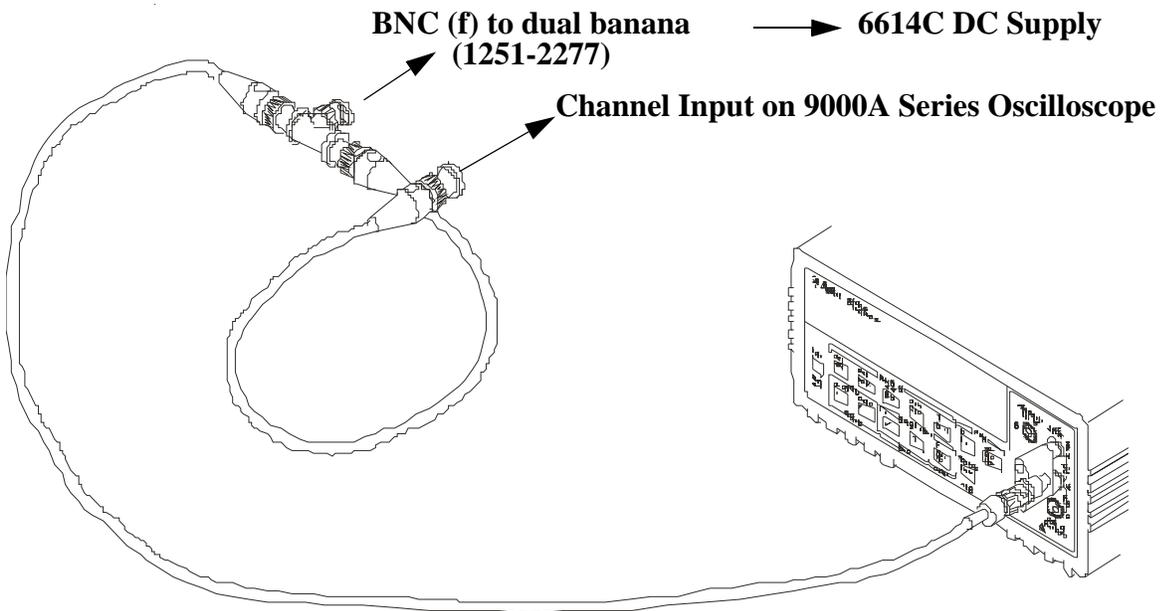

**Notes:**

- Where it is used, it is important to connect the BNC Tee adapter directly to the scope channel input to minimize ground potential differences and to ensure that the DMM measures the input voltage to the scope channel as accurately as possible. Differences in ground potential can be a significant source of measurement error, particularly at high scope sensitivities.
- It also helps to reduce ground potential differences if the scope and DMM are connected to the same AC supply circuit.
- A fairly large number of averages are used in the scope measurements of this section to reduce measurement noise and to reduce the measurement error due to resolution.

14 Set up the DMM to perform DC voltage measurements.

15 Configure the scope to measure V avg on Channel 1 as follows:

- Press Default Setup.
- Pull down the Setup menu and select Acquisition. When the Acquisition Setup window is displayed, enable averaging and set the # of averages to 256.
- Change the vertical sensitivity of channel 1 to 5 mV/div.
- Click the V avg measurement icon on the left side of the screen.
- When the Enter Measurement Info window is displayed, ensure that the V avg function is set up as follows and then click OK:  
Source = Channel 1  
Measurement area = Entire Display

- 16 Set the channel 1 offset value to 60.0 mV and the impedance to 50 Ω (or to an offset of 2 V and the impedance to 1 MΩ if this is your second pass through this test and you are using the 1 MΩ input impedance version) by:
  - a Pull down the Setup menu and select Channel 1 or click the Channel 1 setup icon.
  - b Click the Offset control arrows to change the offset value or click on the offset value and enter 60.0 mV in the dialog box (or 2 V for the 1 MΩ impedance version).
  - c Select the 50 Ω radio button in the Impedance section of the Channel 1 Setup dialog box.

Channel 1  
setup icon



- 17 Set the DC supply voltage (External Supply Setting) to +60.0 mV (or +2 V for the 1 MΩ version of this test).
- 18 Press the Clear Display key on the scope, wait for the #Aves value (top left corner of screen) to return to 256 and then record the DMM voltage reading as  $V_{DMM+}$  and the scope Vavg reading as  $V_{Scope+}$  in the Offset Accuracy Test section of the Performance Test Record (either the 50 Ω or the 1 MΩ version depending on which version of the test you are on). Fill in the  $V_{error+}$  column by using the following equation:

$$V_{error+} = V_{DMM+} - V_{scope+}$$

$V_{error+}$  must be within the limits specified by the corresponding Offset Accuracy Limit listed in the table.

## Chapter 4: Testing Performance

### Offset Accuracy Test

- 19 Change the channel 1 offset value to -60.0 mV (or -2 V for the 1 M $\Omega$  version of this test).
- 20 Set the DC supply voltage to -60.0 mV (or -2 V for the 1 M $\Omega$  version of this test).
- 21 Press the Clear Display key on the scope, wait for the #Avgs value (top left corner of screen) to return to 256 and then record the DMM voltage reading as  $V_{DMM}$  and the scope Vavg reading as  $V_{Scope}$  in the Offset Accuracy Test section of the Performance Test Record (either the 50  $\Omega$  or 1 M $\Omega$  version of the table depending on which version of the test you are using). Fill in the  $V_{error}$  column by using the following equation:

$$V_{error} = V_{DMM} - V_{scope}$$

$V_{error}$  must be within the limits specified by the corresponding Offset Accuracy Limit listed in the table.

- 22 Repeat steps 15 to 20 for the remaining channel 1 vertical sensitivities in the Offset Accuracy Test section of the Performance Test Record (either the 50  $\Omega$  or 1 M $\Omega$  version of the table depending on which version of the test you are performing). For each measurement, set both the DC supply voltage (External Supply Setting) and the Channel offset voltage to the positive External Supply Setting value and then to the negative External Supply Setting value in the "External Supply Setting" column of the Offset Accuracy Test section in the Performance Test Record for each of the vertical sensitivities.
- 23 Move the Tee connector to the next channel input and repeat steps 15 to 22 for the channels 2 to 4.
- 24 Repeat steps 12 through 22 for the 1 M $\Omega$  channel input impedance setting. This means you should follow the directions exactly as stated except in step 15(c) you will select the 1 M $\Omega$  radio button instead of the 50  $\Omega$  one and all values will be entered in the Offset Accuracy Test (1 M $\Omega$ ) section of the Performance Test Record rather than the Offset Accuracy Test (50  $\Omega$ ) section. You will also want to be sure to use the external supply settings and offset values from the 1 M $\Omega$  version of the Offset Accuracy Test table as they are different than the 50  $\Omega$  version.

---

## DC Gain Accuracy Test

---

### CAUTION

Ensure that the input voltage to the oscilloscope never exceeds  $\pm 5$  V.

**Let the oscilloscope warm up before testing**

**The oscilloscope under test and other test equipment must be warmed up (with the oscilloscope application running) for at least 30 minutes prior to the start of any performance test.**

### Specifications

DC Gain Accuracy	$\pm 2\%$ of full scale at full resolution channel scale ( $\pm 5$ °C from calibration temperature)
<p><b>50 <math>\Omega</math> Input Impedance:</b> Full scale is defined as 8 vertical divisions. Magnification is used below 10 mV/div. Below 10 mV full scale is defined as 80 mV. The major scale settings are 5 mV, 10 mV, 20 mV, 50 mV, 100 mV, 200 mV, 500 mV and 1 V.</p> <p><b>1 MOhm Input Impedance:</b> Full scale is defined as 8 vertical divisions. The major scale settings are 5 mV, 10 mV, 20 mV, 50 mV, 100 mV, 200 mV, 500 mV, 1 V, 2 V, and 5 V.</p>	

### Equipment Required

Description	Critical Specifications	Recommended Model/ Part Numbers
Digital Multimeter	DC voltage measurement accuracy better than $\pm 0.1\%$ of reading	Agilent 34401A or Agilent 3458A
Cable Assembly (2 required)	50 $\Omega$ characteristic impedance, BNC (m) connectors	Agilent 8120-1840
DC Power Supply	100 V	Agilent 6614C
Adapter	BNC Tee (m)(f)(f)	Agilent 1250-0781
2 Adapters	2 BNC (f) to dual banana	Agilent 1251-2277


## Chapter 4: Testing Performance

### DC Gain Accuracy Test

#### Procedure

- 1 Make the connections to scope channel 1 as shown below.

#### Connections

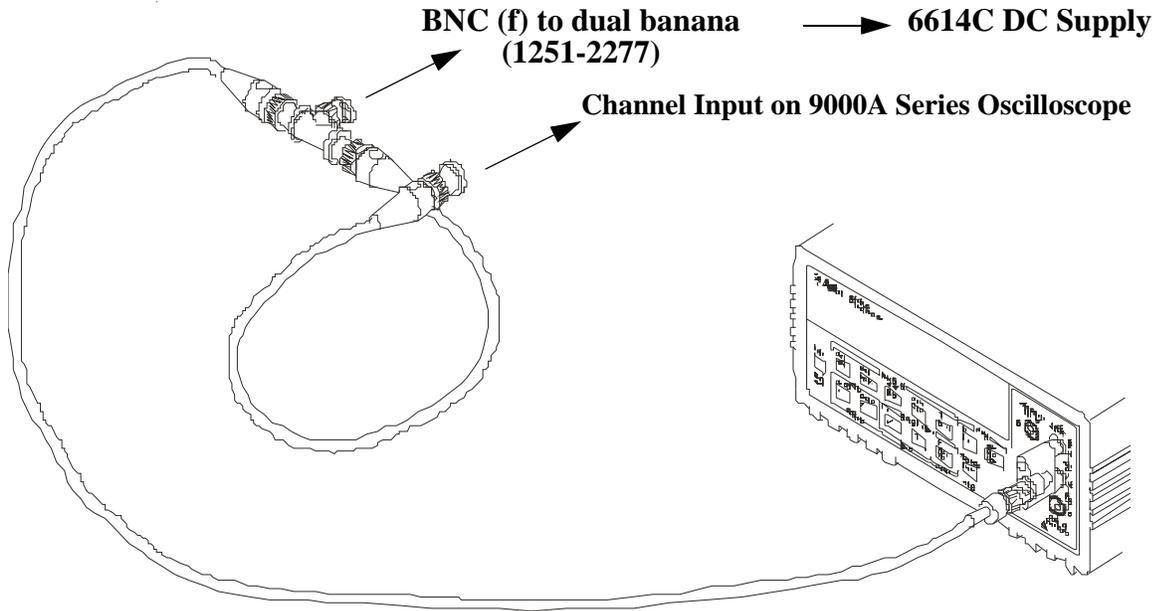


#### Notes:


- Where it is used, it is important to connect the BNC Tee adapter directly to the scope channel input to minimize ground potential differences and to ensure that the DMM measures the input voltage to the scope channel as accurately as possible. Differences in ground potential can be a significant source of measurement error, particularly at high scope sensitivities.
- It also helps to reduce ground potential differences if the scope and DMM are connected to the same AC supply circuit.
- A fairly large number of averages are used in the scope measurements of this section to reduce measurement noise and to reduce the measurement error due to resolution.

- 2 Press Default Setup, then configure the scope as follows:
  - a Pull down the Setup menu and select Acquisition.

- b When the Acquisition Setup window is displayed, enable averaging and set the # of averages to 256 as shown below.

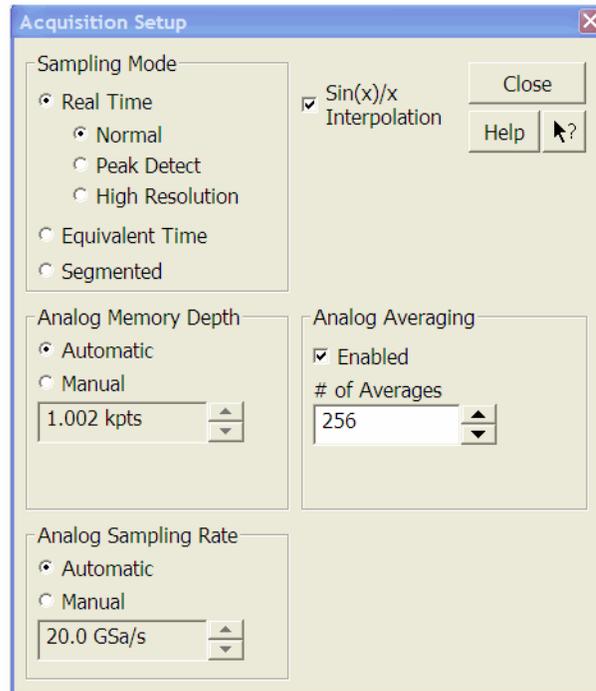

- 3 Set the DC Supply voltage (External Supply Setting) to +15 mV as follows:  
 4 Set the channel 1 vertical sensitivity value to 5 mV/div and set the input impedance to 50  $\Omega$ .  
 a Pull down the Setup menu and select Channel 1 or click the Channel 1 setup icon.  
 b Change the vertical sensitivity of channel 1 to 5 mV/div.  
 c Select the 50  $\Omega$  radio button from the Impedance section of this dialog box.  
 d Select the Vavg measurement as shown below.

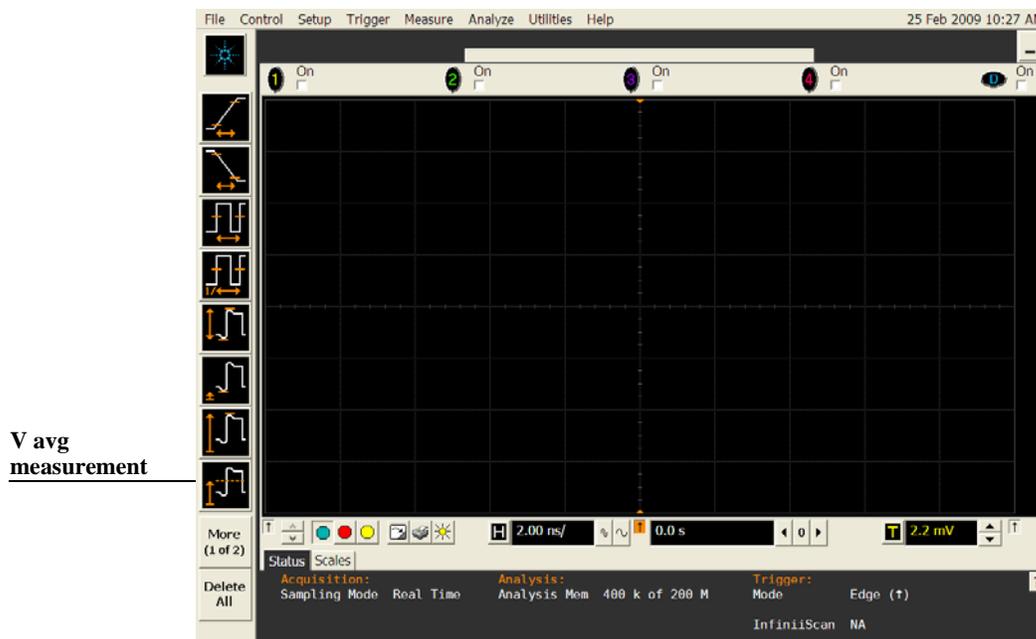

- e When the Enter Measurement Info window is displayed, ensure that the V avg function is set


## Chapter 4: Testing Performance

### DC Gain Accuracy Test

up as follows and then click OK:

Source = Channel 1

Measurement Area = Entire Display

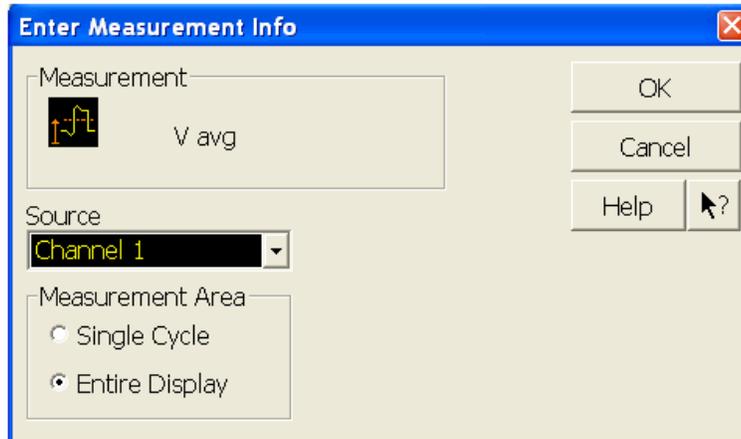

- 5 Press the Clear Display key on the scope, wait for the #Avs value (top left corner of screen) to return to 256 and then record the scope's mean V avg reading in the Vscope+ column in the Offset Accuracy Test (50  $\Omega$ ) section of the Performance Test Record.

#### Notes

- For all scope readings in this procedure, use the mean value in the Measurements display area at the bottom of the screen.
- If a question mark is displayed in front of any of the values at the bottom of the screen, press the Clear Display key on the scope, wait for the #Avs value to return to 256 and then record the scope reading. The question mark indicates that the oscilloscope could not make a reliable measurement. Therefore, any results that contain a question mark should be considered suspect and you should follow the directions above.



Record the mean reading

- 6 Change the DC Supply voltage to -15 mV.
- 7 Press the Clear Display key on the scope, wait for the #Avs value to return to 256 and then

record the DMM voltage reading ( $V_{dmm-}$  column) and the scope V avg reading ( $V_{scope-}$  column) in the DC Gain Test ( $50\ \Omega$ ) section of the Performance Test Record.

- 8 Repeat step 7 for the remaining vertical sensitivities for channel 1 shown in the DC Gain Test ( $50\ \Omega$ ) section of the Performance Test Record.
- 9 Press Default Setup, then turn off channel 1 and turn channel 2 display on.
- 10 Set the DC Supply voltage (External Supply Setting) to +15 mV.
- 11 Configure the scope to measure V avg on Channel 2.
  - a Pull down the Setup menu and select Acquisition. When the Acquisition Setup window is displayed, enable averaging and set the # of averages to 256.
  - b Change the vertical sensitivity of channel 2 to 5 mV/div.
  - c Click the V avg measurement icon on the left side of the screen.
  - d When the Enter Measurement Info window is displayed, ensure that the Vavg function is set up as follows and then click OK:  
Source = Channel 2  
Measurement area = Entire Display
- 12 Press the Clear Display key on the scope, wait for the #Aves value to return to 256 and then record the DMM voltage reading ( $V_{dmm+}$ ) and the scope V avg reading ( $V_{scope+}$ ) in the DC Gain Test ( $50\ \Omega$ ) section of the Performance Test Record.
- 13 Repeat step 12 for the remaining vertical sensitivities for channel 2 in the DC Gain Test ( $50\ \Omega$ ) section of the Performance Test Record.
- 14 Repeat steps 9 through 13 for channels 3 and 4.
- 15 Repeat steps 1 through 14 using  $1\ M\Omega$  for the scope input impedance rather than  $50\ \Omega$ . The steps should be followed exactly except in step 4(c), you should select the  $1\ M\Omega$  radio button from the Impedance section of the Channel 1 Setup dialog box rather than  $50\ \Omega$  and all values should be entered in the DC Gain Test ( $1\ M\Omega$ ) section rather than the DC Gain Test ( $50\ \Omega$ ) section.

**Chapter 4: Testing Performance**  
**DC Gain Accuracy Test**

- 16** Calculate the offset gains for the 50  $\Omega$  test and the 1 M $\Omega$  test using the following expression and record this value in the DC Gain Test section of the Performance Test Record.

For the 50  $\Omega$  input impedance version of this test at the 5 mV/div sensitivity, use the following equation:

$$DCGainError = \frac{\Delta V_{out}}{\Delta V_{in}} = \left( \frac{V_{scope+} - V_{scope-}}{V_{DMM+} - V_{DMM-}} - 1 \right) 0.375$$

All vertical sensitivities for the 1 M $\Omega$  test (including the 5 mV/div setting) and all 50  $\Omega$  test vertical sensitivities except for the 5 mV/div setting should then use the following equation:

$$DCGainError = \frac{\Delta V_{out}}{\Delta V_{in}} = \left( \frac{V_{scope+} - V_{scope-}}{V_{DMM+} - V_{DMM-}} - 1 \right) 0.75$$

## Analog Bandwidth - Maximum Frequency Check

### CAUTION

Ensure that the input voltage to the oscilloscope never exceeds  $\pm 5$  V.

Let the oscilloscope warm up before testing

The oscilloscope under test and other test equipment must be warmed up (with the oscilloscope application running) for at least 30 minutes prior to the start of any performance test.

### Specification

Analog Bandwidth (-3 dB)	
DSO/MSO9404A	4 GHz
DSO/MSO9254A	2.5 GHz
DSO/MSO9104A	1 GHz
DSO/MSO9064A	600 MHz


### Equipment Required

Description	Critical Specifications	Recommended Model/ Part Numbers
Microwave CW Generator	Maximum Frequency $\geq 14$ GHz Power range: -20 dBm to +16 dBm into $50\Omega$ Output resistance = $50\Omega$	Agilent E8257D with Opt 520
Power Splitter	2 Resistor Power Splitter (f) Max Frequency $\geq 18$ GHz	Agilent 11667B
Power Meter	Agilent E-series with power sensor compatibility	Agilent E4418B or E4419B
Power Sensor	Maximum Frequency $\geq 14$ GHz Power range: -24 dBm to +16 dBm	Agilent E4413A
Microwave Cable	$50\Omega$ Characteristic Impedance 3.5 mm (m) to 3.5 mm (m) SMA connectors Max Frequency $\geq 18$ GHz	Agilent 8120-4948
N-Type to SMA Adapter	N-type to 3.5 mm (m) SMA	Agilent 1250-1750
SMA to BNC Adapter	SMA (m) to Precision BNC (No Substitute)	Agilent 1250-1200

## Chapter 4: Testing Performance

### Analog Bandwidth - Maximum Frequency Check

#### Connections

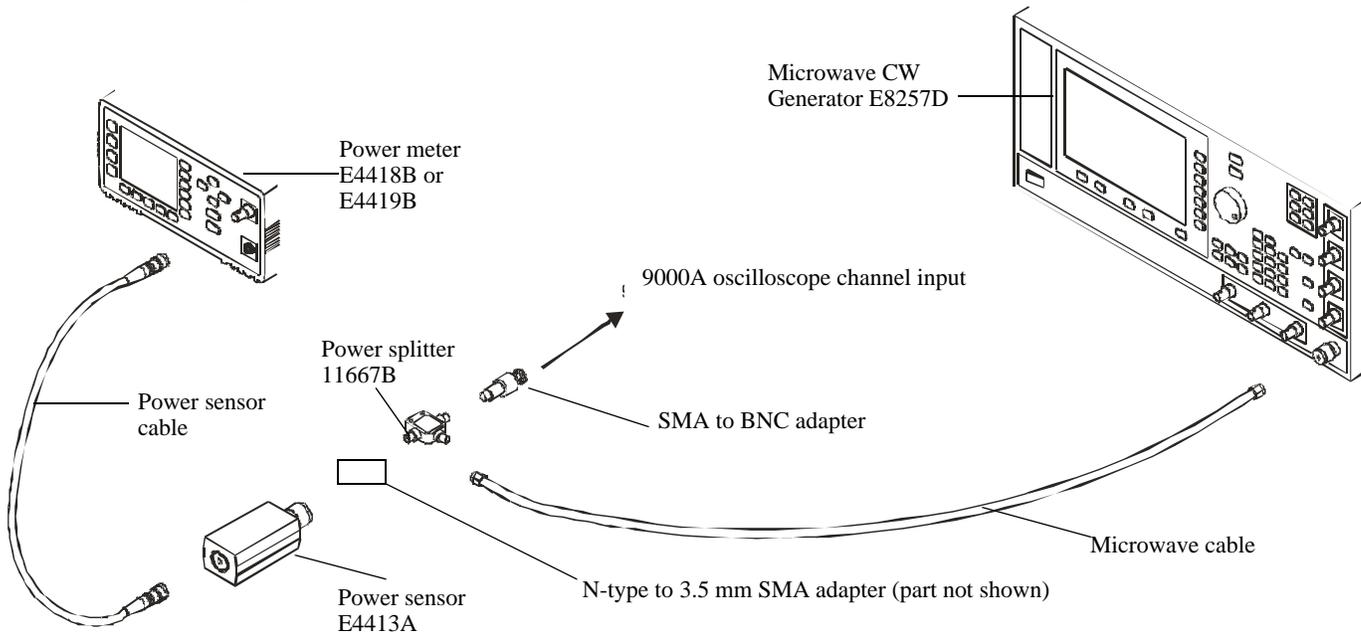


#### Notes

- Connect output 1 of the 11667B splitter to the scope Channel n input directly using the 1250-1200 adapter, without any additional cabling or adapters.
- Connect the power sensor directly to output 2 of the power splitter without any additional cabling or adapters.
- Minimize the use of other adapters.
- Ensure that SMA and 3.5 mm connectors are tightened properly:
  - 8 in-lbs (90 N-cm) for 3.5 mm
  - 5 in-lbs (56 N-cm) for SMA

#### Procedure

- 1 Preset the power meter.
- 2 Ensure that the power sensor is disconnected from any source and zero the meter.
- 3 Connect the power sensor to the power meter's Power Ref connector and calibrate the meter.
- 4 Make the connections to scope channel 1 as shown in the connection diagram above.
- 5 Set up the Power Meter to display measurements in units of Watts.
- 6 Press Default Setup, then configure the scope as follows:
  - a Ensure Channel 1 is displayed and all other channels are turned off.
  - b Set the vertical sensitivity of channel 1 to 5 mV/div.
  - c Set the input impedance to 50 Ohms (Setup > Channel dialog box).

- d Set the horizontal scale to 16 ns/div (to display 8 cycles of a 50 MHz waveform).

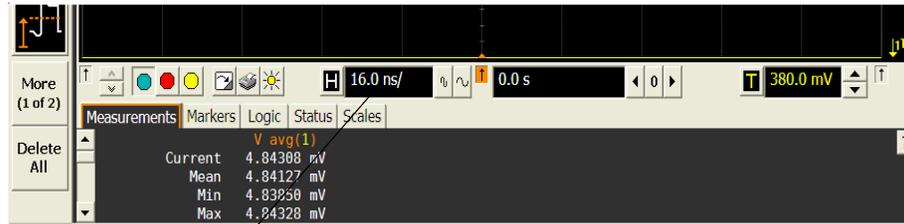

Click here and enter 16E-9

- e Pull down the Setup menu, select Acquisition and then set up the acquisition parameters as follows:


Analog Memory Depth = Automatic

Analog Sampling rate = Maximum (check the Manual radio button, then click on the field displaying the value, and then click on the Max button in the dialog box that appears)

Sin(x)/x Interpolation filter enabled


Analog Averaging = Disabled

- f Pull down the Measure menu, select Voltage and then select V rms.

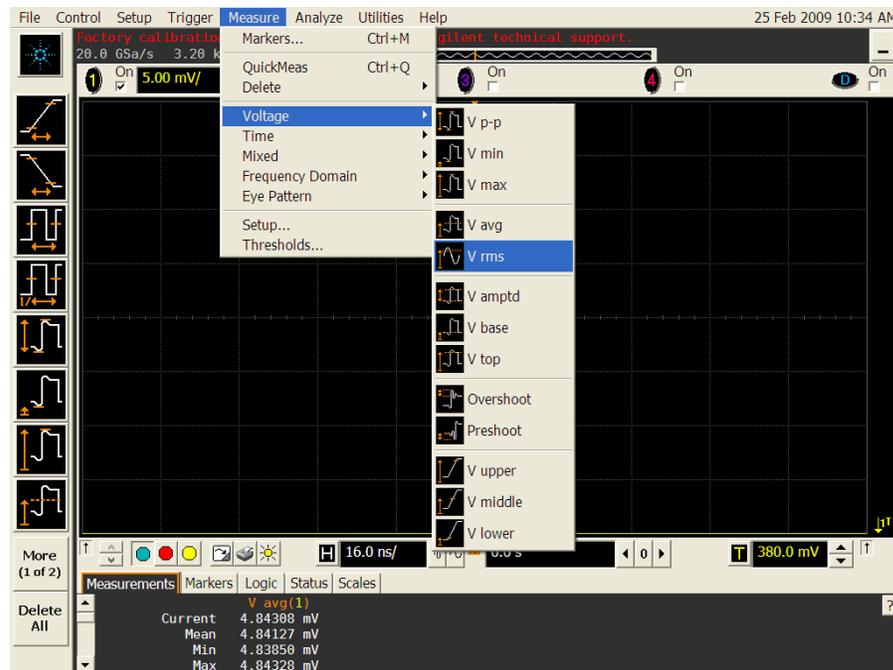

**Chapter 4: Testing Performance**  
**Analog Bandwidth - Maximum Frequency Check**

- g When the RMS voltage measurement setup window is displayed, configure this measurement as follows:  
 Source = Channel 1  
 Measurement Area = Entire Display  
 RMS Type = AC

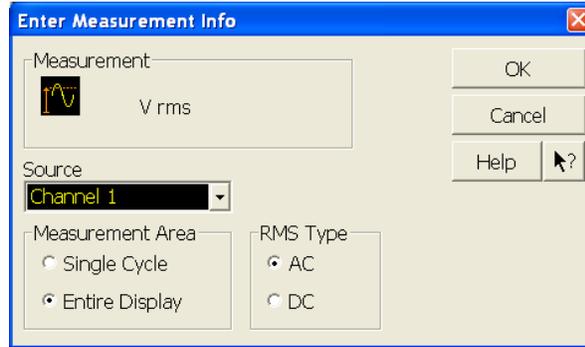

- 7 Set the generator to apply a 50 MHz sine wave with a peak-to-peak amplitude of about 4 divisions.
- Use the following table to determine the approximate required signal amplitude.  
 The amplitude values in the table below are not absolutely required. If your generator is unable to produce the recommended amplitude, then set the generator to the highest value that does not produce a vertically clipped signal on the scope.

**Table 3-1. Nominal Generator Amplitude Settings**

Scope Vertical Sensitivity	Generator Signal Amplitude (Vp-p)	Generator Signal Amplitude (dBm)
5 mV/div	0.02	-30
10 mV/div	0.04	-24
20 mV/div	0.08	-18
50 mV/div	0.20	-10
100 mV/div	0.40	-4
200 mV/div	0.80	+2
500 mV/div	2.0	+10
1 V/div	4.0	+16

- 8 Measure the input power to the scope channel and convert this measurement to Volts RMS using the expression:

$$V_{in} = \sqrt{P_{meas} \times 50\Omega}$$

For example, if the power meter reading is 4.0  $\mu$ W, then  $V_{in} = (4.0 \times 10^{-6} \times 50\Omega)^{1/2} = 14.1$  mVrms. Record the RMS voltage in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record (in the  $V_{in}$  @ 50 MHz column).

- Press the Clear Display key on the scope and record the scope  $V_{rms}$  reading in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record ( $V_{out}$  @ 50 MHz). For all scope readings in this procedure, use the mean value in the Measurements display area at the bottom of the screen.

**Notes**

- For all scope readings in this procedure, use the mean value in the Measurements display area at the bottom of the screen.
- If a question mark is displayed in front of any of the values at the bottom of the screen, press the Clear Display key on the scope, wait for the #Avgs value to return to 16 and then record the scope reading.



Record the mean reading

- Calculate the reference gain as follows:

$$Gain_{50\text{ MHz}} = \frac{V_{out @ 50\text{ MHz}}}{V_{in @ 50\text{ MHz}}}$$


Record this value in the Calculated Gain @50 MHz column in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record.

**Chapter 4: Testing Performance**  
**Analog Bandwidth - Maximum Frequency Check**

- 11 Change the generator frequency to the maximum value for the model being tested as shown in the table below. It is not necessary to adjust the signal amplitude at this point in the procedure.

Setting	Model			
	DSO/MSO9404 A	DSO/MSO9254 A	DSO/MSO9104A	DSO/MSO9064A
Maximum Frequency	4 GHz	2.5 GHz	1 GHz	600 MHz
Scope Time Base Setting	100 ps/div	100 ps/div	100 ps/div	100 ps/div

- 12 Change the scope time base to the value for the model under test in the table above.

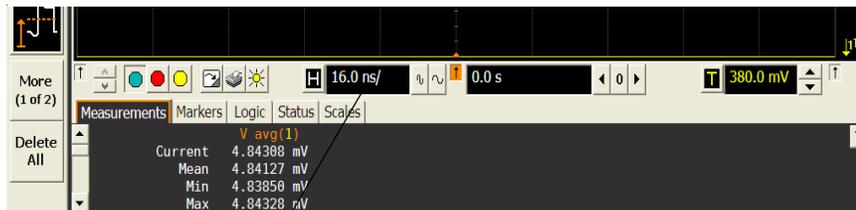

Click here and enter time base value from

- 13 Measure the input power to the scope channel at the maximum frequency and convert this measurement to Volts RMS using the expression:

$$V_{in} = \sqrt{P_{meas} \times 50\Omega}$$

For example, if the power meter reading is 4.0  $\mu$ W, then  $V_{in} = (4.0 \times 10^{-6} \times 50\Omega)^{1/2} = 14.1$  mVrms.

Record the RMS voltage in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record ( $V_{in}$  @ Max Freq).

- 14 Press the Clear Display key on the scope and record the scope V rms reading in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record ( $V_{out}$  @ Max Freq).
- 15 Calculate the gain at the maximum frequency using the expression:


$$Gain_{Max\ Freq} = 20 \log_{10} \left[ \frac{(V_{out\ Max\ Freq}) / (V_{in\ Max\ Freq})}{Gain_{50\ MHz}} \right]$$

For example, if ( $V_{out}$  @ Max Frequency) = 13.825 mV, ( $V_{in}$  @ Max Frequency) = 13.461 mV and Gain @ 50MHz = 1.0023, then:

$$Gain_{Max\ Freq} = 20 \log_{10} \left[ \frac{13.825\ mV / 13.461\ mV}{1.0023} \right] = 0.212\ dB$$

Record this value in the Calculated Gain @Max Freq column in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record. To pass this test, this value must be greater than -3.0 dB.

- 16 Change the scope set up as follows:
  - a Change the channel vertical sensitivity to 10 mV/div.
  - b Reset the horizontal scale to 16 ns/div (to display 8 cycles of a 50 MHz waveform).
- 17 Change the generator output as follows:
  - a Reset the generator frequency to 50 MHz.
  - b Change the amplitude to the value suggested for this sensitivity in Table 3-1.
- 18 Repeat steps 8, 9, and 10 to measure the reference gain at 50 MHz for this sensitivity.
- 19 Repeat steps 11, 12, 13, and 14 to measure the gain at maximum frequency for this sensitivity.
- 20 Repeat steps 15 to 19 to complete measuring gains for remaining sensitivities for channel 1 in the Analog Bandwidth - Maximum Frequency Check section of the Performance Test Record.
- 21 Move the splitter to channel 2 and change the scope configuration as follows:
  - Ensure Channel 2 is displayed and all other channels are turned off.
  - Set the vertical sensitivity of channel 2 to 5 mV/div.
  - Set the horizontal scale to 16 ns/div (to display 8 cycles of a 50 MHz waveform).
  - Right click on the V rms measurement at the bottom of the screen. When the RMS voltage measurement setup window is displayed, change the source from Channel 1 to Channel 2.

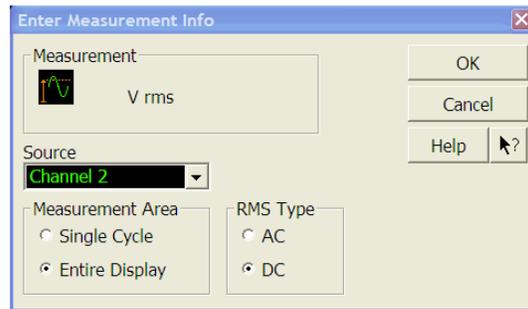

- 22 Repeat steps 7 to 20 to complete measuring gains for channel 2.
- 23 Move the splitter to channel 3 and change the scope configuration as follows:
  - a Ensure Channel 3 is displayed and all other channels are turned off.
  - b Set the vertical sensitivity of channel 3 to 5 mV/div.
  - c Set the horizontal scale to 16 ns/div (to display 8 cycles of a 50 MHz waveform).
  - d Click on the V rms measurement at the bottom of the screen and select Customize. When the V rms setup window is displayed, change the source from Channel 2 to Channel 3.
- 24 Repeat steps 7 to 20 to complete measuring gains for channel 3.
- 25 Move the splitter to channel 4 and change the scope configuration as follows:
  - a Ensure Channel 4 is displayed and all other channels are turned off.
  - b Set the vertical sensitivity of channel 4 to 5 mV/div.
  - c Set the horizontal scale to 16 ns/div (to display 8 cycles of a 50 MHz waveform).
  - d Click on the V rms measurement at the bottom of the screen. When the V rms setup window is displayed, change the source from Channel 3 to Channel 4.
- 26 Repeat steps 7 to 20 to complete measuring gains for channel 4.

## Time Scale Accuracy (TSA)

This procedure verifies the maximum TSA specification for the oscilloscope.

### Description

TSA refers to the absolute accuracy of oscilloscope's time scale. Because TSA depends directly on frequency of a crystal oscillator, it is comprised of two components: an initial accuracy component and an aging component. The initial accuracy component applies to the oscilloscope's accuracy immediately after a calibration, whether performed at the factory, by a customer, or by an Agilent service center. The aging component scales linearly from the time since the last factory calibration and adds to the initial accuracy component.

### Specifications

TSA is published as a warranted specification, expressed by the following formula. The aging component is specified by the crystal manufacturer while the initial accuracy component represents our best estimate of the final value, which will be determined from subsequent characterization of a large sample of production units.

$$\text{TSA} = \pm(0.4 + 0.5(\text{Years Since Factory Calibration})) \text{ ppm peak}$$

To see the number of years since factory calibration, open the oscilloscope application and navigate to Utilities -> Calibration in the top menu bar. Inside this dialog box will be a line specifying the Time Scale Cal Date. This is the date of the last factory calibration.


Note that TSA is specified with respect to an absolute standard and therefore its measurement results must be compared against test limits that account for the uncertainties in its measurement results. The total measurement uncertainty of the following test procedure is 0.1 ppm. It is the sum of 0.01 ppm for the test signal's absolute frequency accuracy, 0.04 ppm for the voltage noise and phase noise of the oscilloscope's digitized waveforms, and 0.05 ppm for the residual settling time of the crystal oscillator after the specified 30 minute warm-up time. Therefore, all measurement results need to be better than the specified values by a test margin of at least 0.1 ppm in order to guarantee compliance to the specification.

### Equipment Required

Equipment	Critical Specifications	Recommended Model/Part
Synthesized sine wave source	Output Frequency: $\geq 10$ MHz Output Amplitude: 0 dBm Frequency Resolution: 0.1 Hz	Agilent E8257D PSG
10 MHz frequency reference	Output Frequency: 10 MHz Output Amplitude: 0 dBm Absolute Freq. Error: $< \pm 0.01$ ppm	Symmetricom 58503B
SMA cable	50 ohm characteristic impedance SMA (m) connectors Max Frequency: $\geq 50$ MHz	Agilent 8120-4948
RF cable	50 ohm characteristic impedance BNC (m) connectors Max Frequency: $\geq 50$ MHz	Agilent 8120-1840
Adapters, assorted	3.5 mm (f) to Precision BNC (m)	Agilent 54855-67604

### Connections

Connect the equipment as shown in the following figure.

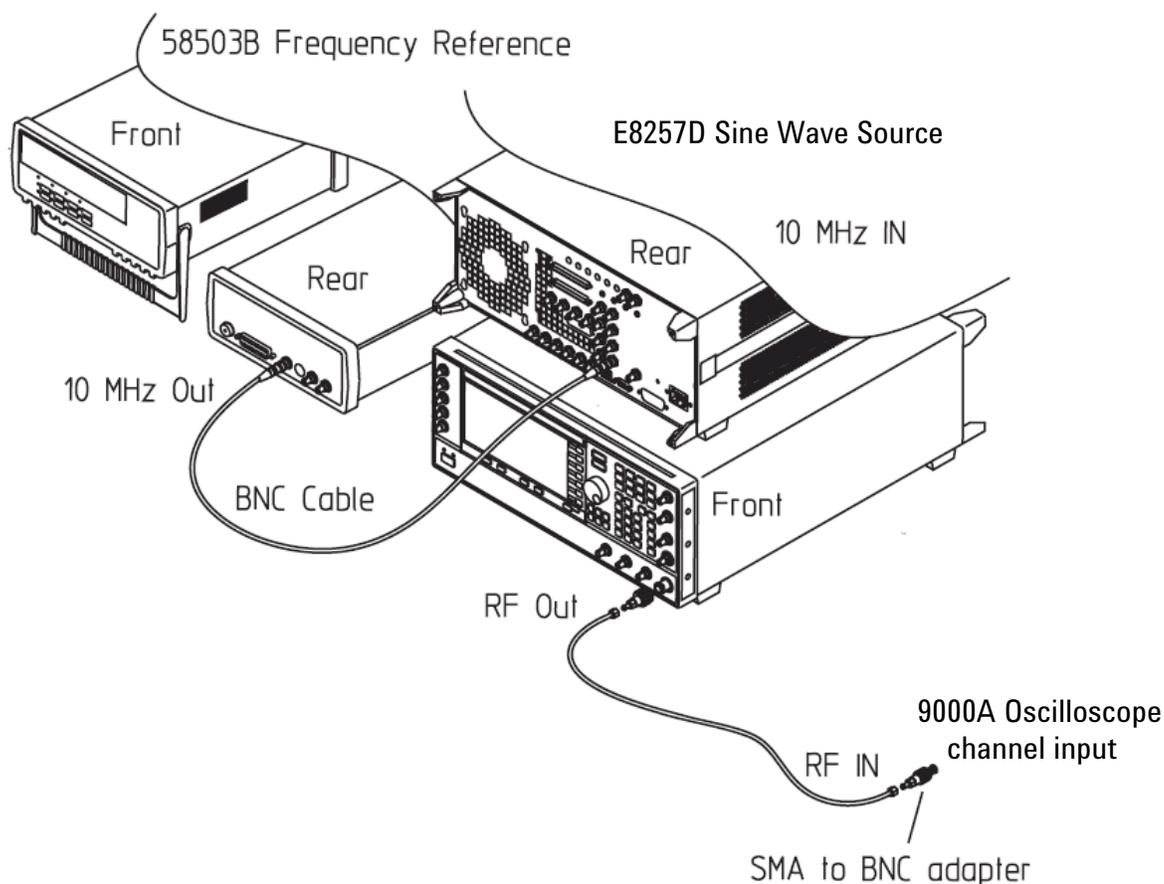

### Procedure

- 1 Configure the sine wave source to output a 0 dBm (600 mVpp) sine wave into 50 ohms with a frequency of 10.00002000 MHz.
- 2 Adjust source amplitude such that displayed sine wave is 600 mVpp.
- 3 Press the **Default Setup** key on the oscilloscope.
- 4 Set channel 1's vertical scale to 100 mV/div.
- 5 Set the oscilloscope sample rate to 100 kSa/s. (The resulting measurement will be aliased.)
- 6 Set the scope's horizontal scale to 20 ms/div.
- 7 Set the measurement thresholds for all waveforms to a fixed voltage level of 0 V and  $\pm 20$  mV hysteresis.
- 8 Enable a frequency measurement on channel 1.
- 9 On the oscilloscope, press **Stop**.
- 10 Press **Clear Display**.
- 11 Press **Run**, wait until 10 acquisitions have accumulated, and then press **Stop**.
- 12 Convert the average frequency value to time scale error by subtracting 20 Hz and dividing by 10 Hz/ppm.
- 13 Record the time scale error value as well as the time since the previous calibration (in years).
- 14 Calculate the specification for Time Scale Accuracy based on the oscilloscope's age using the following formula:  

$$TSA = \pm(0.4 + 0.5(\text{Years Since Factory Calibration})) \text{ ppm peak}$$

**Chapter 4: Testing Performance**  
**Time Scale Accuracy (TSA)**

- 15** Compare the measured time scale error to the TSA specification. Note that the measurement result should exceed the specified accuracy by at least 0.1 ppm in order to guarantee compliance to the specification.
- 16** Record the results in the Performance Test Record.

# Performance Test Record

<b>Agilent Technologies</b>		<b>Agilent 9000 Series Oscilloscopes</b>	
Model Number _____		Tested by _____	
Serial Number _____		Work Order No. _____	
Recommended Test Interval - 1 Year/2000 hours		Date _____	
Recommended next test date _____		Ambient temperature _____	

**Impedance Test**

Input Resistance	Vertical Sensitivity	Channel 1	Channel 2	Channel 3	Channel 4	Limits
50 Ω	0.005 V/div					48.75 Ω to 51.25 Ω
50 Ω	0.01V/div					48.75 Ω to 51.25 Ω
50 Ω	0.02 V/div					48.75 Ω to 51.25 Ω
50 Ω	0.05 V/div					48.75 Ω to 51.25 Ω
50 Ω	0.1 V/div					48.75 Ω to 51.25 Ω
50 Ω	0.2 V/div					48.75 Ω to 51.25 Ω
50 Ω	0.5 V/div					48.75 Ω to 51.25 Ω
50 Ω	1 V/div					48.75 Ω to 51.25 Ω
1 MΩ	0.005 V/div					990 kΩ to 1.010 MΩ
1 MΩ	0.01V/div					990 kΩ to 1.010 MΩ
1 MΩ	0.02 V/div					990 kΩ to 1.010 MΩ
1 MΩ	0.05 V/div					990 kΩ to 1.010 MΩ
1 MΩ	0.1 V/div					990 kΩ to 1.010 MΩ
1 MΩ	0.2 V/div					990 kΩ to 1.010 MΩ
1 MΩ	0.5 V/div					990 kΩ to 1.010 MΩ
1 MΩ	1 V/div					990 kΩ to 1.010 MΩ
1 MΩ	2 V/div					990 kΩ to 1.010 MΩ
1 MΩ	5 V/div					990 kΩ to 1.010 MΩ

**Chapter 4: Testing Performance  
Performance Test Record**

**Offset Accuracy Test (50 Ω)**

Vertical Sensitivity	External Supply Setting	V <sub>DMM+</sub>	V <sub>scope+</sub>	V <sub>error+</sub>	V <sub>DMM-</sub>	V <sub>Scope-</sub>	V <sub>error-</sub>	Offset Accuracy Limit (±)	V <sub>zero-error</sub>	V <sub>zero-error</sub> Limit (±)
<b>Channel 1</b>										
0.005 V/div	±60 mV							2.55 mV		1.8 mV
0.01V/div	±120 mV							3.30 mV		1.8 mV
0.02 V/div	±240 mV							5.60 mV		2.6 mV
0.05 V/div	±600 mV							12.50 mV		5.0 mV
0.1 V/div	±1.2 V							24.00 mV		9.0 mV
0.2 V/div	±2.4 V							47.00 mV		17.0 mV
0.5 V/div	±4.0 V							91.00 mV		41.0 mV
1 V/div	±4.0 V							131.00 mV		81.0 mV
<b>Channel 2</b>										
0.005 V/div	±60 mV							2.55 mV		1.8 mV
0.01V/div	±120 mV							3.30 mV		1.8 mV
0.02 V/div	±240 mV							5.60 mV		2.6 mV
0.05 V/div	±600 mV							12.50 mV		5.0 mV
0.1 V/div	±1.2 V							24.00 mV		9.0 mV
0.2 V/div	±2.4 V							47.00 mV		17.0 mV
0.5 V/div	±4.0 V							91.00 mV		41.0 mV
1 V/div	±4.0 V							131.00 mV		81.0 mV
<b>Channel 3</b>										
0.005 V/div	±60 mV							2.55 mV		1.8 mV
0.01V/div	±120 mV							3.30 mV		1.8 mV
0.02 V/div	±240 mV							5.60 mV		2.6 mV
0.05 V/div	±600 mV							12.50 mV		5.0 mV
0.1 V/div	±1.2 V							24.00 mV		9.0 mV
0.2 V/div	±2.4 V							47.00 mV		17.0 mV
0.5 V/div	±4.0 V							91.00 mV		41.0 mV
1 V/div	±4.0 V							131.00 mV		81.0 mV
<b>Channel 4</b>										
0.005 V/div	±60 mV							2.55 mV		1.8 mV
0.01V/div	±120 mV							3.30 mV		1.8 mV
0.02 V/div	±240 mV							5.60 mV		2.6 mV
0.05 V/div	±600 mV							12.50 mV		5.0 mV
0.1 V/div	±1.2 V							24.00 mV		9.0 mV
0.2 V/div	±2.4 V							47.00 mV		17.0 mV
0.5 V/div	±4.0 V							91.00 mV		41.0 mV
1 V/div	±4.0 V							131.00 mV		81.0 mV

Offset Accuracy Test (1 M $\Omega$ )

Vertical Sensitivity	External Supply Setting	V <sub>DMM+</sub>	V <sub>scope+</sub>	V <sub>error+</sub>	V <sub>DMM-</sub>	V <sub>Scope-</sub>	V <sub>erro r-</sub>	Offset Accuracy Limit ( $\pm$ )	V <sub>zero-error</sub>	V <sub>zero-error</sub> Limit ( $\pm$ )
<b>Channel 1</b>										
0.005 V/div	$\pm 2$ V							26.4 mV		1.4 mV
0.01V/div	$\pm 5$ V							64.3 mV		1.8 mV
0.02 V/div	$\pm 10$ V							127.6 mV		2.6 mV
0.05 V/div	$\pm 10$ V							130.0 mV		5.0 mV
0.1 V/div	$\pm 20$ V							259.0 mV		9.0 mV
0.2 V/div	$\pm 20$ V							267.0 mV		17.0 mV
0.5 V/div	$\pm 20$ V							291.0 mV		41.0 mV
1 V/div	$\pm 100$ V							1.33 V		81.0 mV
2 V/div	$\pm 100$ V							1.41 V		161 mV
5 V/div	$\pm 100$ V							1.65 V		401 mV
<b>Channel 2</b>										
0.005 V/div	$\pm 2$ V							26.4 mV		1.4 mV
0.01V/div	$\pm 5$ V							64.3 mV		1.8 mV
0.02 V/div	$\pm 10$ V							127.6 mV		2.6 mV
0.05 V/div	$\pm 10$ V							130.0 mV		5.0 mV
0.1 V/div	$\pm 20$ V							259.0 mV		9.0 mV
0.2 V/div	$\pm 20$ V							267.0 mV		17.0 mV
0.5 V/div	$\pm 20$ V							291.0 mV		41.0 mV
1 V/div	$\pm 100$ V							1.33 V		81.0 mV
2 V/div	$\pm 100$ V							1.41 V		161 mV
5 V/div	$\pm 100$ V							1.65 V		401 mV
<b>Channel 3</b>										
0.005 V/div	$\pm 2$ V							26.4 mV		1.4 mV
0.01V/div	$\pm 5$ V							64.3 mV		1.8 mV
0.02 V/div	$\pm 10$ V							127.6 mV		2.6 mV
0.05 V/div	$\pm 10$ V							130.0 mV		5.0 mV
0.1 V/div	$\pm 20$ V							259.0 mV		9.0 mV
0.2 V/div	$\pm 20$ V							267.0 mV		17.0 mV
0.5 V/div	$\pm 20$ V							291.0 mV		41.0 mV
1 V/div	$\pm 100$ V							1.33 V		81.0 mV
2 V/div	$\pm 100$ V							1.41 V		161 mV
5 V/div	$\pm 100$ V							1.65 V		401 mV
<b>Channel 4</b>										
0.005 V/div	$\pm 2$ V							26.4 mV		1.4 mV
0.01V/div	$\pm 5$ V							64.3 mV		1.8 mV
0.02 V/div	$\pm 10$ V							127.6 mV		2.6 mV
0.05 V/div	$\pm 10$ V							130.0 mV		5.0 mV
0.1 V/div	$\pm 20$ V							259.0 mV		9.0 mV
0.2 V/div	$\pm 20$ V							267.0 mV		17.0 mV
0.5 V/div	$\pm 20$ V							291.0 mV		41.0 mV
1 V/div	$\pm 100$ V							1.33 V		81.0 mV
2 V/div	$\pm 100$ V							1.41 V		161 mV
5 V/div	$\pm 100$ V							1.65 V		401 mV

**Chapter 4: Testing Performance  
Performance Test Record**

**DC Gain Test (50  $\Omega$ )**

Vertical Sensitivity	External Supply Setting	V <sub>DMM+</sub>	V <sub>DM</sub> M-	V <sub>Scope+</sub>	V <sub>Scope-</sub>	Calculate d DC Gain Error	DC Gain Error Test Limits
<b>Channel 1</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
<b>Channel 2</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
<b>Channel 3</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
<b>Channel 4</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %

DC Gain Test (1 M $\Omega$ )

Vertical Sensitivity	External Supply Setting	V <sub>DMM+</sub>	V <sub>DM</sub> M-	V <sub>Scope+</sub>	V <sub>Scope-</sub>	Calculate d DC Gain Error	DC Gain Error Test Limits
<b>Channel 1</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
2 V/div	±6.0 V						±2 %
5 V/div	±15.0 V						±2 %
<b>Channel 2</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
2 V/div	±6.0 V						±2 %
5 V/div	±15.0 V						±2 %
<b>Channel 3</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
2 V/div	±6.0 V						±2 %
5 V/div	±15.0 V						±2 %
<b>Channel 4</b>							
5 mV/div	±15 mV						±2 %
10 mV/div	±30 mV						±2 %
20 mV/div	±60 mV						±2 %
50 mV/div	±150 mV						±2 %
100 mV/div	±300 mV						±2 %
200 mV/div	±600 mV						±2 %
500 mV/div	±1.5 V						±2 %
1 V/div	±3.0 V						±2 %
2 V/div	±6.0 V						±2 %
5 V/div	±15.0 V						±2 %

**Chapter 4: Testing Performance  
Performance Test Record**

**Analog Bandwidth - Maximum Frequency Check**

Max frequency: DSO/MSO9404A = 4 GHz, DSO/MSO9254A = 2.5 GHz, DSO/MSO9104A = 1 GHz, DSO/MSO9064A = 600 MHz

Vertical Sensitivity	Measurement					
	Vin @ 50 MHz	Vout @ 50 MHz	Calculated Gain @ 50 MHz (Test Limit = greater than -3 dB)	Vin @ Max Freq	Vout @ Max Freq	Calculated Gain @ Max Freq (Test Limit = greater than -3 dB)
<b>Channel 1</b>						
5 mV/div						
10 mV/div						
20 mV/div						
50 mV/div						
100 mV/div						
200 mV/div						
500 mV/div						
1 V/div						
<b>Channel 2</b>						
5 mV/div						
10 mV/div						
20 mV/div						
50 mV/div						
100 mV/div						
200 mV/div						
500 mV/div						
1 V/div						
<b>Channel 3</b>						
5 mV/div						
10 mV/div						
20 mV/div						
50 mV/div						
100 mV/div						
200 mV/div						
500 mV/div						
1 V/div						
<b>Channel 4</b>						
5 mV/div						
10 mV/div						
20 mV/div						
50 mV/div						
100 mV/div						
200 mV/div						
500 mV/div						
1 V/div						

Test	Limits	Results		
<b>Time Scale Accuracy</b>	<b>Limit</b> <b>Limit is based on years since oscilloscope's last calibration</b>  <b>TSA = <math>\pm(0.4 + 0.5(\text{Years Since Calibration}))</math></b> <b>ppm</b>	<b>Calculated TSA Spec</b>  _____	<b>Measured time scale error</b>  _____	<b>Pass/Fail</b>  _____

**Chapter 4: Testing Performance**  
**Performance Test Record**

Safety	84
Tools Required	84
ESD Precautions	84
Keystroke Conventions	84
Default Setup	85
To troubleshoot the oscilloscope	86
Primary Trouble Isolation	87
Power Supply Trouble Isolation	91
Display Trouble Isolation	96
To check the backlight inverter voltages	98
To check the display board video signals	99
Front Panel Display Trouble Isolation	100
Front Panel Trouble Isolation	102
Motherboard Verification	103
To setup the BIOS	104
Acquisition Board Trouble Isolation - Scope Self Tests	105
AutoProbe Board Trouble Isolation	107
To check the keyboard; Trouble Isolation Procedure	108
To check the LEDs	109
Software Revisions	110
To check probe power outputs	111

---

# Troubleshooting

This section provides troubleshooting information for the Agilent Technologies 9000 Series oscilloscopes. The service strategy of this oscilloscope is replacement of defective assemblies.

## Safety

Read the Safety Notices at the back of this manual before servicing the oscilloscope. Before performing any procedure, review it for cautions and warnings.

---

### WARNING

#### SHOCK HAZARD!

Maintenance should be performed by trained service personnel aware of the hazards involved (for example, moving parts, fire and electric shock). Lack of training and awareness of the hazards could result in electrical shock or other injury. When maintenance can be performed without power applied, the power cord should be removed from the oscilloscope.

---

### WARNING

#### INJURY CAN RESULT!

Use caution when working around the cooling fans with the cover removed from the oscilloscope. The cooling fan blades are exposed on one side and can be hazardous. If the procedure allows, replace the cover over the chassis (without screwing it back in place) before turning the oscilloscope on. If the procedure requires you to have the cover off, be careful not to contact these fan blades with any part of your body.

## Tools Required

You will need basic electronic troubleshooting tools, including a digital multimeter and a 100 MHz (or faster) oscilloscope.

If you need to remove and replace assemblies, see chapter 6, “Replacing Assemblies.”

## ESD Precautions

When using any of the procedures in this chapter, you must use proper ESD precautions to protect the oscilloscope components from ESD damage. Failure to follow proper ESD control procedures may cause immediate failure or latent damage. Latent damage may result in equipment failure after a period of time. As a minimum, you should place the oscilloscope on a properly grounded ESD mat and wear a properly grounded ESD wrist strap when working on the oscilloscope.

## Keystroke Conventions

To guide you while setting up the oscilloscope, the following conventions are used to represent keystrokes and other interactions with the oscilloscope:

- When you need to issue a command through the graphical interface, the command will be phrased like this: “Select <command> from the <menu name> menu.”
- When you need to select an object on the graphical interface, the instructions will be phrased something like this: “Select the OK button.”
- When you need to press a key, the instructions will be phrased something like this: “Press the Run key.”

### **Default Setup**

A Default Setup is provided to return the oscilloscope to a known state. The default setup can be used to undo previous setups so that they do not interfere with the current measurement. Use the default setup when a procedure requires it.

- Press the Default Setup key on the front panel to set the oscilloscope to the default state.

## To troubleshoot the oscilloscope

The troubleshooting procedure is used to isolate problems to a faulty assembly. When you find the faulty assembly, use the disassembly and assembly procedures in "Replacing Assemblies," beginning on page 113 to replace the assembly.

The primary procedural tool in this section is the Primary Trouble Isolation section. This section refers to sections in this chapter where the procedures are described in detail.

If you are unfamiliar with this oscilloscope, start with the Primary Trouble Isolation section.


---

## Primary Trouble Isolation

### A Perform power-up.

Connect the oscilloscope power cord and press the power button in the lower left corner of the front panel. If the oscilloscope is working properly, it will boot-up, and the graticule will be displayed on the screen. The exact appearance may vary depending on the setup selected before the oscilloscope was turned off.

Figure 5-1

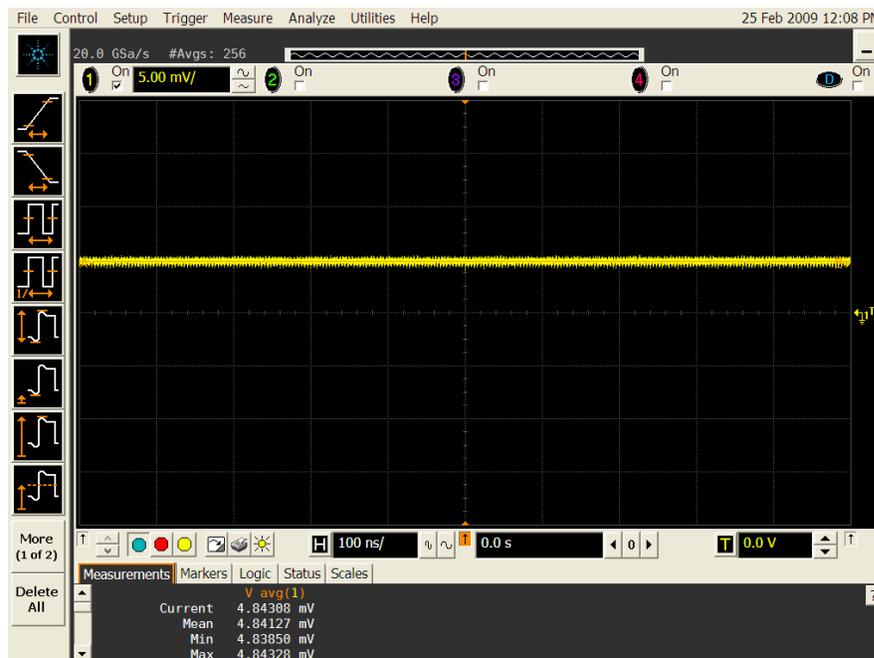


### Power-on Display

## Chapter 5: Troubleshooting

### Primary Trouble Isolation


- B** If the oscilloscope shuts down without pressing the front panel power button, unplug the AC power cord from the rear of the instrument and wait twenty to thirty seconds. Then plug the AC power cord back into the oscilloscope and press the front panel power button (or you can perform a hard shut down by holding the power button down for 5-6 second so the power turns off and then pressing the power button again to restart the oscilloscope). If it shuts down again then look through the rear fan slots to see the upper right hand corner of the acquisition board (as viewed from the rear of the oscilloscope). There are a series of LEDs located in this upper right hand corner of the acquisition board. Please consult the Power Supply Troubleshooting section (page 91) of this chapter for more information on decoding these LEDs.

Figure 5-2

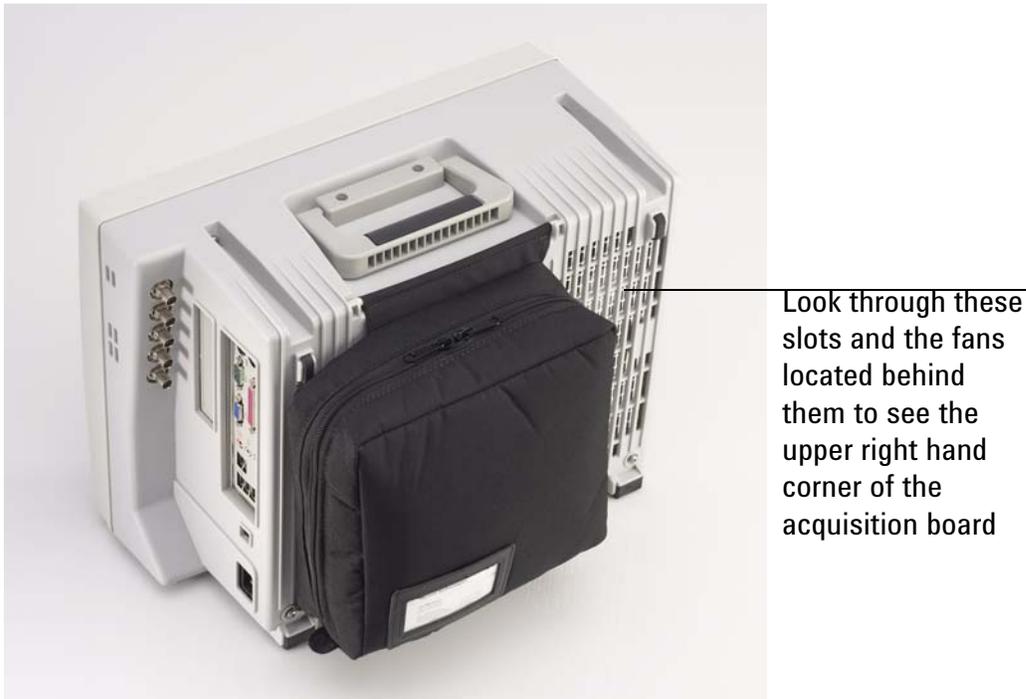

- C** Once the oscilloscope will remain powered up, run the oscilloscope self-tests.
- 1 Select Self Test from the Utilities menu (these are discussed in detail starting on page 105).
  - 2 Select Scope Self Tests from the Self Test drop down list box.
  - 3 Click the Start Test button and follow the instructions on the screen.
- If any of the selftests fail, go to the Acquisition Trouble Isolation troubleshooting flowchart later in this chapter for further troubleshooting. Otherwise, go to step D.
- D** Check the front panel response by running the Keyboard and LED self tests. Use this procedure to verify correct keyboard operation.
- 1 Select Self Test from the Utilities menu.
  - 2 Select Keyboard Test from the Self Test drop down list box, then click Start.
- A new window appears with a symbolic representation of the keyboard. See Figure 5-3.

Figure 5-3

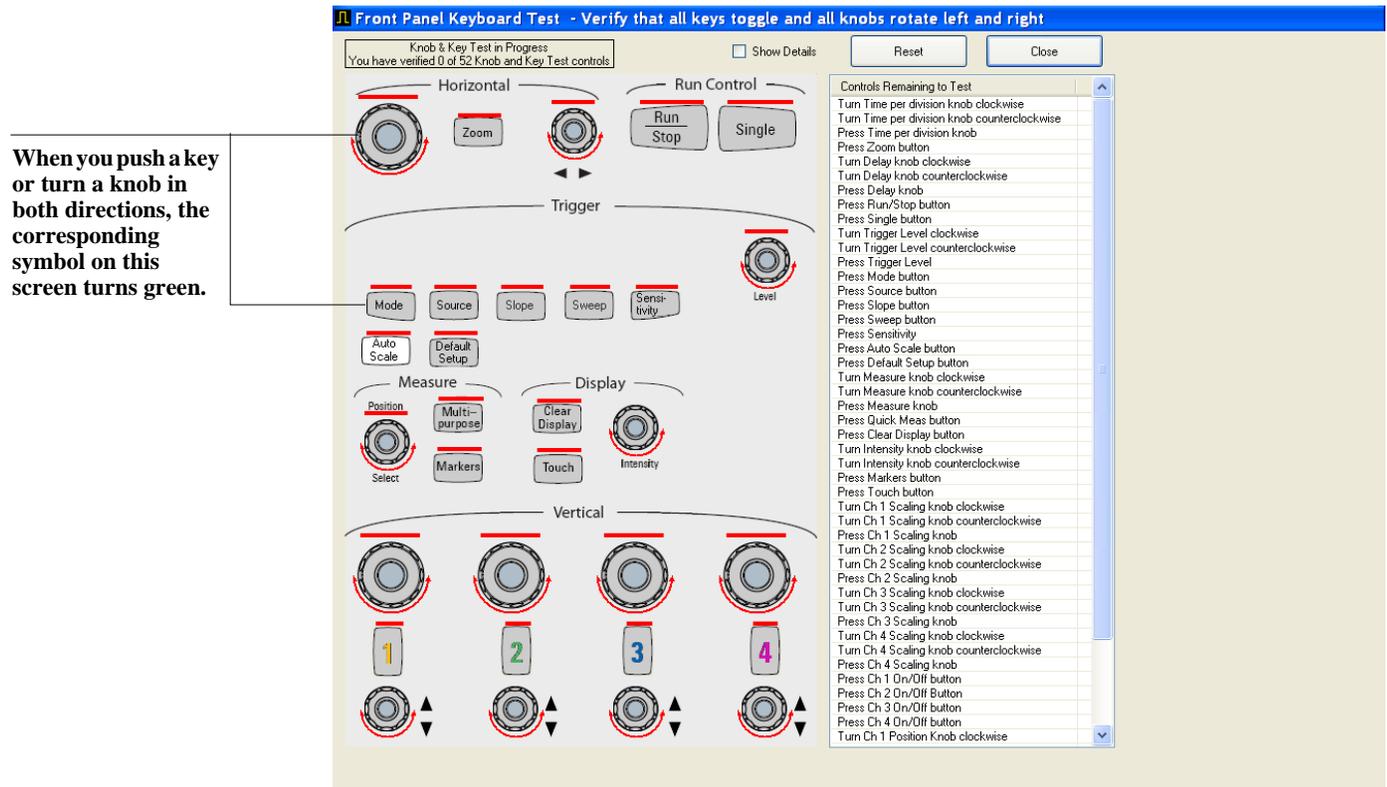

#### Knob and Key Self Test Screen

- 3 Push each key on the keyboard until you have pushed all keys.
- 4 When you push a key/knob, the bar above the corresponding key/knob symbol on the display should change from red to green.
- 5 Turn each knob in both directions until you have turned all knobs.
- 6 When you turn a knob in one direction, half the rotation arrow under the corresponding knob symbol should turn green. When you then turn the knob in the other direction, the entire rotation arrow under the knob symbol should turn green. If the knob can be pressed then pressing it will cause the bar above it to turn green.
- 7 When you are finished, click Close.
- 8 If any of the knobs or keys do not work, go to To check the keyboard; Trouble Isolation Procedure 108.

Use the following procedure to test the front-panel LED (light-emitting diode) indicators.


- 1 Select Self Test from the Utilities menu.
- 2 Select LED Test from the Self Test drop-down list box, then click Start Test.

The LED test screen appears, which shows a symbolic representation of all front panel LED indicators. See Figure 5-4.

## Chapter 5: Troubleshooting

### Primary Trouble Isolation

Figure 5-4

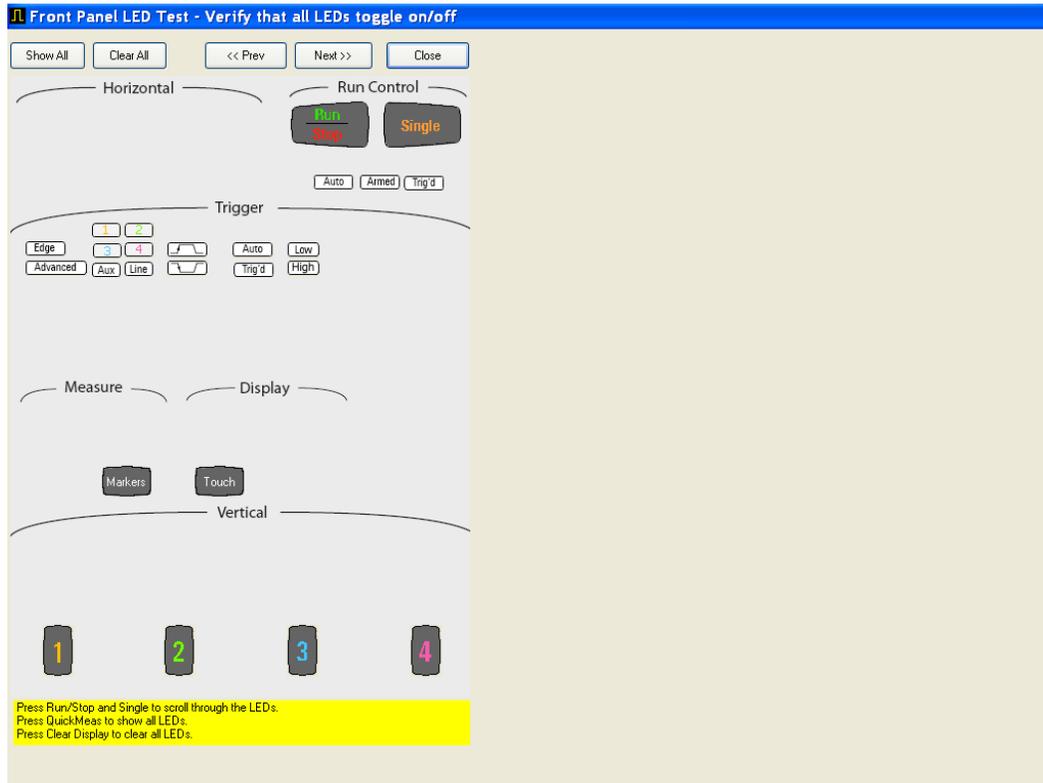

#### LED Test Screen

- 3 Repeatedly push the Single button on the front panel to step through and highlight each LED symbol in the test screen. You can also step through the LEDs by clicking on the << **Prev** or **Next** >> buttons on the display screen. Verify that the corresponding LEDs on the front panel are the only ones illuminated. Additionally, pressing the Multipurpose button on the front panel will illuminate all the LEDs while pressing the Clear Display button on the front panel will turn off all the LEDs.
  - 4 When you are finished, click Close.
  - 5 If any of the LEDs do not work, go to “To check the LEDs” later in this chapter.
  - 6 If both tests pass, go to step E.
- E Self Calibration**
- 1 Complete a self calibration by following the procedures in chapter 4.
  - 2 If the calibration test fails, replace the acquisition board.
- F The system is operational. Performance test the oscilloscope using the procedures in chapter 4 of this service manual.**

---

## Power Supply Trouble Isolation

---

### WARNING

#### SHOCK HAZARD!

Only trained service personnel who are aware of the hazards involved should perform the maintenance. Read the safety summary at the back of this book before proceeding. Failure to observe safety precautions may result in electric shock.

---

For information on how to replace assemblies, see "Replacing Assemblies," beginning on page 113.

These trouble isolation instructions help isolate the problem to the assembly level when the power system is not operating. Because of advanced power system protection features, the problem may not be with the supply itself and, therefore, you will need to use the LEDs located in the upper right hand corner of the acquisition board to determine the fault. These LEDs can be seen by looking through the rear fan slots in the upper right hand corner as viewed from the rear of the oscilloscope. After a shutdown occurs, keep the power cord plugged in so the LEDs remain illuminated. Once you have noted the LED pattern, you can unplug the instrument.



Look through these slots and the fans located behind them to see the upper right hand corner of the acquisition board


If the oscilloscope still will not power on after you have followed the required steps below, refer to the Motherboard Verification section in this chapter for additional diagnosis suggestions.

---

## How to Use the Power Fault LEDs

The previous page showed where you should look through the rear fan slots to see the upper right hand corner of the acquisition board. There are a series of 13 LEDs. They are separated into three sections of four LEDs each and then the Over Temperature LED is by itself at the bottom (as shown in Figure 5-5).

Figure 5-5

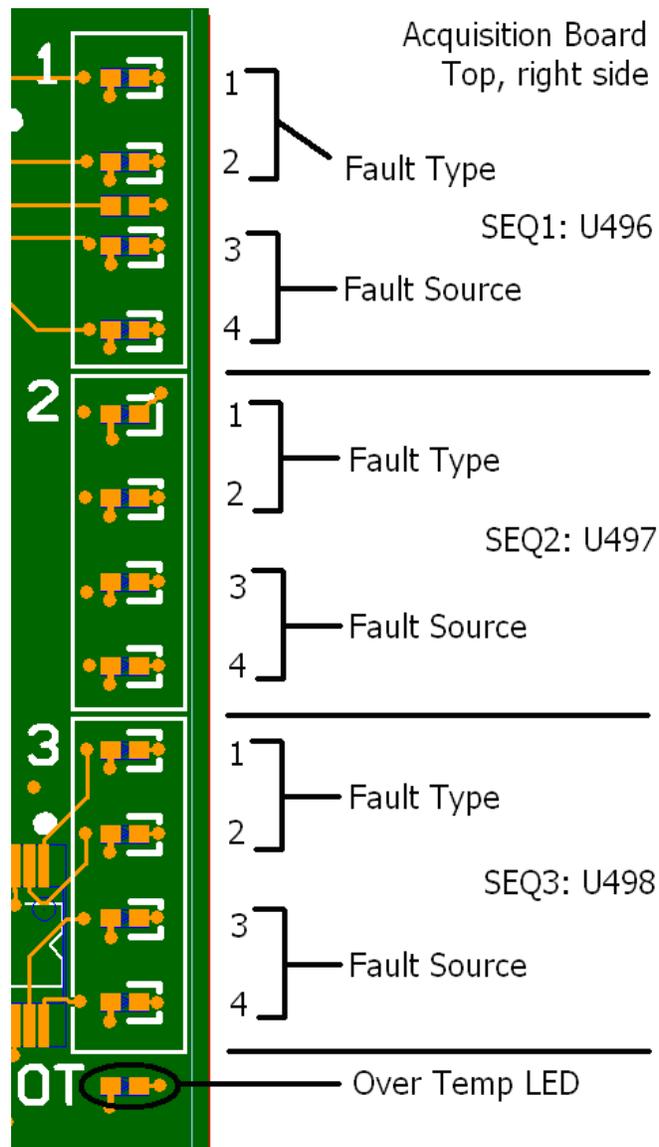

By looking at the pattern of LEDs illuminated after a power failure, you can determine the cause of the fault. However, in most cases, only assembly level repair is required which greatly simplifies decoding these LEDs. An in-depth discussion of these LEDs will first be presented so you understand how they operate and then the assembly level repair procedures will be discussed.

The LEDs must be interpreted in groups of four (as shown in the layout above) with the upper two LEDs

in each group indicating the type of failure and the lower two LEDs indicating the source of the failure.

If a shutdown occurs, the table below shows how to decode the upper two LEDs (LEDs 1 and 2) in each group. Remember these are the LEDs that specify the type of failure that occurred. The fault types are described below the table.

<b>Fault Type</b>	<b>LED1</b>	<b>LED2</b>
Sequence	On	On
Reset	On	Off
Command	Off	On
External	Off	Off

The following table then shows how to decode the bottom two LEDs in each group (LEDs 3 and 4). Remember that these LEDs specify the source of the failure.

<b>Fault Source</b>	<b>LED3</b>	<b>LED4</b>
1	On	On
2	On	Off
3	Off	On
4	Off	Off

The fault source refers to the input channel of the corresponding sequencer. Below is a listing of the inputs for each sequencer.

#### **Sequencer 1**

<b>Input</b>	<b>Supply</b>
1	+12V Bulk
2	+5 V
3	+3.3 V
4	+2.5 V

#### **Sequencer 2**

<b>Input</b>	<b>Supply</b>
1	+1.8V
2	+2.25 V
3	+1.6 V
4	+1.2 V

## Chapter 5: Troubleshooting

### How to Use the Power Fault LEDs

#### Sequencer 3

Input	Supply
1	-12V Bulk
2	-6 V
3	-5.2 V
4	-3.8 V

When a fault occurs on a given sequencer, it notifies the other two using the Fault signal. The other two sequencers report this as an External Fault as well. For example, if the first sequencer has an over-voltage on Channel 1, it will report an External Fault with Channel 1 as the source. The other two sequencers will report it as an External Fault with the source as Channel 4. Similarly, if the first sequencer has an under-voltage failure on +12V, it will report a Reset Fault on Channel 1 and the other two sequencers will report External Faults on Channel 4. As you can see, any fault on one of the sequencers always reports an External Fault on Channel 4 on the other two sequencers. Look for the fault that is not an External Fault on Channel 4 as the cause of the shutdown. If all three sequencers report an External Fault on channel 4, it will take some work to determine the real source. It could be on any of the Channel 4 sources (+2.5V, +1.2V, -3.8V), an over-temperature fault (look for the over-temperature LED to light), or an FPGA issued fault.

**Sequence Fault:** A Sequence Fault happens when a supply does not come up in time during a power-on sequence.

**Reset Fault:** A Reset Fault happens if the oscilloscope shuts down during the monitor phase because a supply went under voltage. This is probably due to the supply failing to an off state or the load becoming too much for the supply.

**Command Fault:** A Command Fault happens when the ON sequence to one of the sequencers goes HIGH to initiate a turn-on, but then goes LOW before the turn-on sequencing finishes. Similarly, if the ON signal goes HIGH during sequencing off, a Command Fault occurs. This kind of fault indicates something is going wrong with the ON signal. Since the second two sequencers are fed by 7 other sequencers, this will most likely happen on the first sequencer. The ON signal is driven by the minimum on-time limiter. There could be a problem here as well.

**External Fault:** An External Fault can be caused by several failures. If a supply goes over-voltage, an external fault is issued. If the over-temperature sensor or FPGA issues a fault, it will be displayed as an external fault on channel 4. This presents an ambiguous case as an External Fault on channel four could occur for multiple reasons. To help determine the cause, the over-temperature LED will light during an over-temperature fault. However, this LED does not latch to failure. Once the oscilloscope cools to below the over-temperature condition, the LED will turn off. The main reason for an over-temperature fault is a stopped fan or blocked air inlet. Check for these and power the oscilloscope back up. If it continues to shut down, it could be a bad over-temperature sensor or comparator circuit.

## Assembly Level Repair

Please read the paragraph directly below as it discusses that a fault on one sequencer causes LEDs corresponding to other sequencers to illuminate. This is important to understand before proceeding so you know which LED is actually the root of the problem.

When a fault occurs on a given sequencer, it notifies the other two using the Fault signal. The other two sequencers report this as an External Fault as well. For example, if the first sequencer has an over-voltage on Channel 1, it will report an External Fault with Channel 1 as the source. The other two sequencers will report it as an External Fault with the source as Channel 4. Similarly, if the first sequencer has an under-voltage failure on +12V, it will report a Reset Fault on Channel 1 and the other two sequencers will report External Faults on Channel 4. As you can see, any fault on one of the sequencers always reports an External Fault on Channel 4 on the other two sequencers. Look for the fault that is not an External Fault on Channel 4 as the cause of the shutdown. If all three sequencers report an External Fault on channel 4, it will take some work to determine the real source. It could be on any of the Channel 4 sources (+2.5V, +1.2V, -3.8V), an over-temperature fault (look for the over-temperature LED to light), or an FPGA issued fault.

**Sequencer 1 Group Faults:**

If the fault occurs in the first group of LEDs (Sequencer 1) then the problem is with the 12 V bulk power supply, the power cables, or the acquisition board. You should check the power cables first, then the bulk power supply, and finally the acquisition board. Reinstall any power supplies, cables, or acquisition boards that turned out not to be the problem.

**Sequencer 2 or 3 Groups Faults:**


If the fault occurs in any of the other groupings (Sequencer 2 or 3) then the problem is most likely the acquisition board. If replacing the acquisition board does not fix the fault then the power cables may be causing the problem.

**Over Temp LED Fault:**

If the Over Temp LED is illuminated then first make sure that nothing is blocking the air flow. There cannot be anything underneath the oscilloscope (such as a piece of paper) that will block the vents nor can the oscilloscope rest on anything except a hard, flat surface. Also, there needs to be proper clearance in the rear of the oscilloscope. If the clearance is adequate then investigate the fans. If one or more are not turning then there is either a problem with the fan(s) or the fan cables.

---

Display Trouble Isolation

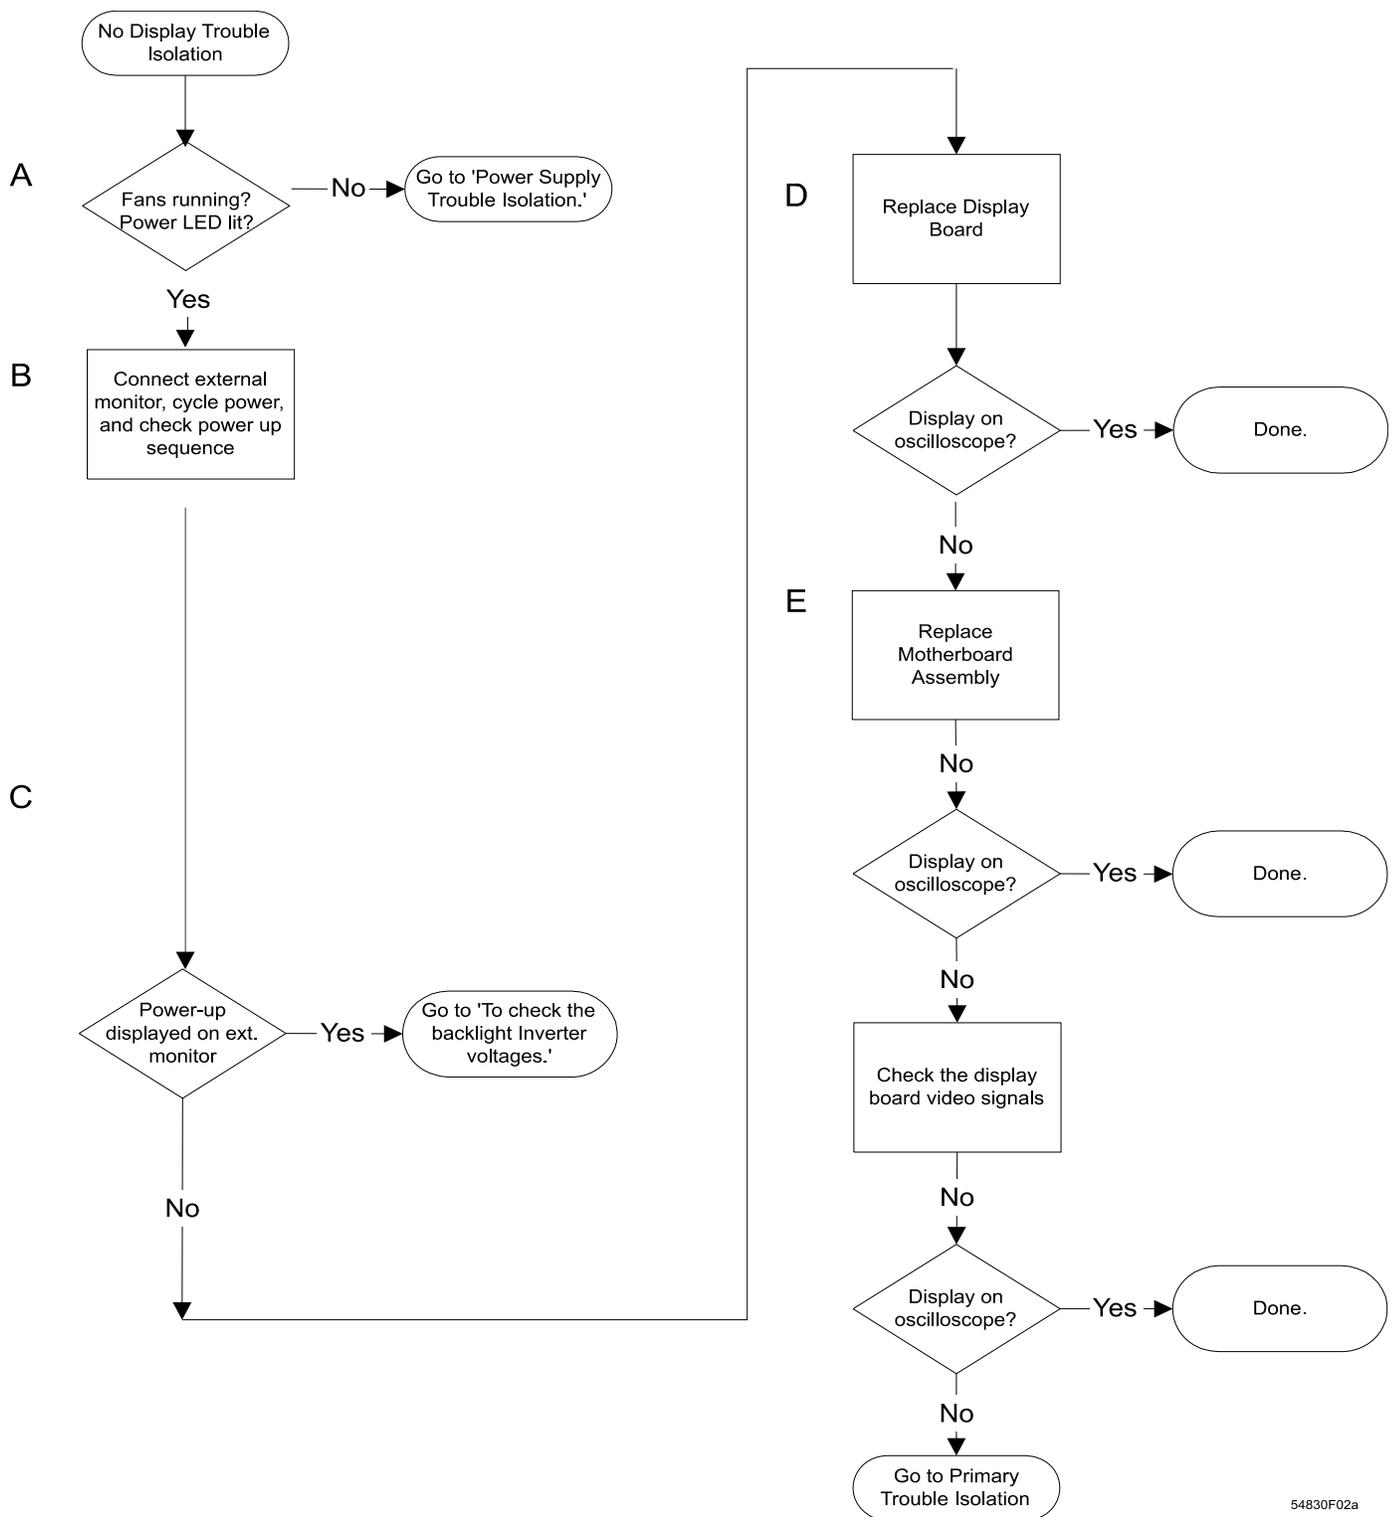


54830F02a

---

**To check the backlight inverter voltages**

The backlight inverter board is accessed by opening the front chassis as described in the “Replacing Assemblies” chapter. Below is a picture showing what the inverter board looks like (this picture is of the back of the front chassis - the display is on the other side of this piece).

This is the backlight inverter board

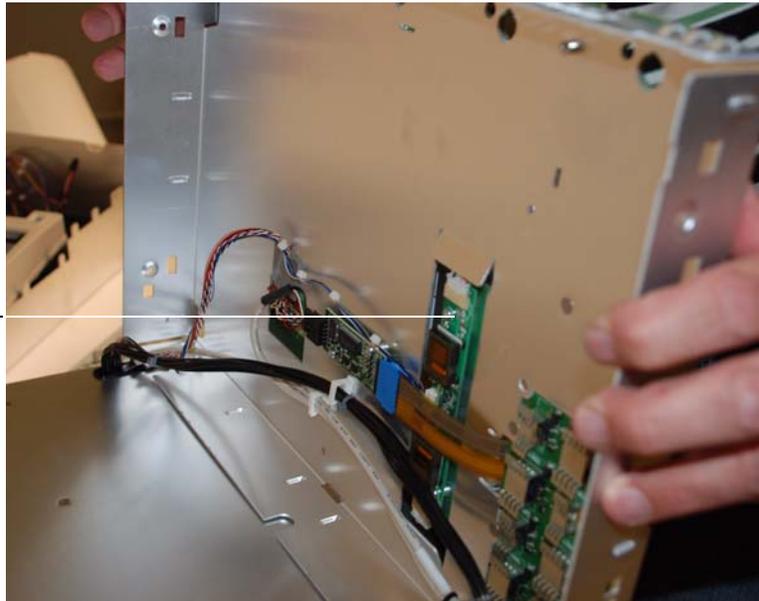

- There is an input connector at one side of the board.
- There are two output connectors on the other end of the board, that power the two backlights which are inserted into the flat panel display.

The output voltage is approximately 300-450 V<sub>rms</sub>, 40 kHz (measured differentially between the two wires) when the backlight is illuminated. The voltage is approximately 1 kV before the backlight tube is illuminated. A red LED on the backlight inverter board illuminates when the output voltage is present.

When the backlight goes off (when the oscilloscope’s operating system switches to screen saver mode) the voltage on pins 1 and 2 (with respect to ground) slowly decays to 0 V.

The outputs are controlled by the input. Notice that input pin 5 goes low to enable the output voltage. These pins can be reached at J1 on the display board MP12.

**Table 5-6**

<b>Backlight Inverter Board Input Voltages</b>							
<b>Input Pin #</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>
<b>Backlight OFF</b>	<b>0 V</b>	<b>0 V</b>	<b>0 V</b>	<b>0 V</b>	<b>0 V</b>	<b>0 V</b>	<b>0 V</b>
<b>Backlight ON</b>	<b>5 V</b>	<b>0 V</b>	<b>2.5 V</b>	<b>0 V</b>	<b>0 V</b>	<b>12 V</b>	<b>12 V</b>

---

## To check the display board video signals

The video signals are checked on the 32-pin connector on the display board. You can use an oscilloscope with a bandwidth of at least 100 MHz to verify the signals. Even-numbered pins are closest to the PC board. If the signals are not present, suspect the display card. If the signals are present and the backlights are on, suspect the flat-panel display as the problem. Note that CLK, A0, A1, A2, and A3 are Low Voltage Differential Signals (LVDS).


**Table 5-7**

---

### Video Signals

Pin Number	Signal	Pin Number	Signal
1	NC	26	NC
2	CLK	27	NC
	- (LVDS pair)		
3	CLK	28	NC
	+ (LVDS pair)		
4	GROUND	29	NC
5	A3-	30	NC
	(LVDS pair)		
6	A3+	31	NC
	(LVDS pair)		
7	GROUND	32	NC
8	A2-		
	(LVDS pair)		
9	A2+		
	(LVDS pair)		
10	GROUND		
11	A1-		
	(LVDS pair)		
12	A1+		
	(LVDS pair)		
13	GROUND		
14	A0-		
	(LVDS pair)		
15	A0+		
	(LVDS pair)		
16	NC		
17	NC		
18	NC		
19	NC		
20	NC		
21	GROUND		
22	GROUND		
23	+3.3 V		
24	+3.3 V		
25	+3.3 V		

Front Panel Display Trouble Isolation

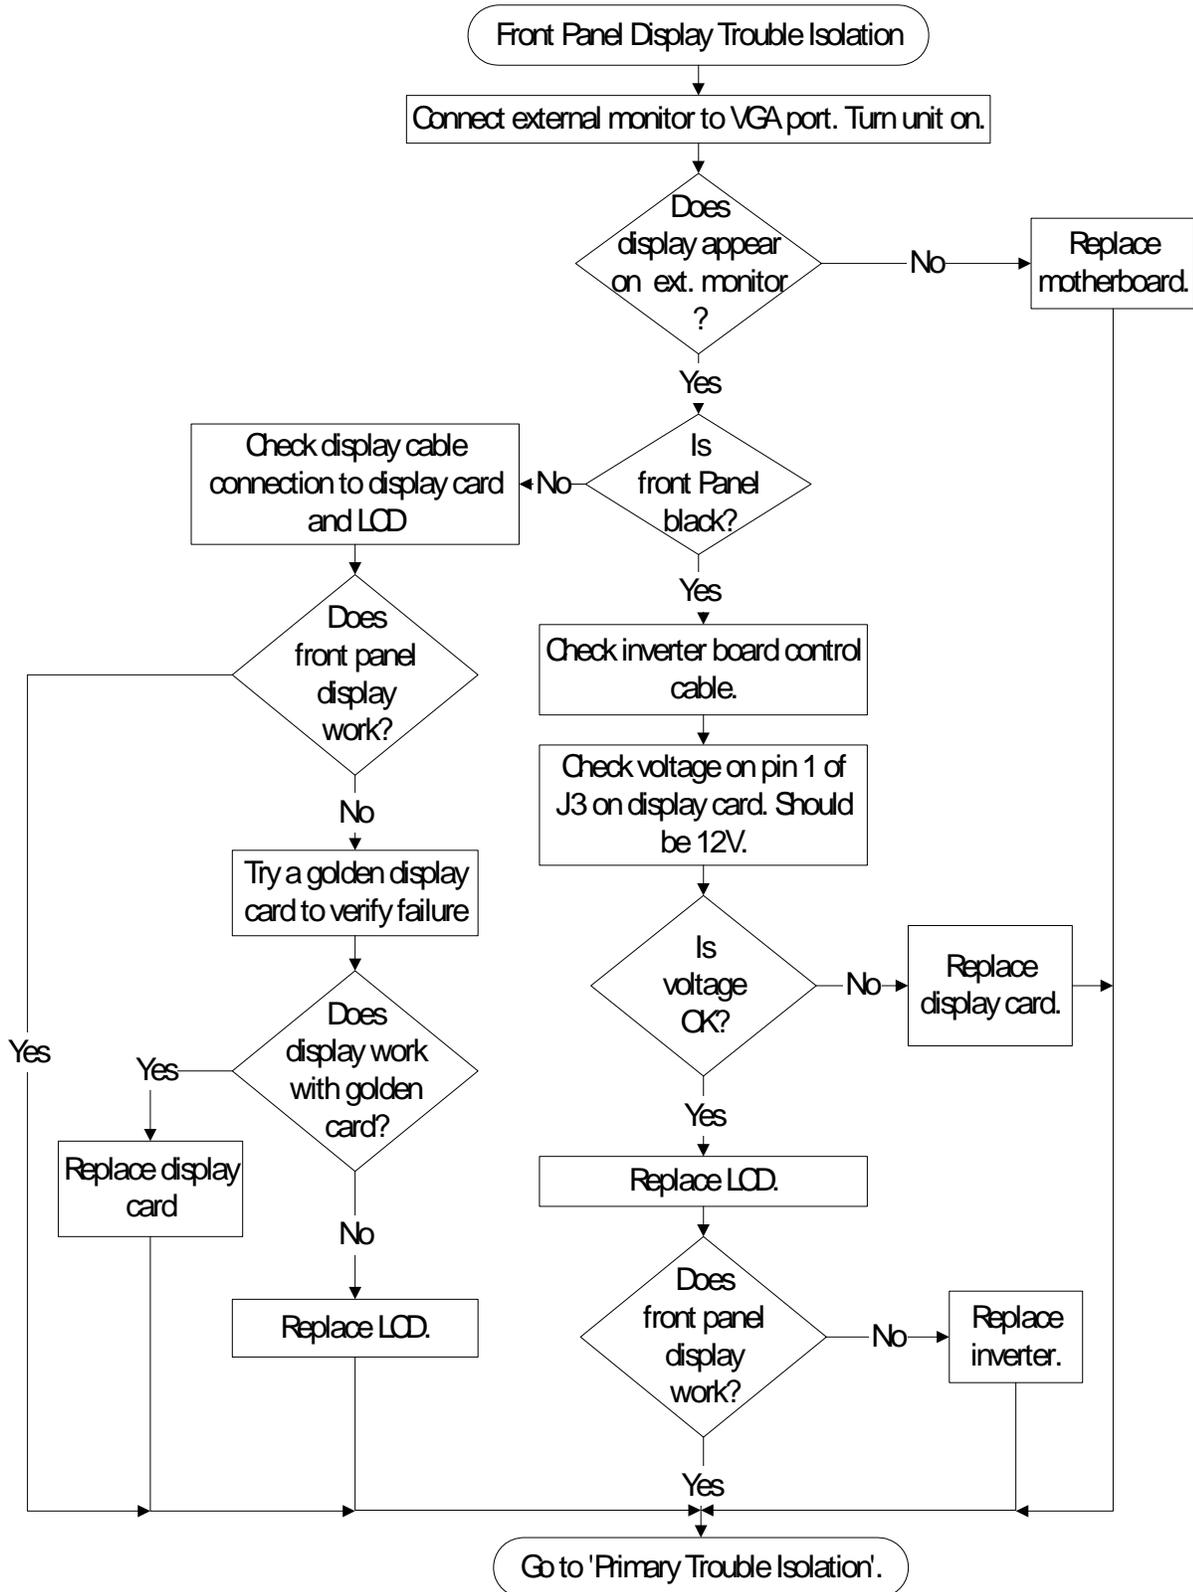

---

**WARNING**

**SHOCK HAZARD!**

The backlight inverter assembly, which is mounted at the front corner of the oscilloscope near the flat-panel display, operates at 1.65 kV at turn on. **DO NOT** handle this assembly while it is in operation. An LED on the inverter board illuminates to indicate the presence of high voltage.

---

---

**WARNING**


**INJURY CAN RESULT!**

Once the cover is removed, the fan blades are exposed both inside and outside the chassis. Disconnect the power cable before working around the fans. Use extreme caution in working with the oscilloscope when the cover is removed. If the procedure allows, replace the cover over the chassis (without screwing it back in place) before turning the oscilloscope on. If the procedure requires you to have the cover off, be careful not to contact these fan blades with any part of your body.

---

For information on how to replace the display parts, see "Replacing Assemblies," beginning on page 113.

## Front Panel Trouble Isolation

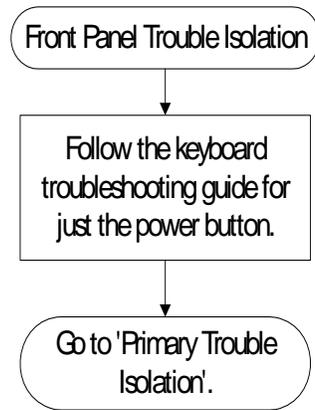

---

## Motherboard Verification

If you have been through the Power Supply Trouble Isolation section of this chapter and the oscilloscope still does not stay powered up, the problem may be with the motherboard.

## To setup the BIOS

If the BIOS settings become corrupt, the Infiniium oscilloscope PC motherboard will not recognize the hard drive and the unit may not boot. The motherboard BIOS setup procedure is presented in the following steps.

### **Configure the Motherboard BIOS parameters.**

Use this procedure to set the motherboard BIOS.

- 1 Connect the power cable to the Infiniium oscilloscope.
- 2 Connect the external keyboard to the rear panel.
- 3 Press the delete key when you see the following prompt on the bottom of the screen

Press TAB to Show POST screen, DEL to enter SETUP, F12 to select boot device.

Note: If you do not see the prompt, or the oscilloscope does not appear to be functioning, check the ribbon cable connectors. Otherwise, continue with the next step.

### **BIOS Setup Procedure**

- 1 Go to **Load 15" LCD Defaults** and press the Enter key for optimized values or go to **Load 8.4" LCD Defaults** and press the Enter key for fail-safe values. Select **Y** to load the defaults, then press the Enter key.
- 1 Go to the **Save and Exit Setup** option and press the Enter key to save and exit the setup. Select **Y** to save and exit, then press the Enter key.

## Acquisition Board Trouble Isolation - Scope Self Tests

If the Acquisition board has been removed by a prior procedure, reinstall it.

Power up the oscilloscope and then go under Utilities > Self Test. Select the Scope Self Test option from the Self Test pulldown menu and then press the Start Test button. If one of these tests fails and mentions what channel the failure occurred on, replace the acquisition board.

If the error message does not mention a channel, then refer to the discussions below for the test that failed to see what the test is testing.

### Scope Self Tests

#### *Vertical Test Group*

- Front End DAC Linearity Test - This test verifies the linearity of each channel's front end DAC. If the test finds a problem, it will report a failure for the DAC on the associated channel.
- Front End DAC MaxMin Test - This test measures the minimum and maximum output voltage values of each channel's front end DAC. If the test measures any values that are out of the range of expected values, it will report a failure for the DAC on the associated channel.
- Otter Register - This test verifies that all of the Otter preamp registers can be correctly written to and read from. If this test reads any registers whose values are not equal to what they were written to, it will report a failure for the preamp on the associated channel.
- Overload - This test simulates an overload condition on each channel and verifies that when such a condition exists it immediately generates an interrupt to the host processor. If such a condition is not detected properly, the test will report a failure for the associated channel.

#### *Trigger Test Group*

- Trigger Lvl DAC Test - This test has not been implemented yet and currently does nothing.

#### *Timebase Test Group*

- Timebase Interpolator Test - This test validates the timebase interpolator hardware by verifying that it is able to produce unique values for different trigger settings. If this test fails, there *may* be a problem with the timebase interpolator IC. However, this test has many other hardware dependencies so a failure from this test cannot necessarily be associated with any specific hardware failure. Try replacing the acquisition board and see if the test will then pass.

#### *ADC Test Group*

- ADC Register Test - This test verifies that all of the ADC registers can be correctly written to and read from. If the test reads any registers whose values are not equal to what they were written to, it will report a failure for the ADC on the associated channel.
- ADC Voltage Test Points Test - This test verifies that voltages measured from 32 test points within the ADC are within their expected range. If any test point is found to be outside of its expected range, a failure is reported for the ADC containing the associated test point.

## **Chapter 5: Troubleshooting**

### **Acquisition Board Trouble Isolation - Scope Self Tests**


#### *Acquisition Memory Test Group*

- **MBIST** - This test checks the embedded memory in each memory controller ASIC for errors. If the errors can be corrected using the redundancy present in the IC, the software will perform the necessary correction.
- **Register Test** - This test verifies that all of the memory controller ASIC registers can be correctly written to and read from. If the test reads any registers whose values are not equal to what they were written to, it will report a failure for the Hedwig with the associated error.

#### *Misc. Scope Test Group*

- **Temp Sensor Test** - This test verifies that all of the temperature sensors in the oscilloscope are reading values within the expected range. Temperature sensors exist for each of the memory controller ICs, each of the ADC ICs, and each of the front end ICs. If any temperature sensor measure a temperature that is outside of the expected operating range, a failure will be reported for the IC associated with that temperature sensor.
- **Acq Flash RAM Test** - This test checks the flash RAM located on the acquisition board for errors. If any errors are found, a failure is reported for the particular flash RAM that was found to be bad.

AutoProbe Board Trouble Isolation

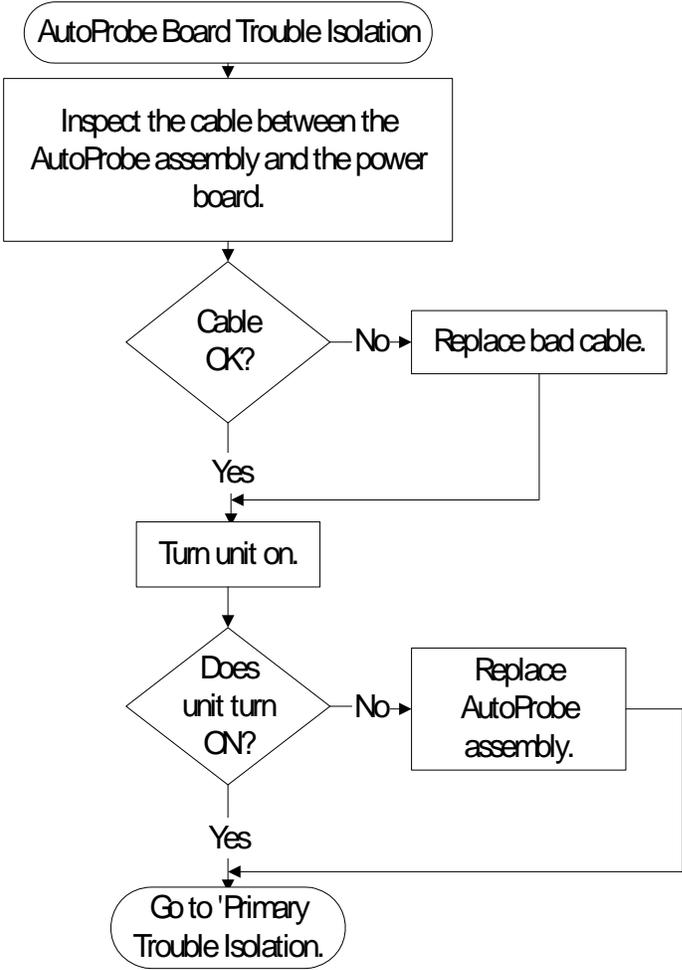

## To check the keyboard; Trouble Isolation Procedure

Use this procedure only if you encounter key failures in the keyboard self test procedure. If any knobs fail, replace the keyboard assembly.

- 1** Disconnect the power cord and remove the cover.
- 2** Remove the front panel assembly.  
See chapter 6 for instructions.
- 3** Remove the keyboard assembly from the front panel assembly. Partially re-assemble the front panel assembly, including the flat-panel display and lens, but omitting the keyboard. Re-attach the partial assembly to the chassis.  
Be sure to reconnect the display video cable and the backlight inverter cables. See chapter 6 for instructions on removing and disassembling the front panel.
- 4** Separate the elastomeric keypads from the keyboard assembly.

---

### CAUTION

**CONTAMINATION CAN CAUSE INTERMITTENT OPERATION!**

Be careful not to contaminate the key side of the PC board or the keypads. Dust and fingerprints on these parts may cause intermittent key operation.

- 5** Set the keyboard assembly on an antistatic electrical insulated surface.
- 6** Connect the keyboard cable to the scope interface board in the chassis.  
You may need to set the chassis on its side to allow proper routing of the cables without straining them.
- 7** Reconnect the power cable and apply power.
- 8** Enable the graphical interface, then start the keyboard test as described in the Primary Trouble Isolation section of this chapter.
- 9** Carefully short the PC board trace with a paper clip or screwdriver at each nonoperating key (as determined by keyboard test), and look for an appropriate response on the display.
  - If the display responds as though a key were pressed, replace the elastomeric keypad.
  - If the display does not respond as though a key were pressed, replace the keyboard.
- 10** Re-assemble the oscilloscope.

## To check the LEDs

If any of the LEDs are not working on the front panel, the first step is to trouble shoot the acquisition assembly to make sure it is working. If it is working then replace the keyboard assembly and see if the LEDs will illuminate. If the LEDs will not illuminate, the last step is to reload the oscilloscope software.

When reassembling the oscilloscope all boards that were replaced, but turned out not to be causing the problem should be reinstalled in the oscilloscope.


---

## Software Revisions

- Select About Infiniium... from the Help Menu.

A dialog box appears showing the current version number for the scope software and on-line information system software. This information may be useful when contacting Agilent Technologies for further service information. See Figure 5-8.

**Figure 5-8**

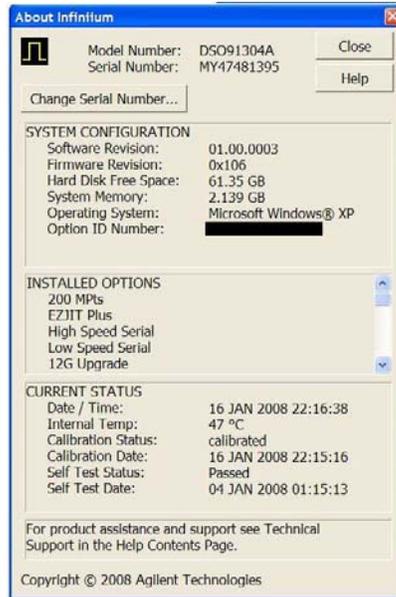

### About Infiniium... Information

---

## To check probe power outputs

Probe power outputs are on the front panel, surrounding each BNC input.


Use the table and figure to the right to check the power output at the connectors.

The +12 V and –12 V supplies come from ripple regulator on the power board, and the +3 V and –3 V supplies are developed in three-terminal regulators on the probe power and control assembly.

Measure the voltages with respect to the ground terminal on the front panel, located near the Aux Out BNC.

Do not attempt to measure voltages at pins 3 through 7.

Pin	Supply
1	+3V
2	–3V
3	Offset
4	Data
5 & ring	Probe ID
6	Clk
7	R <sub>p</sub>
8	–12 V
9	+12 V

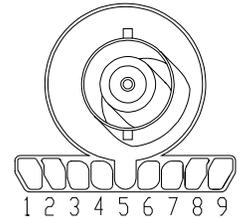

Any failure may be a problem with the probe power and control assembly, the AutoProbe flex cable, the probe power and control cable, or the power board.

**Chapter 5: Troubleshooting**  
**To check probe power outputs**

ESD Precautions 114  
Tools Required 114  
To return the oscilloscope to Agilent Technologies for service 115  
To remove and replace the handle and rear cover 116  
To remove and replace the backlight inverter board 128  
To remove and replace the touch screen controller board 130  
To remove and replace the acquisition board assembly 135  
To set the calibration factors after replacing the acquisition board 140  
To remove and replace the power supply 142  
To remove and replace the hard disk drive 144

---

## Replacing Assemblies

---

# Replacing Assemblies

Use the procedures in this chapter when removing and replacing assemblies and parts in the Agilent Technologies Infiniium 9000 Series oscilloscopes.

In general, the procedures that follow are placed in the order to be used to remove a particular assembly. The procedures listed first are for assemblies that must be removed first. However, the one caveat to this is that the front panel assemblies can be replaced without having to open the rear of the instrument and vice versa.

The graphics in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.

## ESD Precautions

When using any of the procedures in this chapter you must use proper ESD precautions. As a minimum you must place the oscilloscope on a properly grounded ESD mat and wear a properly grounded ESD wrist strap.

---

### CAUTION

**AVOID DAMAGE TO THE OSCILLOSCOPE!**

Failure to implement proper antistatic measures may result in damage to the oscilloscope.

## Tools Required

The following tools are required for these procedures.

- Torx drivers: T6, T10, T20
- Flathead screwdriver

---

### CAUTION

**REMOVE POWER BEFORE REMOVING OR REPLACING ASSEMBLIES!**

Do not remove or replace any circuit board assemblies in this oscilloscope while power is applied. The assemblies contain components which may be damaged if the assembly is removed or replaced while power is connected to the oscilloscope.

---

### WARNING

**SHOCK HAZARD!**

To avoid electrical shock, adhere closely to the following procedures. Also, after disconnecting the power cable, wait at least three minutes for the capacitors on the power supply to discharge before servicing this oscilloscope. Hazardous voltages exist on the inverter for the display monitor.

---

### WARNING

**SHOCK HAZARD!**

Read the Safety information at the back of this guide before performing the following procedures. Failure to observe safety precautions may result in electrical shock.

---

### WARNING

**INJURY CAN RESULT!**

Use caution when the oscilloscope fan blades are exposed as they can cause injury.

## To return the oscilloscope to Agilent Technologies for service

Before shipping the oscilloscope to Agilent Technologies, contact your nearest Agilent Technologies oscilloscope Support Center (or Agilent Technologies Service Center if outside the United States) for additional details.

- 1** Write the following information on a tag and attach it to the oscilloscope.
  - Name and address of owner
  - Oscilloscope model numbers
  - Oscilloscope serial numbers
  - Description of the service required or failure indications
- 2** Remove all accessories from the oscilloscope.

Accessories include all cables. Do not include accessories unless they are associated with the failure symptoms.
- 3** Protect the oscilloscope by wrapping it in plastic or heavy paper.
- 4** Pack the oscilloscope in foam or other shock absorbing material and place it in a strong shipping container.

You can use the original shipping materials or order materials from an Agilent Technologies Sales Office. If neither are available, place 8 to 10 cm (3 to 4 inches) of shock-absorbing material around the oscilloscope and place it in a box that does not allow movement during shipping.
- 5** Seal the shipping container securely.
- 6** Mark the shipping container as **FRAGILE**.

In any correspondence, refer to oscilloscope by model number and full serial number.

**Chapter 6: Replacing Assemblies**  
**To remove and replace the handle and rear cover**

---

**To remove and replace the handle and rear cover**

Use this procedure to remove and replace the handle and rear cover. When necessary, refer to other removal procedures. The pictures in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.


- 1 Disconnect the power cable.
- 2 Disconnect all oscilloscope probes and BNC input cables from the front panel.
- 3 Disconnect any other cables, such as mouse, keyboard, printer, USB, or LAN cables.
- 4 Remove the accessory pouch from the rear of the oscilloscope if it is attached.
- 5 Remove the two Torx T20 screws securing the handle on the top of the oscilloscope.  
**WARNING:** Keep track of which screws go with the handle because when you go to reattach it, using different screws could result in a safety hazard.

**Figure 6-1**




- 6 Remove the two Torx T15 screws from the upper rear cover of the instrument as shown below (Note: handle should already be removed unlike in the picture).

**Figure 6-2**

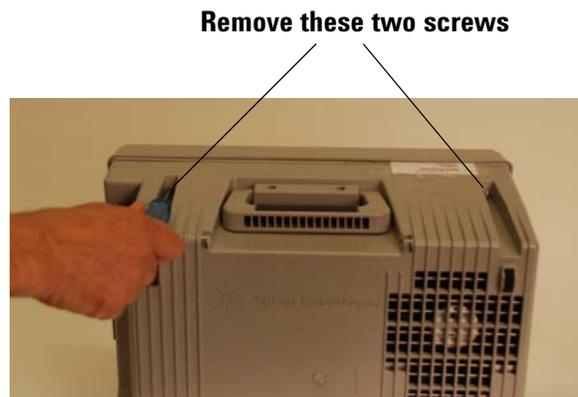

- 7 Remove the two Torx T15 screws located on the bottom rear cover of the oscilloscope - see Figure 6-3 and Figure 6-4).

Figure 6-3

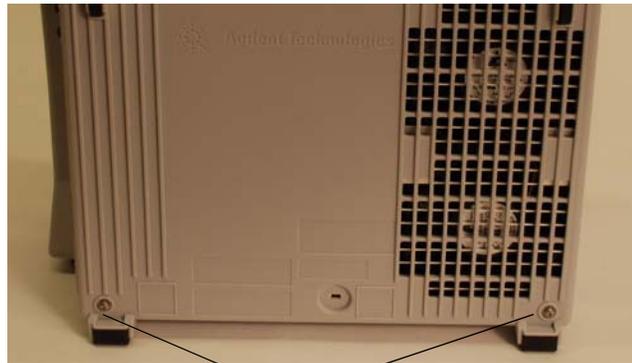

Remove these two screws

Figure 6-4



- 8 Put the oscilloscope on its face (be sure the front cover is on so the display does not get damaged) and then lift up on the rear cover to remove it from the chassis as shown in Figure 6-5.

Figure 6-5



- 9 To replace the rear cover and handle, reverse the above procedure.

**Chapter 6: Replacing Assemblies**  
**To remove and replace the handle and rear cover**

---

**CAUTION**

---

**PROPERLY TIGHTEN HANDLE AND SCREWS!**  
Tighten the handle screws to 21 in-lbs and the four rear cover screws to 18 in-lbs.


**To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board**

---

To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board

- 1 Disconnect the power cable and remove the handle and rear cover as described above in the section on removing the handle and rear cover.
- 2 Position the oscilloscope upright and disengage the series of tabs around the outside of the front bezzel as shown in Figure 6-6.
- 3 With the tabs disengaged, pull the front bezzel off as shown in Figure 6-7.

**Figure 6-6**

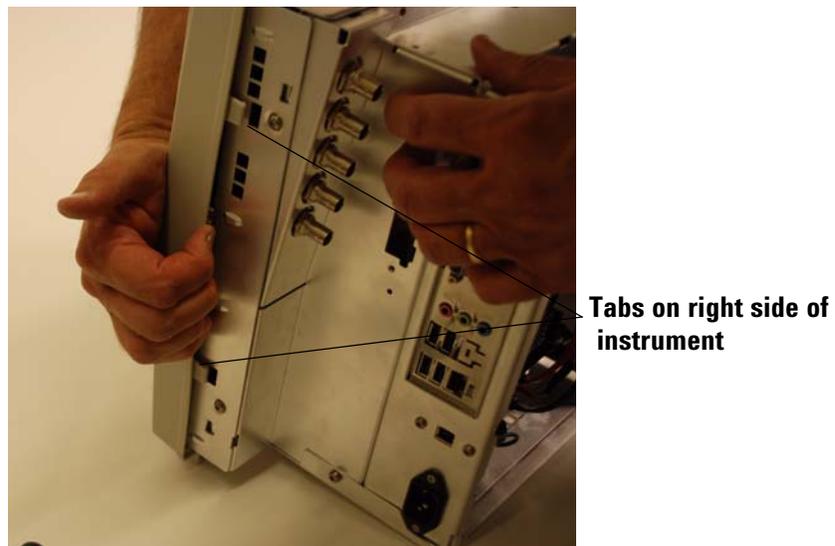

**Figure 6-7**



- 4 Pull up on each of the front panel knobs to remove them from the front panel keyboard as shown in Figure 6-8

## Chapter 6: Replacing Assemblies


To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board

Figure 6-8



- 5 Remove the T10 screw from the bottom of the front panel keyboard near the front panel USB ports as shown in Figure 6-9. When you are putting this screw back in during reassembly, tighten to 5 in-lbs.

Figure 6-9

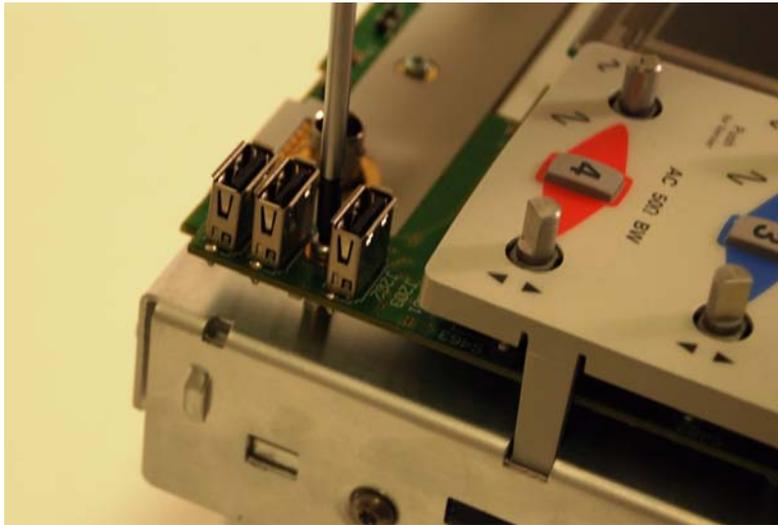

- 6 Disengage the three tabs located on the outside edge of the plastic piece covering the front panel keyboard as shown in Figure 6-10.

To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board


Figure 6-10



**Disengage three tabs**

- 7 There are two tabs on the edge closest to the touchscreen that need to be disengaged. To disengage the one near the top of the oscilloscope, look down the edge from the top and press in on the tab (meaning press straight towards the bottom of the oscilloscope) with a flathead screwdriver while pulling up on the plastic keyboard cover / keyboard. The plastic piece and keyboard will not come all the way off because you need to repeat this procedure for the bottom tab (look along the inner edge from the bottom, push in on the bottom tab (meaning push towards the top of the oscilloscope), and then pull up on the plastic keyboard cover / front panel keyboard). Figure 6-11 shows a picture of performing this procedure on the upper tab.

Figure 6-11

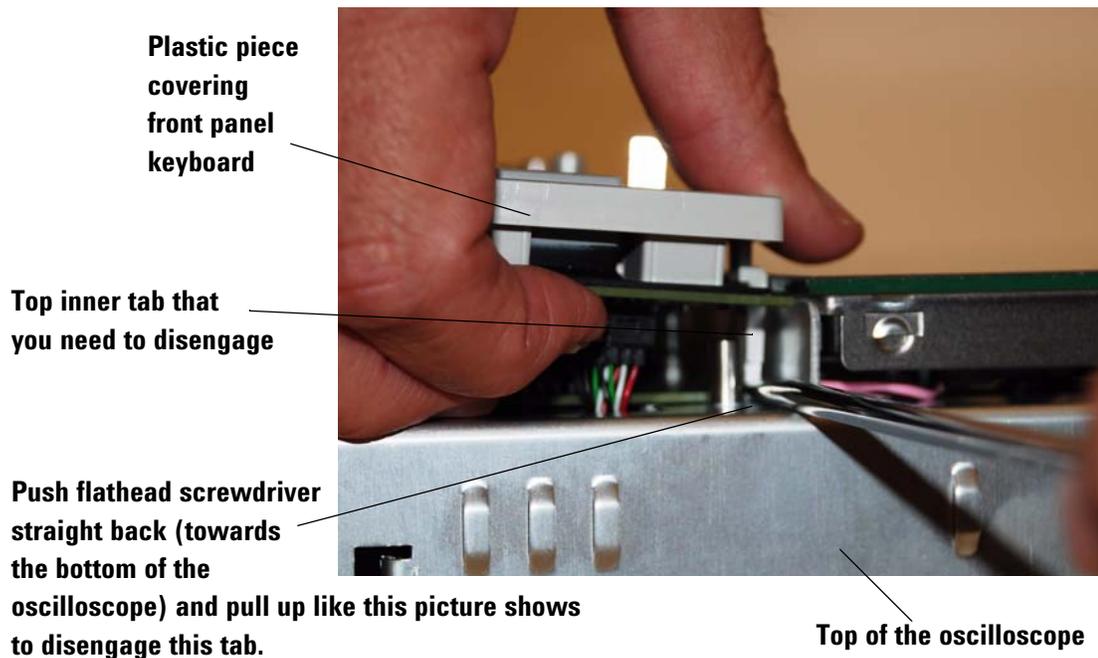


## Chapter 6: Replacing Assemblies

To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board

- 8 Once the two inner tabs and three outer tabs have been disengaged, pull the plastic cover / front panel keyboard up from the bottom, tilting it towards the top because there is a cable connected to the top of the front panel keyboard (see Figure 6-12).


Figure 6-12

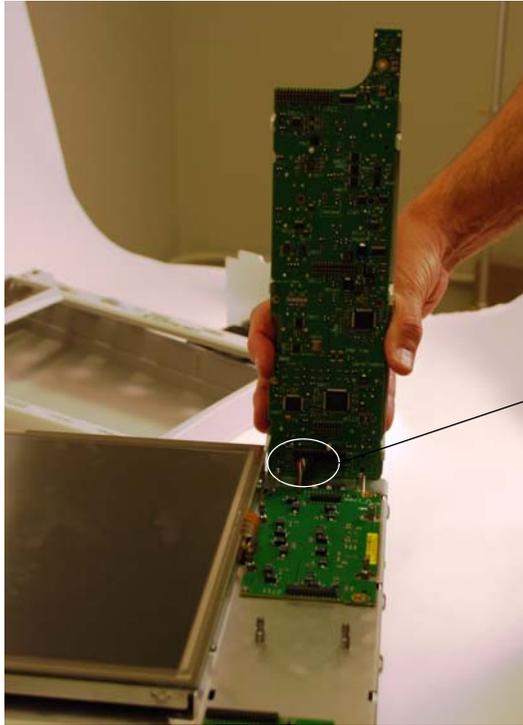

This is where the cable is connected to the front panel keyboard

- 9 Disconnect the cable connected to the front panel keyboard. Please note that there are two similar connections right next to each other. When you reconnect this cable, it goes in the connection closest to the touchscreen (see Figure 6-13).

Figure 6-13

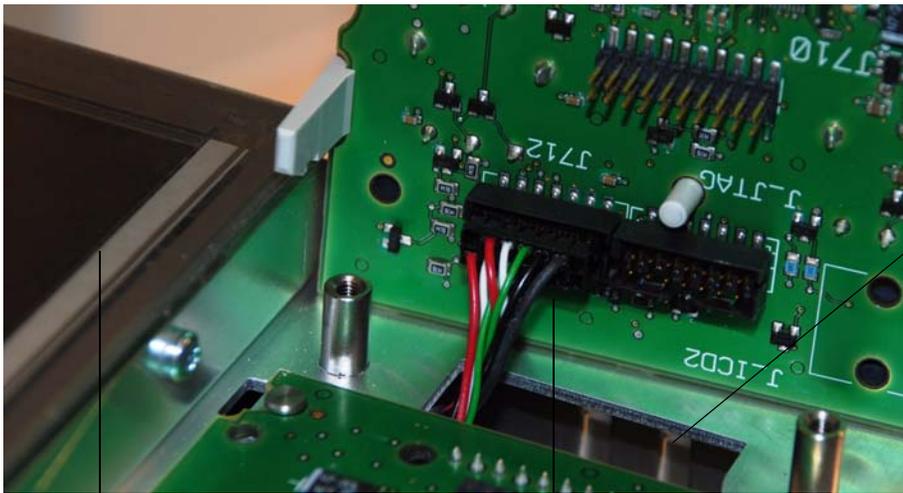

Touchscreen

Cable plugs into the connection closest to the touchscreen

Be sure that this cable does not fall through this opening. When you reattach the cable to the front panel keyboard, you will need it to be accessible. If it does fall through the opening then either use tweezers to get it or open up the front chassis as described in Step 15


To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board

- 10 The next step is to remove the front panel keyboard from the plastic covering. There are a series of six tabs around the outside edge holding the plastic covering to the keyboard. Disengage all of these and then separate the two pieces as shown in Figure 6-14 and Figure 6-15.

Figure 6-14



Figure 6-15

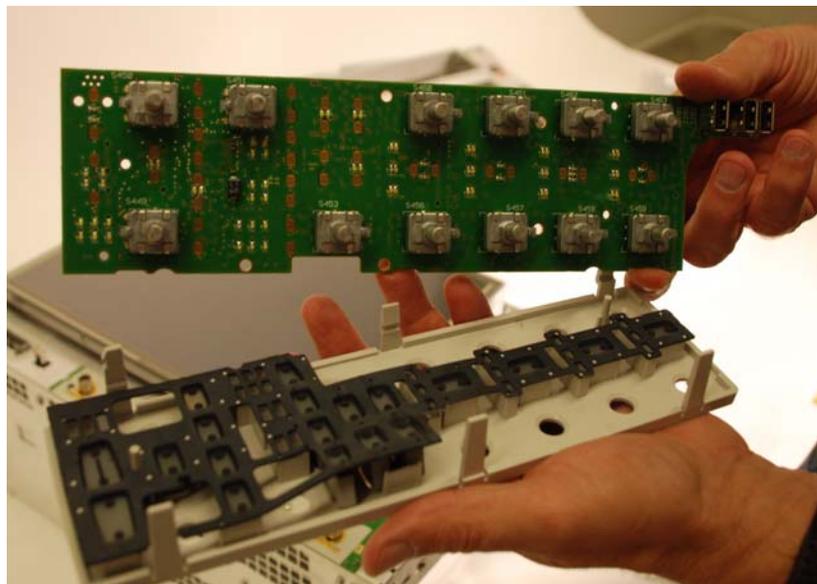


- 11 If you are replacing the front panel keyboard, please note that the front panel keyboard and the breakaway board that is about to be discussed come attached together. You have to break them apart and then use the two pieces. The break occurs down beneath the USB ports on the front panel keyboard.
- 12 There are four latches that connect the breakaway board to the sheet metal. To remove the breakaway board that was located underneath the front panel keyboard, pull it directly away from the touchscreen to disengage these latches and then pull up on the board as shown in Figure 6-16.

## Chapter 6: Replacing Assemblies


To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board

Figure 6-16

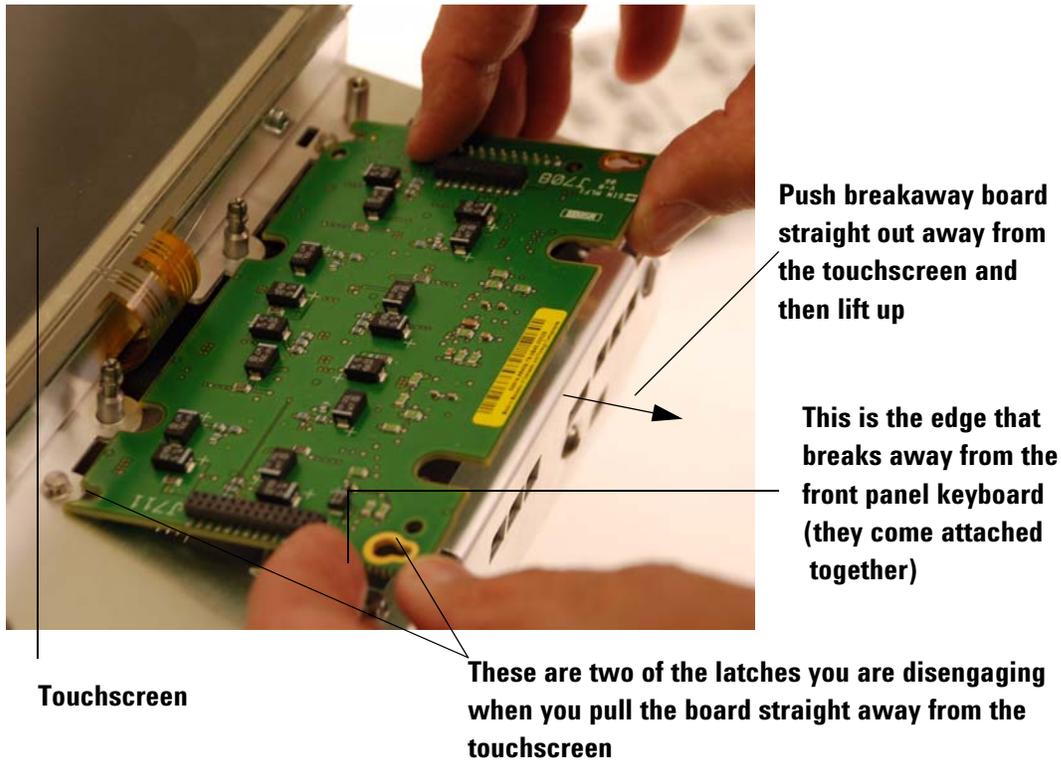

- 13 There is a cable you will need to disconnect from the back of the breakaway board (see Figure 6-17).

Figure 6-17

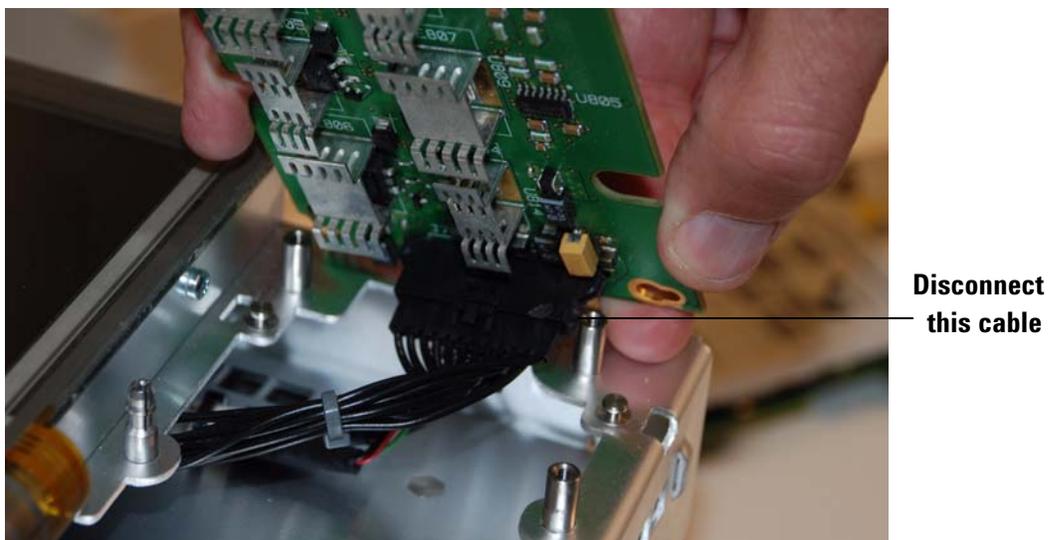


- 14 To remove the Autoprobe board, remove the two T10 screws and then slide the board to the right to disengage the two latches on either side of the board (see Figure 6-18). **When reattaching the Autoprobe board, do not fully tighten the two T10 screws until you have reattached the front panel keyboard to the oscilloscope and attached it to the Autoprobe**

To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board


board. You will need some room to work with and if you fully tighten the screws on the Autoprobe board, you will have none. Once the front panel keyboard is attached, tighten the Autoprobe screws to 5 in-lbs.

Figure 6-18

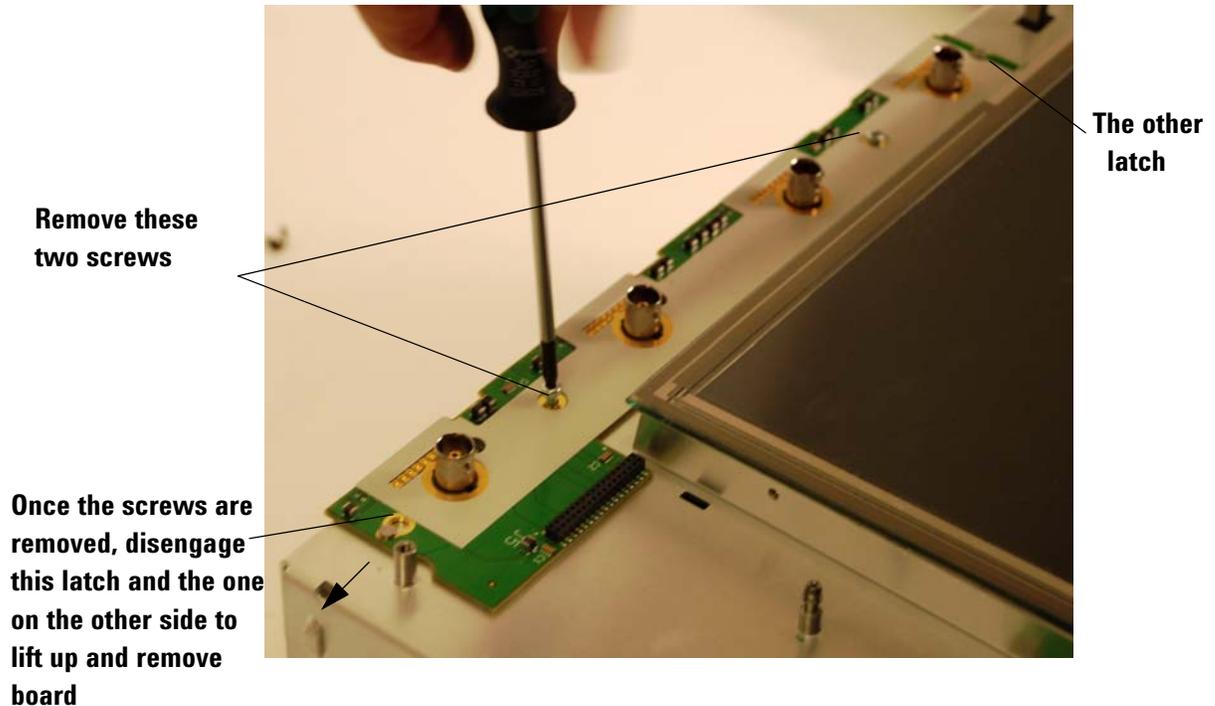

- 15 To remove the touchscreen, you will need to access the back side of the sheet metal it is attached to in order to disconnect cables. There are two T15 screws on either side of the oscilloscope that need removed (Figure 6-19) and then the front chassis will open up as shown in Figure 6-20.

Figure 6-19

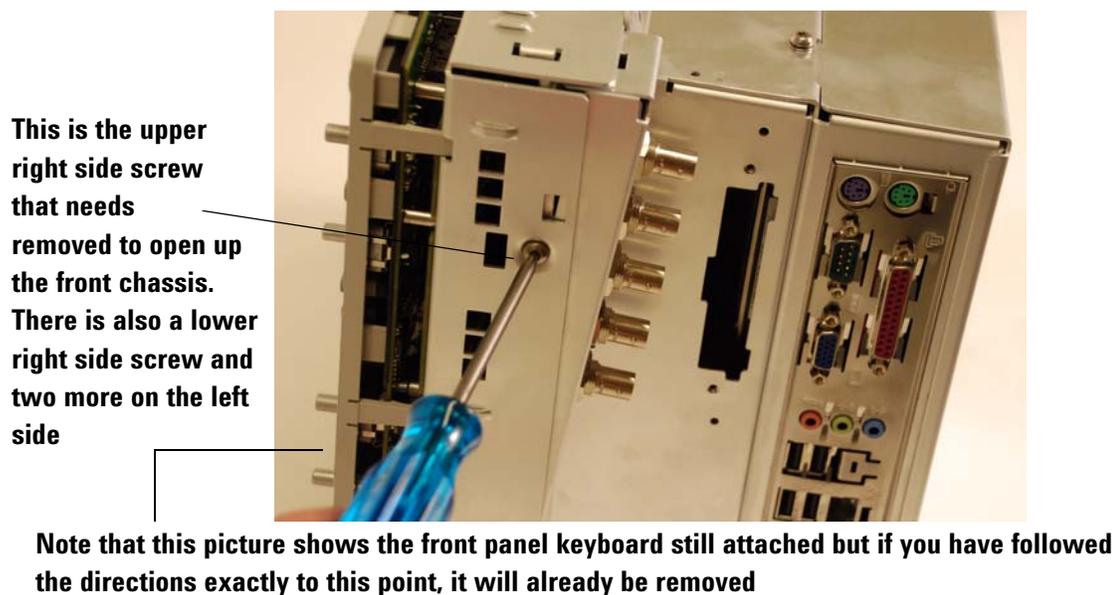


## Chapter 6: Replacing Assemblies

To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board

Figure 6-20

The touchscreen is mounted on the other side of this sheet metal

Main oscilloscope body

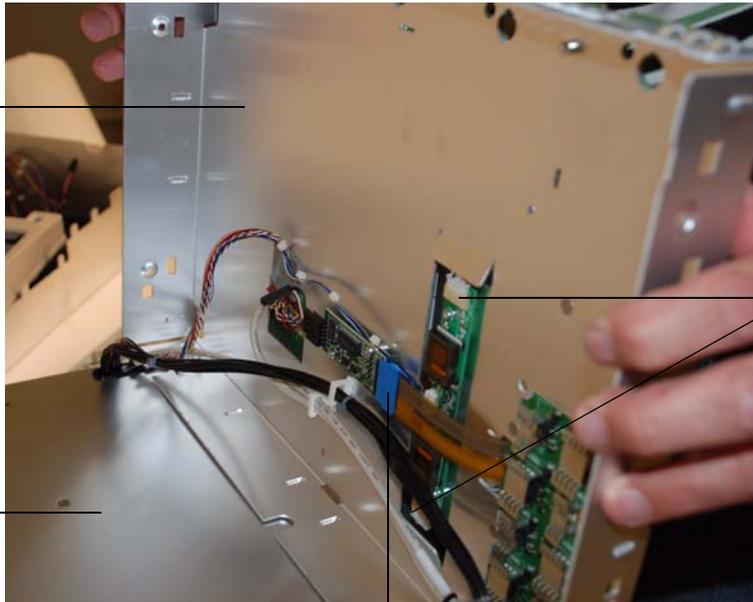


Remove these two display cables (white connectors) from the inverter board because they are connected to the touchscreen display

Disconnect this cable (the one with the blue connector) because it is connected to the touchscreen

Figure 6-21

Also disconnect this display cable

These are the three cables mentioned in the figure immediately above that need disconnected before you remove the touchscreen display

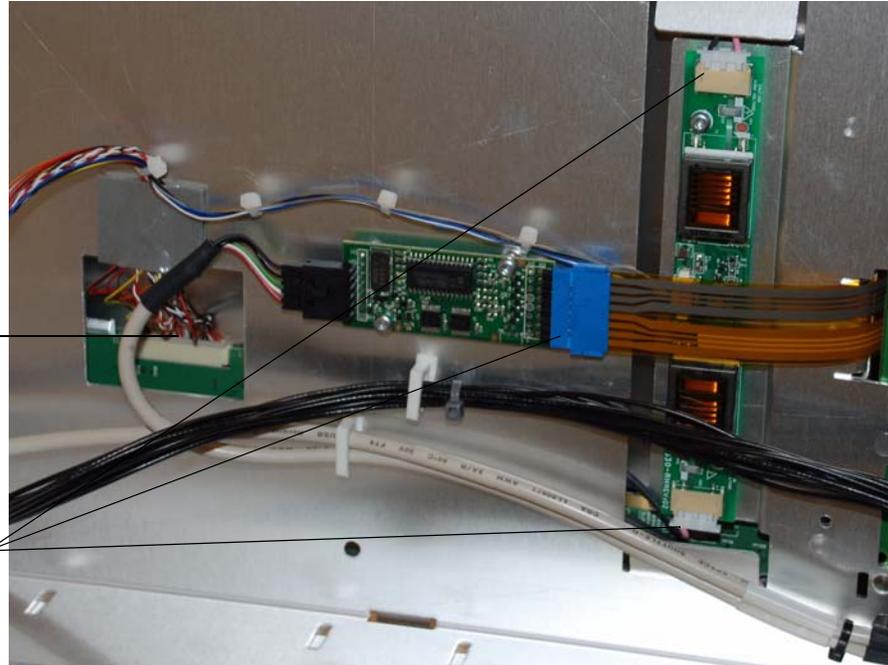


- 16 Disconnect the touchscreen cable (the one with the blue connector) and the three display cables (the ones with the white connectors) as shown in Figure 6-20 and Figure 6-21.

**To remove and replace the front panel bezzel, front panel keyboard, touchscreen, and Autoprobe board**

- 17 Remove the four T10 screws that attach the touchscreen to the sheet metal (there are two on each side of the touchscreen - right and left). See Figure 6-22. When reattaching these screws, tighten to 5 in-lbs.

Figure 6-22

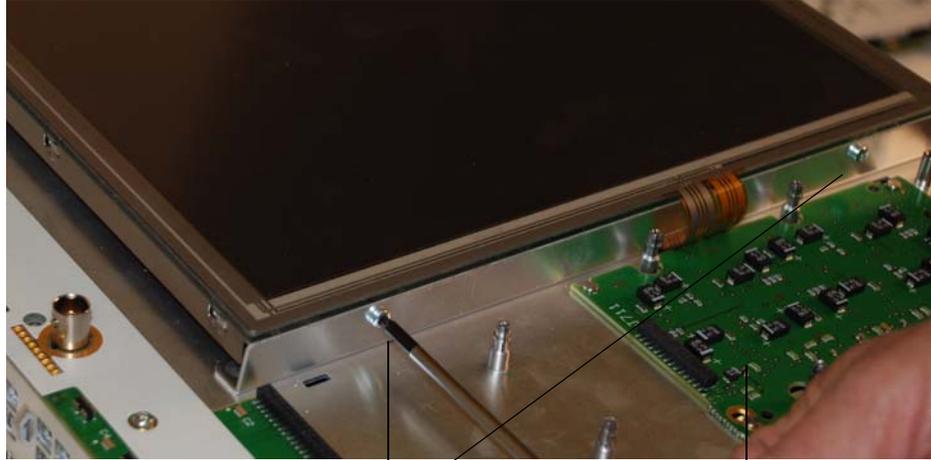

**Remove these two screws and the two on the other side of the touchscreen**

**This board should already be removed so you can pull the touchscreen cable through from the other side of the sheet metal**

- 18 Final Reassembly Note: When performing these procedures in reverse to reassemble the instrument, be sure to fully press in on all edges (inner and outer edges) when you place the front bezzel back on the oscilloscope.
- 19 Final Reassembly Note: Before reassembling the front chassis, be sure all cables are pulled through their appropriate openings and/or reattached to any boards located on the back side of the front chassis. Once you close the chassis, it can be difficult to reach into these small holes and pull the cables through.
- 20 Final Reassembly Note: Before placing the rear cover back on the oscilloscope, be sure to reattach the removable hard drive cover.

Figure 6-23

**Removable hard drive cover**



**Chapter 6: Replacing Assemblies**  
**To remove and replace the backlight inverter board**

---

**To remove and replace the backlight inverter board**

Use this procedure to remove and replace the backlight inverter board. When necessary, refer to other removal procedures. The graphics in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.

---

**WARNING**

**SHOCK HAZARD!**

The backlight inverter assembly, which is mounted behind the flat-panel display, operates at high voltages. **DO NOT** handle this assembly while it is in operation.

- 1 Disconnect the power cable and remove the handle and rear cover.
- 2 Remove the front panel bezzel as described in the beginning of the previous section.
- 3 Open up the front chassis by removing the four T15 screws (two are located on the right side of the oscilloscope and two are located on the left side). See Figure 6-24.


**Figure 6-24**

**This is the upper right side screw that needs removed. There is also one below it and then two screws on the left side of the oscilloscope in the same relative locations**




- 4 Pull the front panel chassis away from the main chassis as shown in Figure 6-25.

Figure 6-25

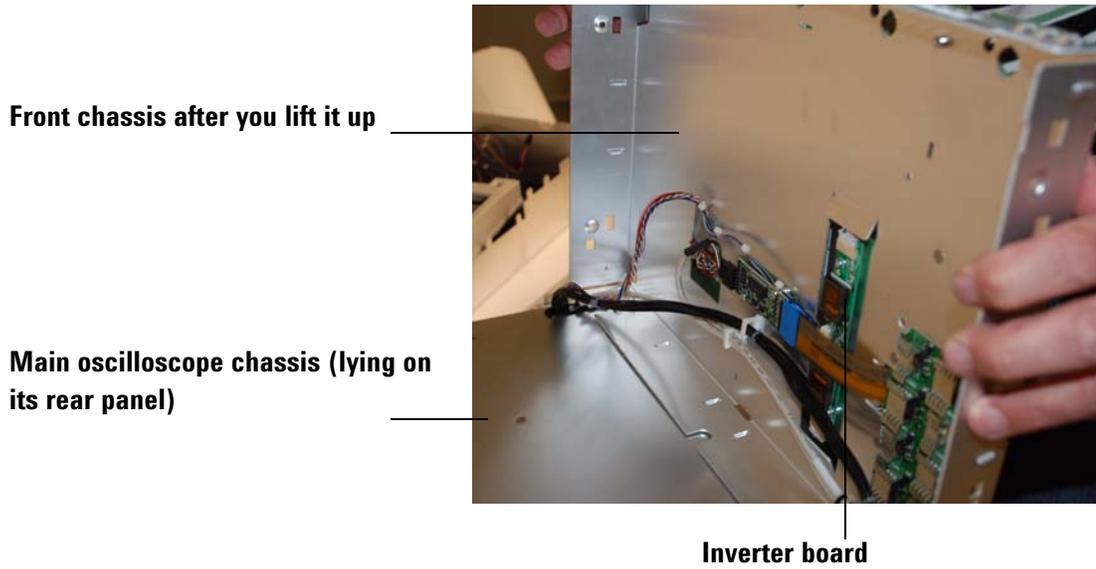

- 5 Disconnect the cables from the backlight inverter board and remove the two T10 screws (shown in Figure 6-26). You may need to temporarily remove the touch screen cable (with the blue connector) in order to remove and replace the inverter board.

Figure 6-26

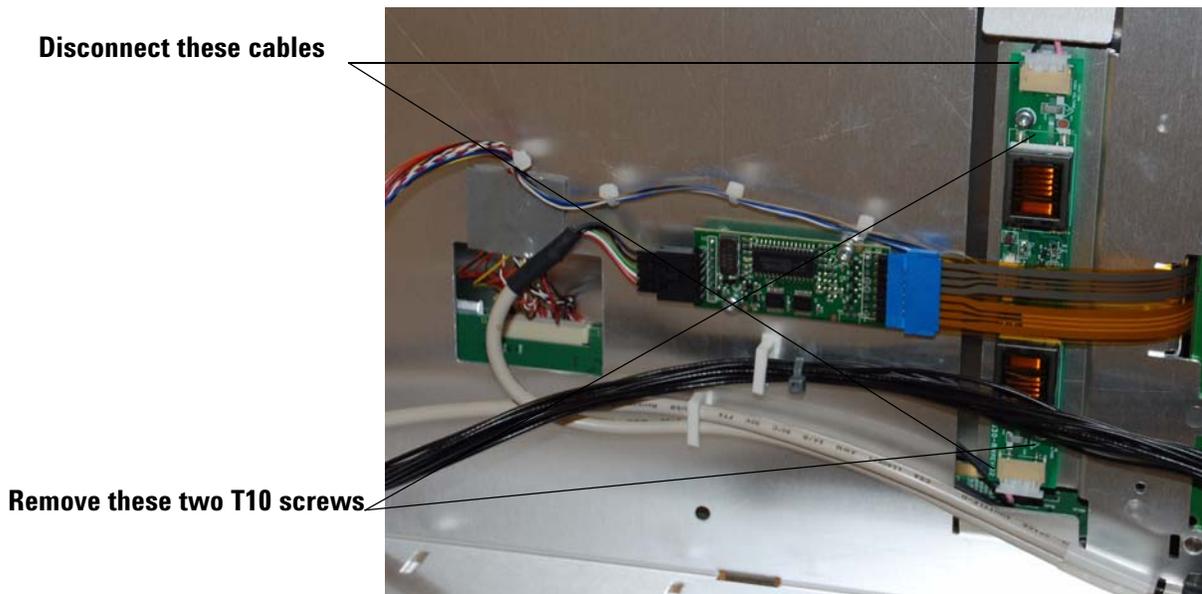

- 6 When you replace the inverter board, tighten the screws to 5 in-lbs and be sure to align the board over the pems.

**Chapter 6: Replacing Assemblies**  
**To remove and replace the touch screen controller board**

---

**To remove and replace the touch screen controller board**

Use this procedure to disassemble and reassemble the touch screen controller board. When necessary, refer to other removal procedures. The graphics in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.

- 1 Disconnect the power cable and remove the handle and rear cover.
- 2 Remove the front panel bezzel as described in a previous section.
- 3 Open up the front chassis by removing the four T15 screws (two are located on the right side of the oscilloscope and two are located on the left side). See Figure 6-27.


**Figure 6-27**

**This is the upper right side screw that needs removed. There is also one below it and then two screws on the left side of the oscilloscope in the same relative locations**




- 4 Pull the front panel chassis away from the main chassis as shown in Figure 6-28.

Figure 6-28

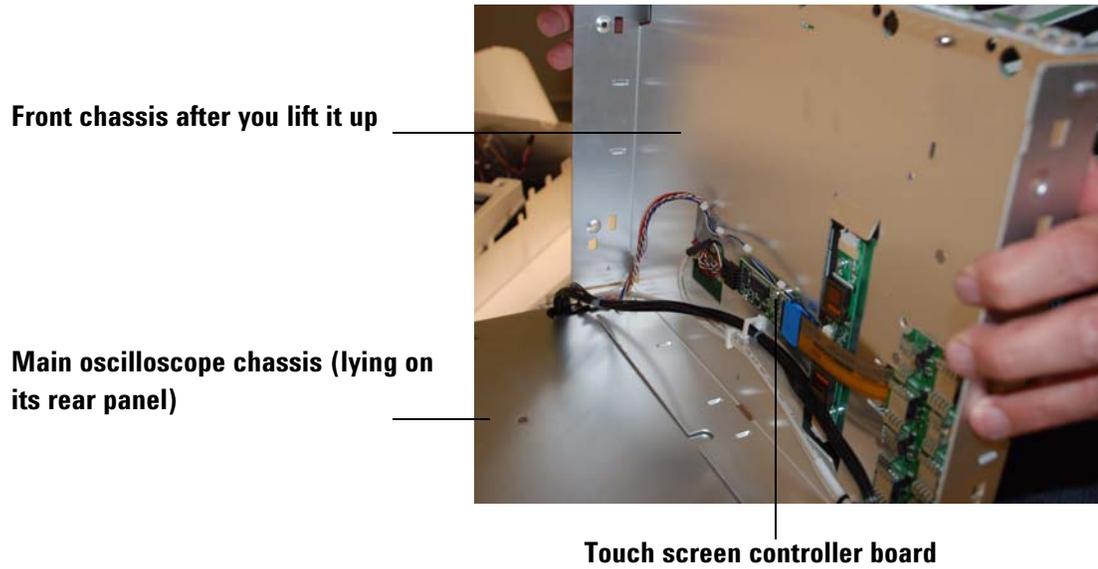

- 5 Disconnect the cables from the touch screen controller board and remove the two T10 screws (shown in Figure 6-29).

Figure 6-29

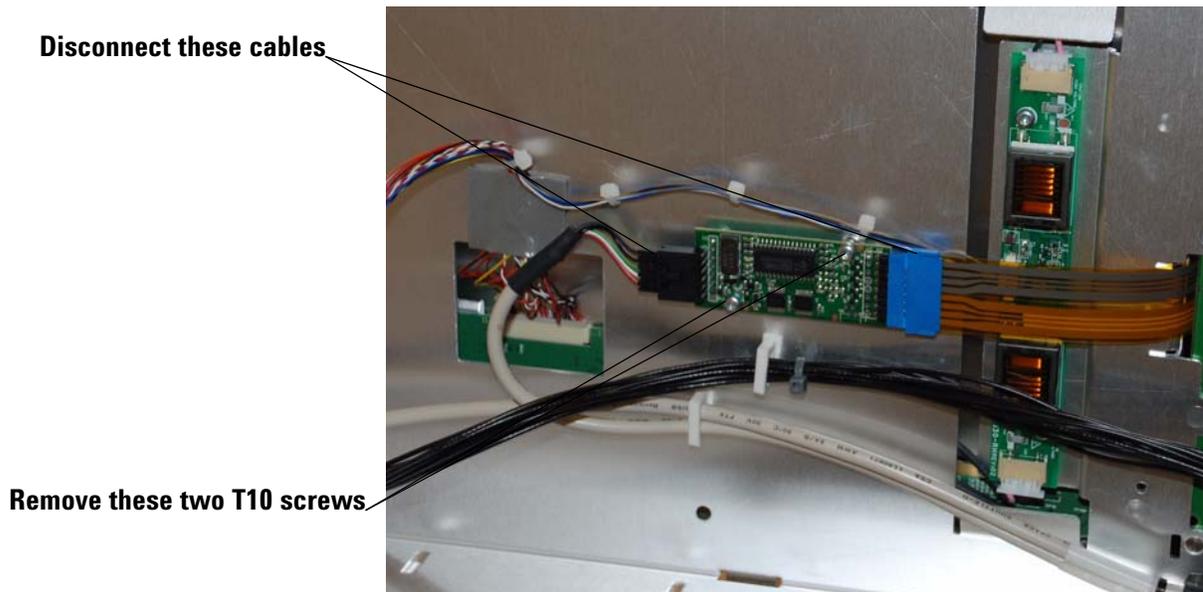

- 6 When you replace the touch screen controller board, tighten the screws to 5 in-lbs and be sure to align the board over the pems.

**Chapter 6: Replacing Assemblies**  
**To remove and replace the motherboard**

---

To remove and replace the motherboard

- 1 Disconnect the power cable and remove the handle and rear cover as shown in a previous section.
- 2 Remove the rear sheet metal by removing one T15 screw on top and two in the back. See Figure 6-30, Figure 6-31, and Figure 6-32.

**Figure 6-30**



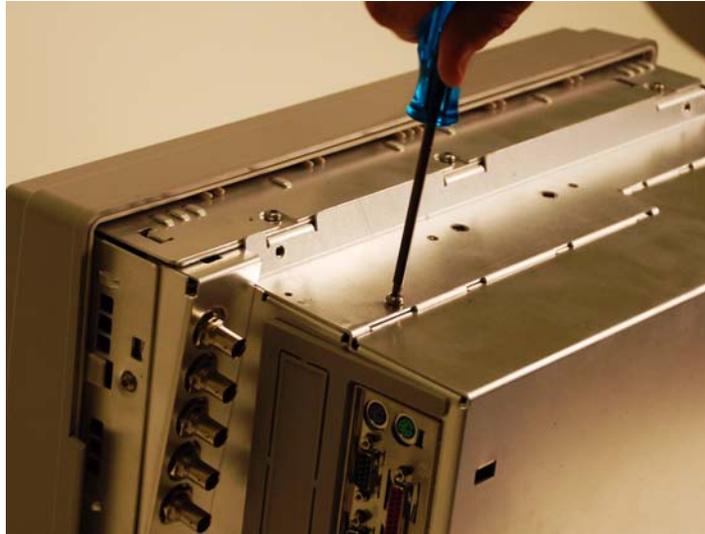


Figure 6-31

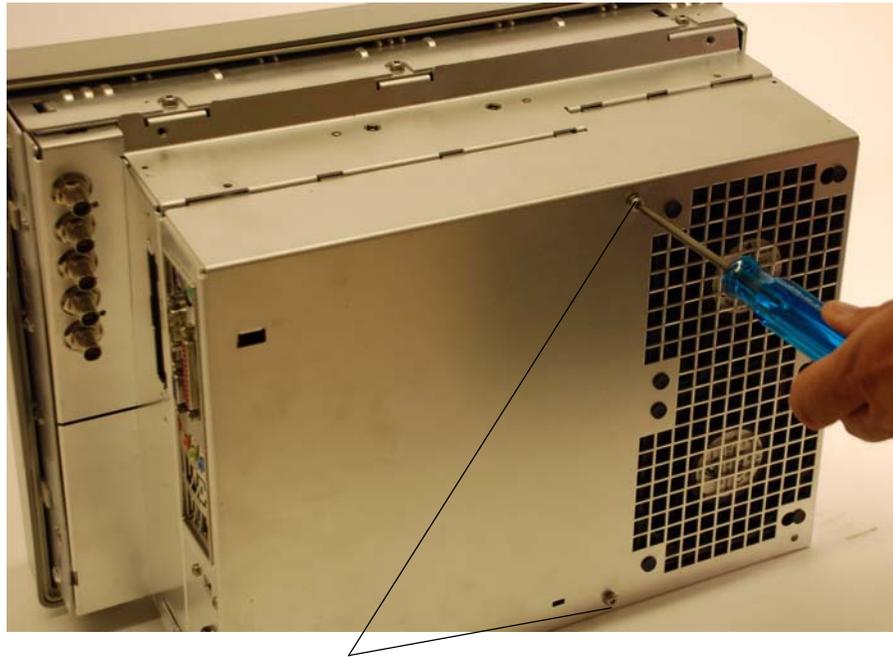

Remove these two screws from the back

Figure 6-32

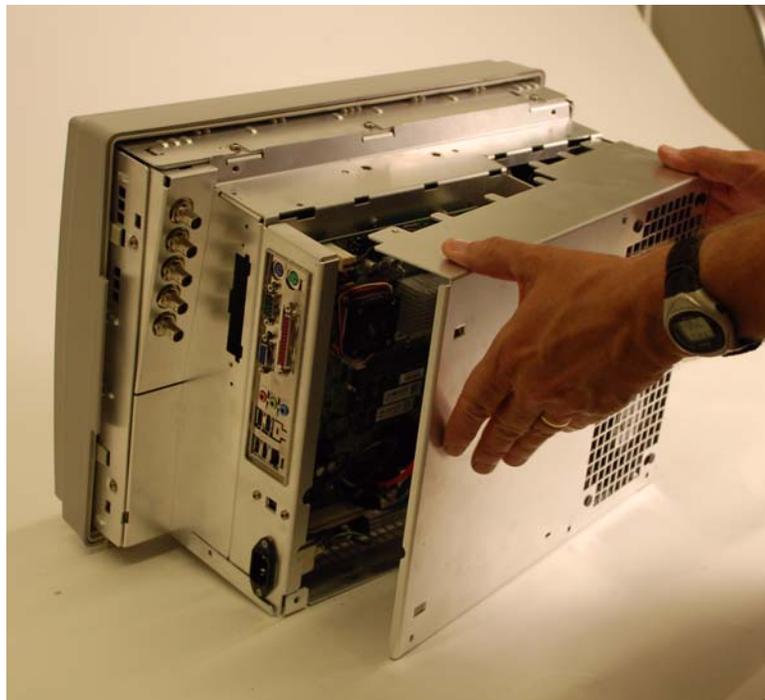

- 3 Disconnect all the cables from the motherboard.
- 4 Remove the Torx T10 screws attaching the motherboard to the frame (Figure 6-33 shows what the motherboard looks like with the rear cover of the oscilloscope removed and the cables still attached)

**Chapter 6: Replacing Assemblies**  
**To remove and replace the motherboard**

**Figure 6-33.**



- 5 Pull the motherboard towards the front panel and then lift out.
- 6 To reassemble the motherboard, reverse the above procedure.

## To remove and replace the acquisition board assembly


Use this procedure to remove and replace the acquisition board assembly. When necessary, refer to other removal procedures. The graphics in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.

- 1** Disconnect the power cable and remove the rear oscilloscope cover as described in previous sections.
- 2** Remove the screws show in Figure 6-34, Figure 6-35, Figure 6-36, and Figure 6-37 to remove the sheet metal separating the motherboard compartment from the acquisition board compartment.

**Chapter 6: Replacing Assemblies**  
**To remove and replace the acquisition board assembly**

**Figure 6-34**

**First remove these three screws**

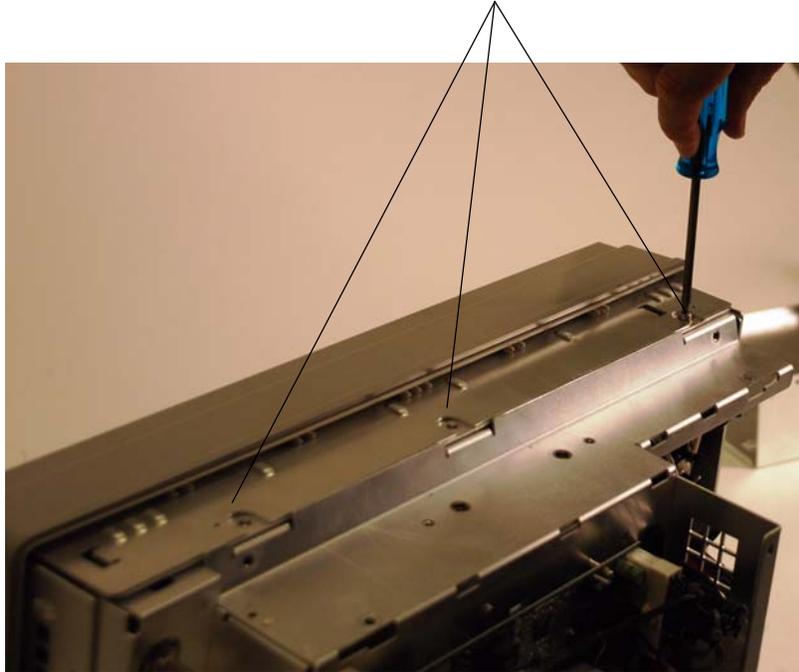


**Figure 6-35**

**Then remove this screw**




Figure 6-36

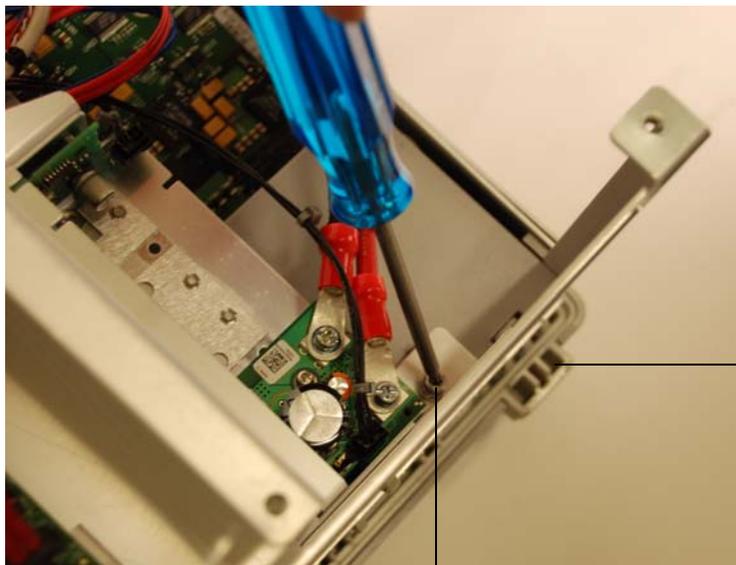

This is the lower right hand side of the oscilloscope (as viewed from the rear of the oscilloscope).

Then remove this screw

Figure 6-37

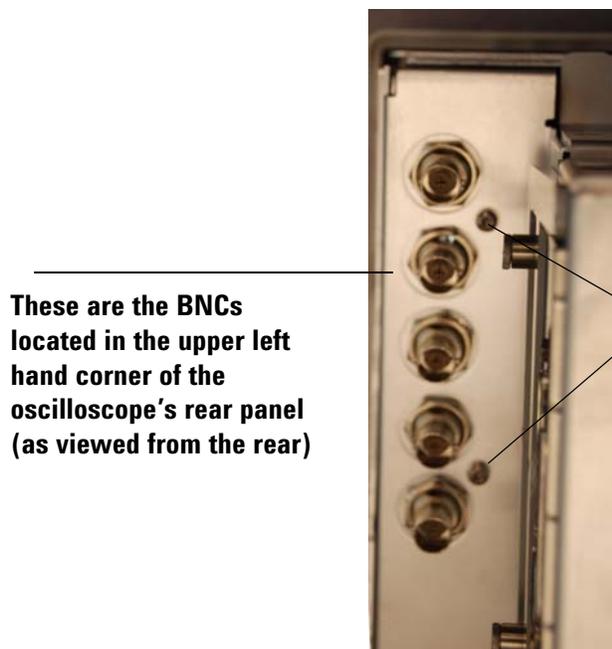


These are the BNCs located in the upper left hand corner of the oscilloscope's rear panel (as viewed from the rear)

Finally, remove these two screws

- 3 Place the oscilloscope on its face (make sure the front panel cover is installed) and lift the piece of sheet metal up to access the acquisition board (as shown in Figure 6-38).

**Chapter 6: Replacing Assemblies**  
**To remove and replace the acquisition board assembly**

**Figure 6-38**

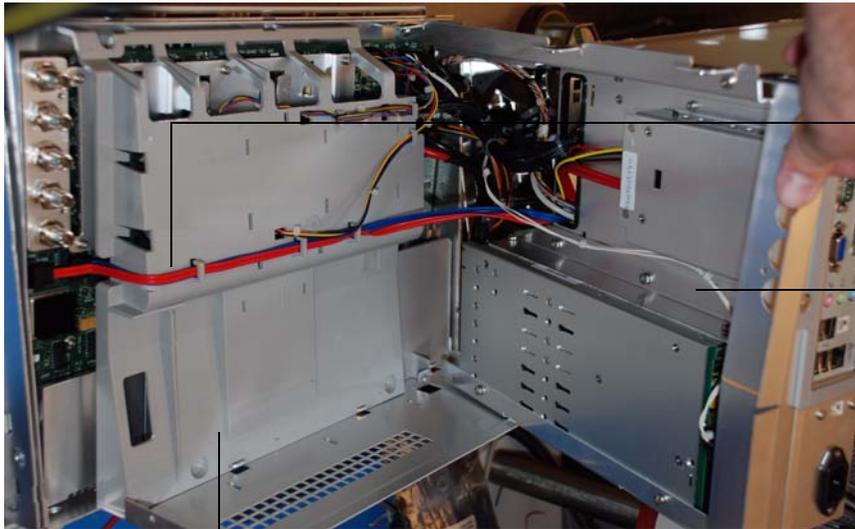


**These are the SATA cables that need removed before you remove the air diverters**

**This is the upper part that you lift up on (the motherboard is located on the other side of this piece of sheet metal)**

**This is the air diverter that is above the acquisition board**

- 4 Disconnect the SATA cables (see Figure 6-38) and then remove the air diverter that covers the acquisition board (see Figure 6-38).
- 5 Place the oscilloscope so that it is no longer resting on its front panel, but is instead sitting on its feet (in its normal operating orientation). Then remove the screws located next to each BNC input on the front panel (Figure 6-39).

**Figure 6-39**

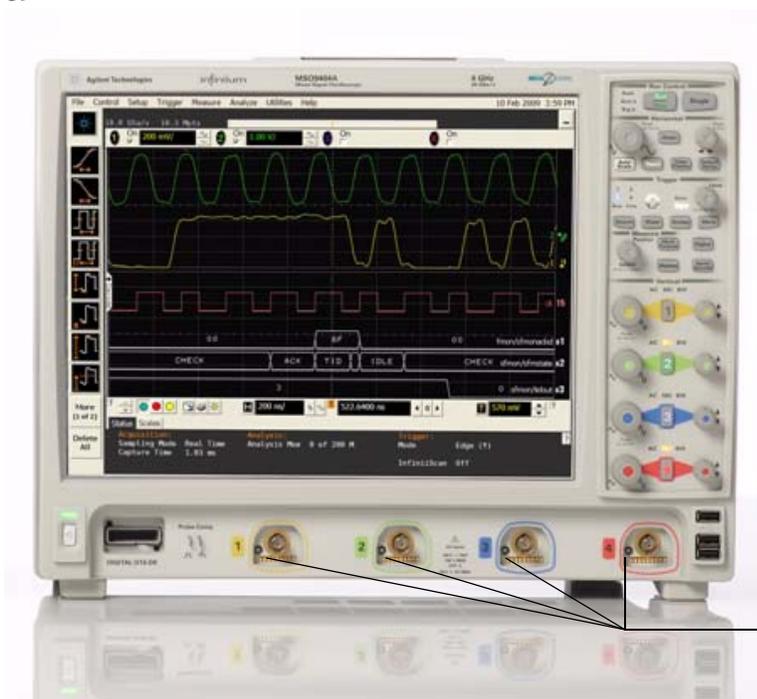

**These are the four screws by the front panel BNCs that need removed in order to remove the acquisition board.**

- 6 Then place the oscilloscope so it is once again sitting on its front side (use the front panel cover), disconnect any remaining cables connected to the acquisition board, remove all screws

- holding the acquisition board to the sheet metal, and then lift the acquisition board out.
- 7 To reassemble the acquisition assembly, reverse these instructions.

**Chapter 6: Replacing Assemblies**  
**To set the calibration factors after replacing the acquisition board**

---

**To set the calibration factors after replacing the acquisition board**

The following procedure must be performed after replacing the acquisition board. This procedure only needs to be performed once after the acquisition board is replaced.

**Let the oscilloscope warm up before testing**

**The oscilloscope under test must be warmed up (with the oscilloscope application running) for at least 30 minutes prior to the start of any performance test.**

**Equipment Required**

Description	Critical Specifications	Recommended Model/ Part Numbers
Digital Multimeter	No substitute	Agilent 34411A
10 MHz Signal Source (required for time scale calibration)	Frequency accuracy better than 0.4 ppm	Agilent 53131A with Opt. 010
Cable Assembly	No substitute	Agilent 54855-61620
Cable Assembly	USB Cable	
Cable Assembly	50 $\Omega$ characteristic impedance BNC (m) connectors ~ 36 inches (91 cm) to 48 inches (122 cm) long	Agilent 8120-1840
Adapter	BNC Barrel (f)(f)	Agilent 1250-0080
Adapter	BNC shorting cap	Agilent 1250-0929
Adapter (Qty. 2)	No substitute	Agilent 54855-67604
Adapter	BNC (f) to dual banana	Agilent 1251-2277

**1 Perform self tests**

- a Exit the oscilloscope application.
- b Right click on the Agilent Infiniium Application icon on the Desktop and select Properties. In the Target field, enter the following string (note that -service is outside of the parentheses): "c:\Program Files\Agilent\Infiniium\agscope.exe" -service. Then Press OK and double-click on the Infiniium icon to open the oscilloscope application.

While the oscilloscope is warming up, run the self-test to ensure that the hardware is functioning properly. To run the self-test:

- c Pull down the Utilities menu and select Self Test.
- d Select Scope Self Test from the Self Test list.
- e Click on Start Self Test to start the self test procedure.

If any of the self-tests fail, ensure that the failure is diagnosed and repaired before calibrating and testing performance.

**2 Performance calibration.**

After the warm up period, calibrate the oscilloscope.

- a Connect the USB cable to the USB port located on the rear panel of the Digital Multimeter and to a USB port on the oscilloscope (it is recommended that you use one of the side panel USB ports on the oscilloscope instead of a front panel port).
- b Connect the BNC to dual banana adapter to the Digital Multimeter's input (the dual banana side of the adapter is inserted into the DMM). Be sure the side labeled GND is connected to the negative terminal of the dual banana adapter. Connect the BNC cable to the BNC side of this

adapter. The other end of the BNC cable will end up being connected to various ports during the calibration. The calibration instructions on the oscilloscope will instruct you in this regard.

- c** Pull down the Utilities menu and select Calibration.
  - d** Uncheck to Cal Memory Protect box to allow calibration.
  - e** Click on Start to start the calibration procedure.
- Follow the on-screen instructions as the calibration proceeds.

## Chapter 6: Replacing Assemblies

### To remove and replace the power supply

---

## To remove and replace the power supply

Use this procedure to remove and replace the power supply. When necessary, refer to other removal procedures. The graphics in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.

---


### WARNING

#### SHOCK HAZARD!

If the power supply is defective it could have a dangerous charge on some capacitors. This charge could remain for many days after removing power from the supply.

- 1 Disconnect the power cable and remove the rear cover.
- 2 Open up the acquisition board chamber by removing the sheet metal that separates the acquisition board from the motherboard (you can see how to do this in the acquisition assembly removal section).
- 3 The power supply is attached to the underside of this piece of sheet metal.


Figure 6-40

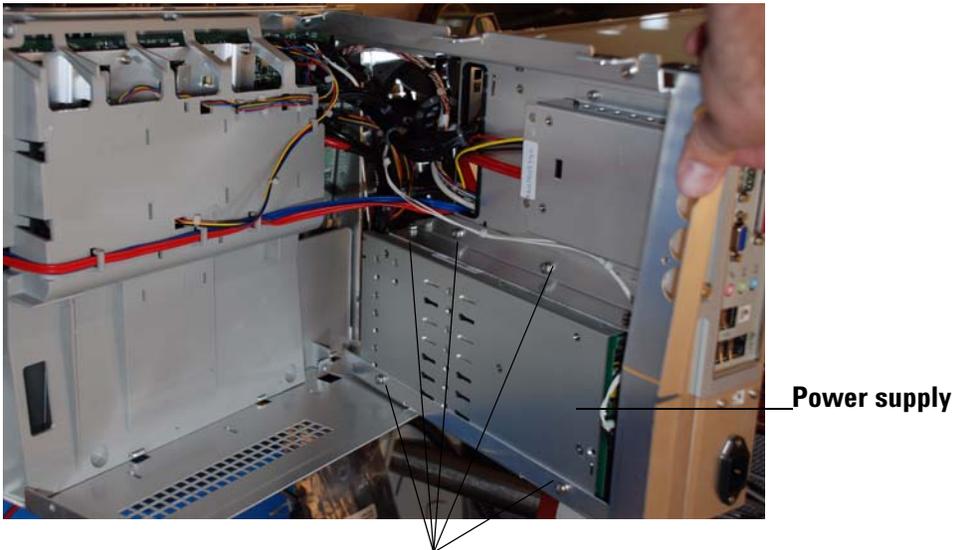

**Remove these screws to lift the power supply and its encasement out.**

- 4 Remove the screws shown in Figure 6-40 and lift the power supply encasement out of the oscilloscope.
- 5 Remove the connections to the power supply (Figure 6-41).

**Figure 6-41**

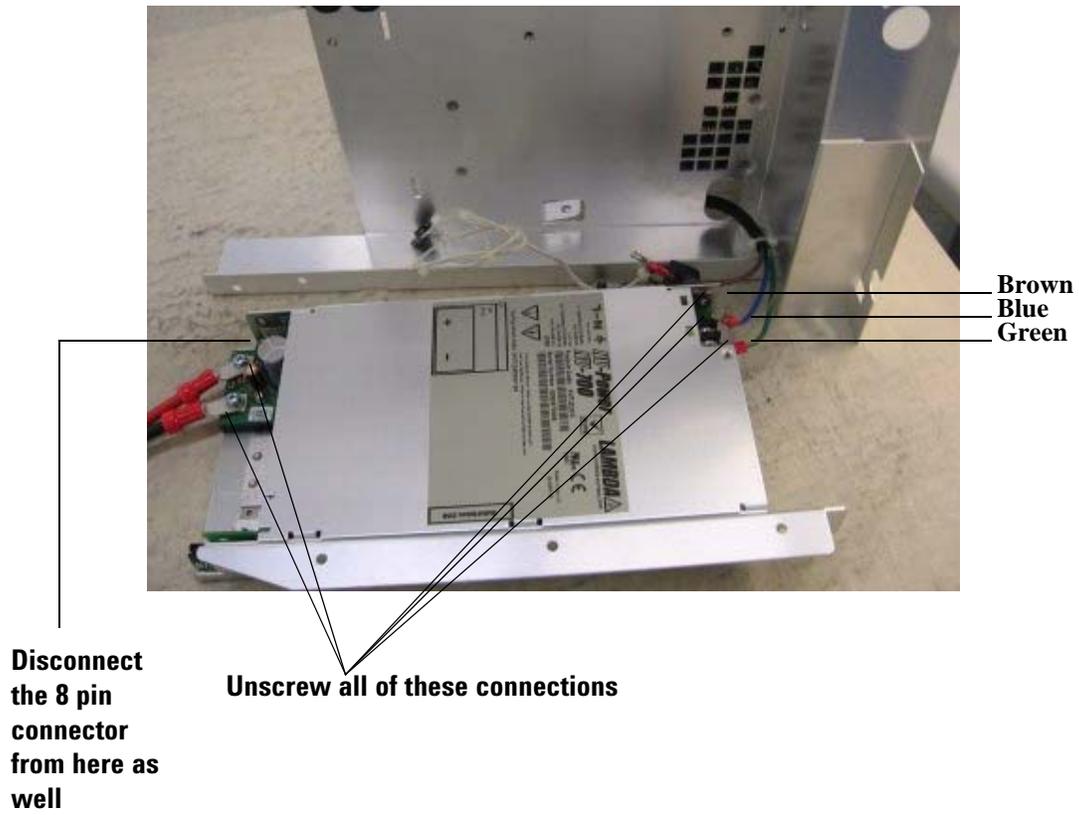

- 6 Remove the power supply from the bracket.

**Chapter 6: Replacing Assemblies**  
**To remove and replace the hard disk drive**


---

**To remove and replace the hard disk drive**

Use this procedure to remove and replace the hard disk drive. When necessary, refer to other removal procedures. The graphics in this chapter are representative of the oscilloscope at the time of this printing. Your unit may look different.

- 1 Disconnect the power cable and remove the rear cover.
- 2 Open up the acquisition chamber by removing the sheet metal that separates the motherboard section from the acquisition board section (refer to the Acquisition Assembly Removal section for instructions on how to do this).
- 3 The hard drive is attached to the under side of this piece of sheet metal.
- 4 Disconnect the SATA cables from the hard disk drive, remove the screws attaching it to the sheet metal, and remove it from the oscilloscope.

**Figure 6-42**

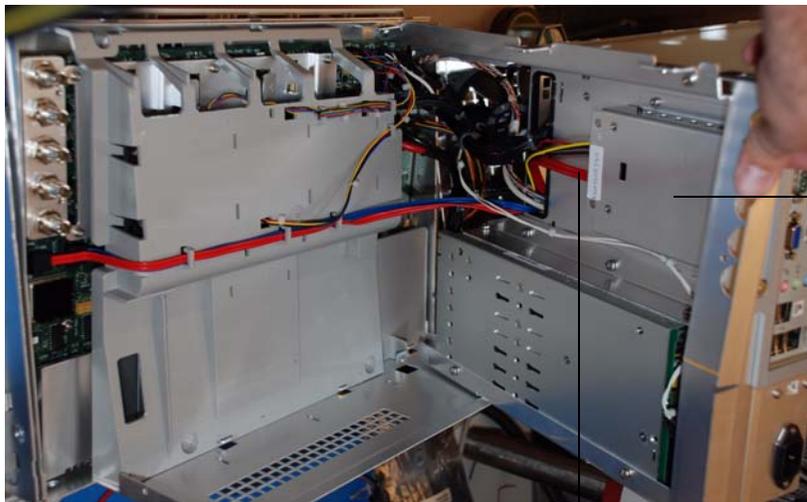

Hard disk drive

These are the SATA cables you need to disconnect from the hard disk drive

Ordering Replaceable Parts 146  
    Listed Parts 146  
    Unlisted Parts 146  
    Direct Mail Order System 146  
    Exchange Assemblies 146  
Exploded Views 147  
Exploded Views 147  
Replaceable Parts List 151

---

# Replaceable Parts

This chapter of the *Agilent Technologies Infiniium Oscilloscope Service Guide* includes information for ordering parts. Service support for this oscilloscope is replacement of parts to the assembly level. The replaceable parts include assemblies and chassis parts.

---

## Ordering Replaceable Parts

### Listed Parts

To order a part in the parts list, quote the Agilent Technologies part number, indicate the quantity desired, and address the order to the nearest Agilent Technologies Sales Office.

### Unlisted Parts

To order a part not listed in the parts list, include the oscilloscope part number, oscilloscope serial number, a description of the part (including its function), and the number of parts required. Address the order to the nearest Agilent Technologies Sales Office.

### Direct Mail Order System

Within the USA, Agilent Technologies can supply parts through a direct mail order system. There are several advantages to this system:

- Direct ordering and shipping from the Agilent Technologies parts center in California, USA.
- No maximum or minimum on any mail order. (There is a minimum amount for parts ordered through a local Agilent Technologies Sales Office when the orders require billing and invoicing.)
- Prepaid transportation. (There is a small handling charge for each order.)
- No invoices.

In order for Agilent Technologies to provide these advantages, please send a check or money order with each order.

Mail order forms and specific ordering information are available through your local Agilent Technologies Sales Office. Addresses and telephone numbers are located in a separate document shipped with the manuals.

### Exchange Assemblies


Some parts used in this oscilloscope have been set up for an exchange program. This program allows the customer to exchange a faulty assembly with one that has been repaired, calibrated, and performance-verified by the factory. The cost is significantly less than that of a new part. The exchange parts have a part number in the form XXXXX-695XX.

After receiving the repaired exchange part from Agilent Technologies, a United States customer has 30 days to return the faulty assembly. For orders not originating in the United States, contact the local Agilent Technologies service organization. If the faulty assembly is not returned within the warranty time limit, the customer will be charged an additional amount. The additional amount will be the difference in price between a new assembly and that of an exchange assembly.

---


Exploded Views

Front Frame and Front Panel

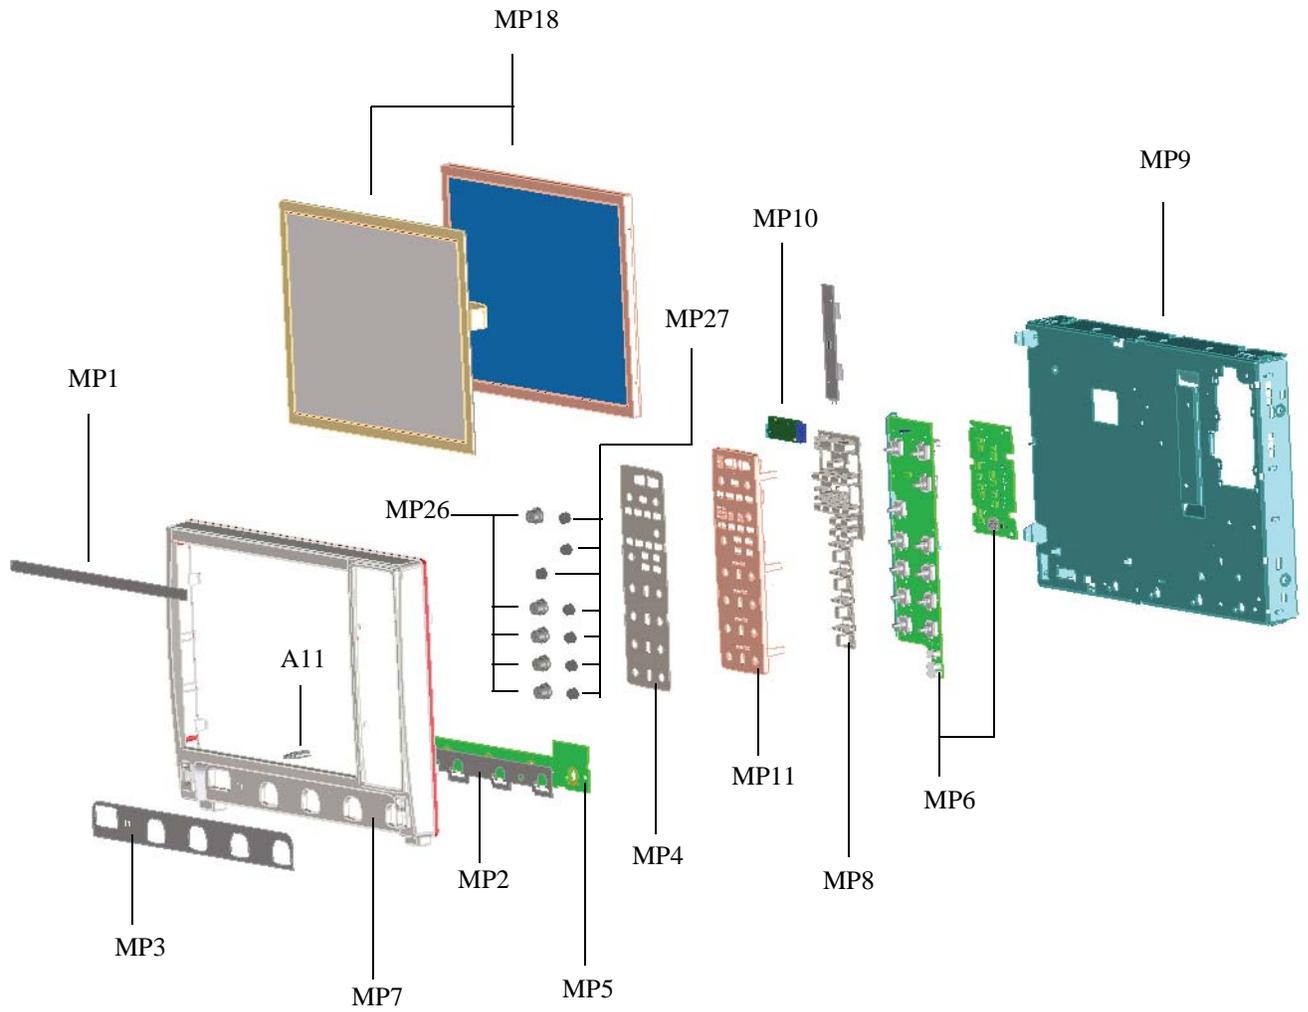


# Chapter 7: Replaceable Parts Exploded Views

## Rear Compartment Assembly

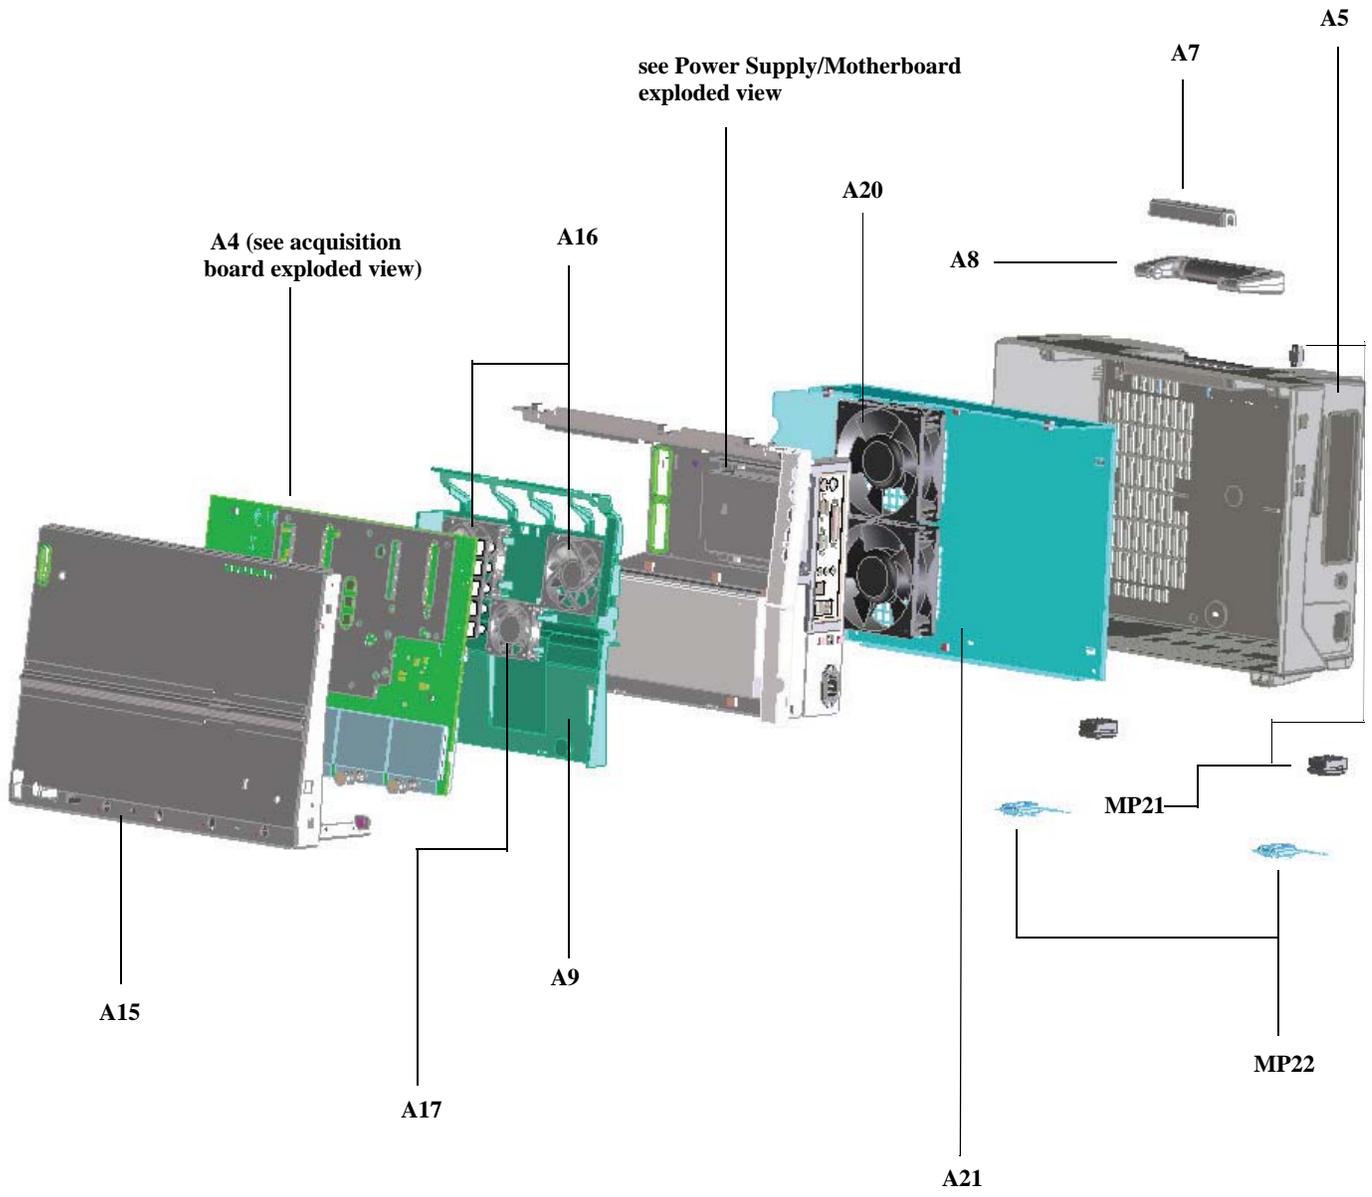


Power Supply and Motherboard

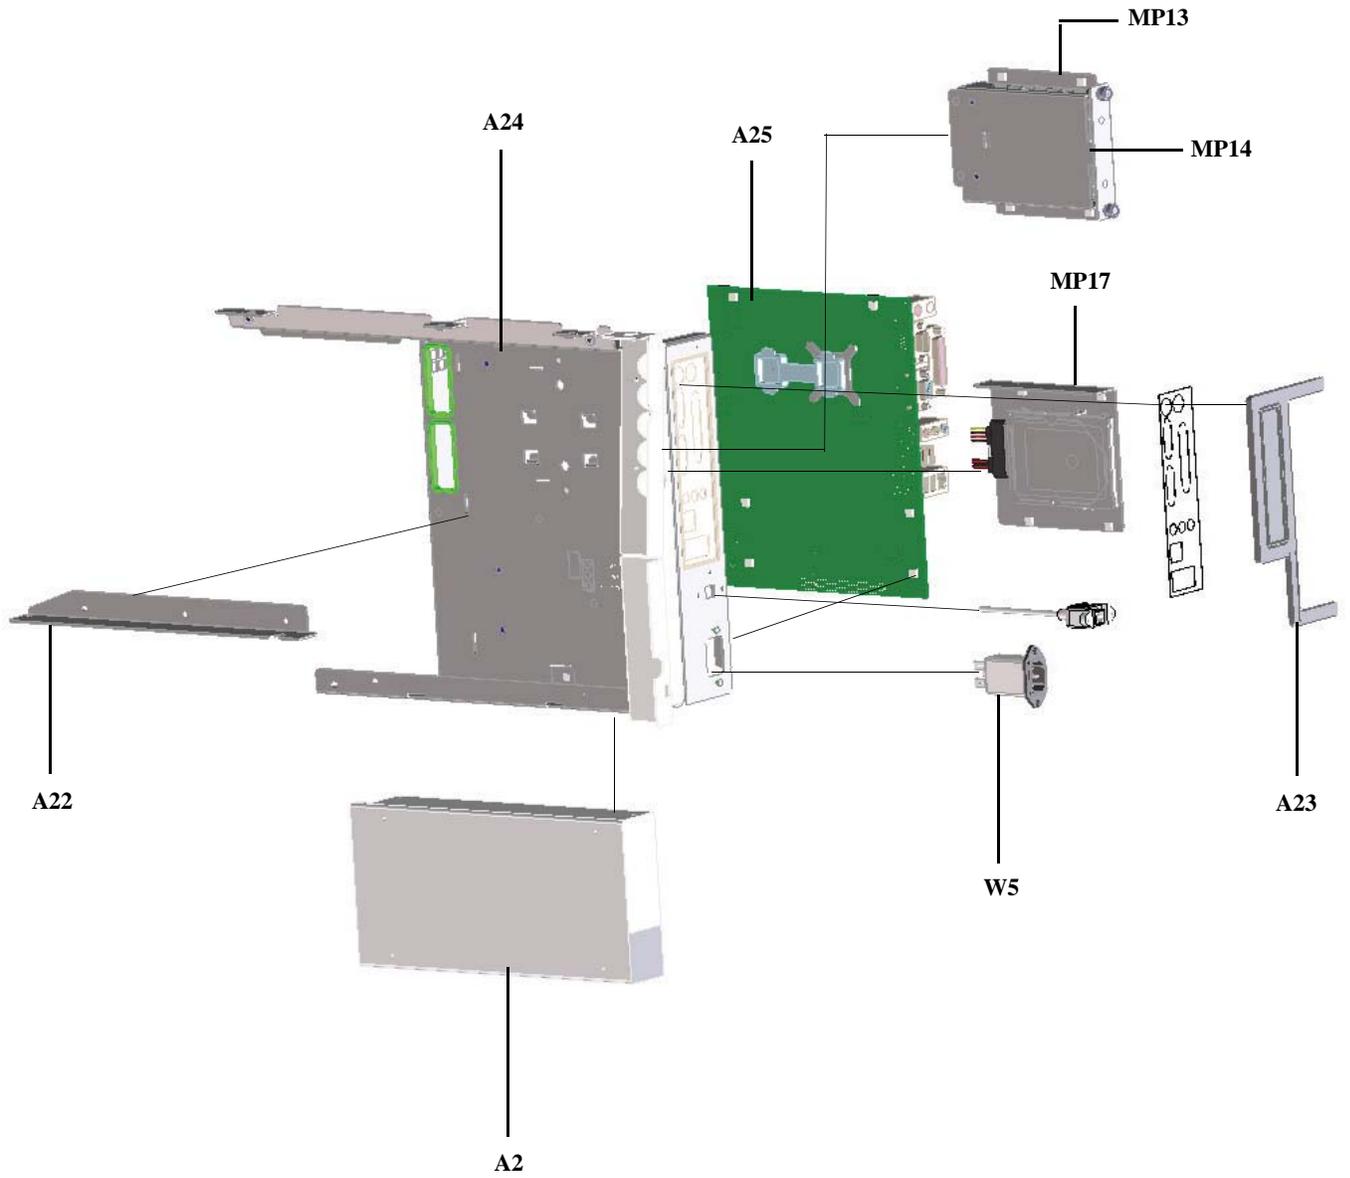

## Chapter 7: Replaceable Parts Exploded Views

### Acquisition Board

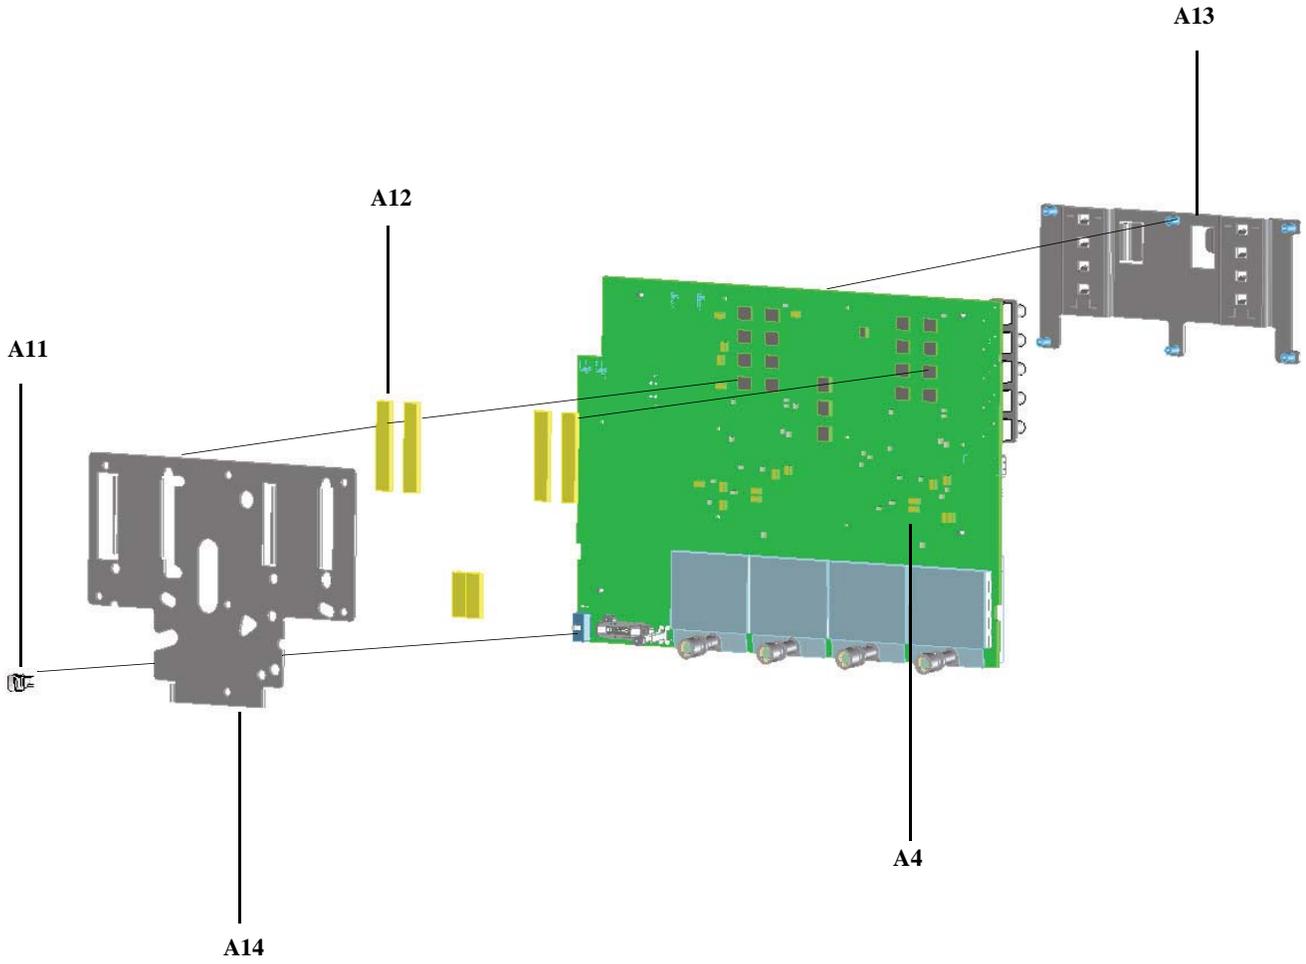

## Replaceable Parts List

The following table is a list of replaceable parts.

The information given for each part consists of the following:

- Reference designation (to match to exploded view drawings).
- Agilent Technologies part number.
- Total quantity (QTY) in oscilloscope or on assembly. The total quantity is given once and at the first appearance of the part number in the list.
- Description of the part.

### Replaceable Parts

Ref. Des.	Agilent Part Number	QTY	Description
A1	Repair Center Replacement Only	1	Infiniium DSO, 600 MHz, 4 channel Oscilloscope (Agilent Model DSO9064A)
A1	Repair Center Replacement Only	1	Infiniium DSO, 1 GHz, 4 channel Oscilloscope (Agilent Model DSO9104A)
A1	Repair Center Replacement Only	1	Infiniium DSO, 2.5 GHz, 4 channel Oscilloscope (Agilent Model DSO9254A)
A1	Repair Center Replacement Only	1	Infiniium DSO, 4 GHz, 4 channel Oscilloscope (Agilent Model DSO9404A)
A1	Repair Center Replacement Only	1	Infiniium MSO, 600 MHz, 4 channel + 16 digital channel Oscilloscope (Agilent Model MSO9064A)
A1	Repair Center Replacement Only	1	Infiniium MSO, 1 GHz, 4 channel + 16 digital channel Oscilloscope (Agilent Model MSO9104A)
A1	Repair Center Replacement Only	1	Infiniium MSO, 2.5 GHz, 4 channel + 16 digital channel Oscilloscope (Agilent Model MSO9254A)
A1	Repair Center Replacement Only	1	Infiniium MSO, 4 GHz, 4 channel + 16 digital channel Oscilloscope (Agilent Model MSO9404A)
A2	0950-5060	1	Power Supply Module 700W 12 V
A3	54684-94308	1	MSO Enable Label
A4	54903-66501*	1	Test Acquisition Board 600 MHz*
A4	54903-69501*	1	Exchange Acquisition Board 600 MHz*
A4	54903-69501-DEF*	1	Defective Exchange Acquisition Board 600 MHz*
A4	54901-66501*	1	Test Acquisition Board 1 GHz*
A4	54901-69501*	1	Exchange Acquisition Board 1 GHz*
A4	54901-69501-DEF*	1	Defective Exchange Acquisition Board 1 GHz*
A4	54902-66501*	1	Test Acquisition Board 2.5 GHz*
A4	54902-69501*	1	Exchange Acquisition Board 2.5 GHz*
A4	54902-69501-DEF*	1	Defective Exchange Acquisition Board 2.5 GHz*
A4	54904-66501*	1	Test Acquisition Board 4 GHz*
A4	54904-69501*	1	Exchange Acquisition Board 4 GHz*
A4	54904-69501-DEF*	1	Defective Exchange Acquisition Board 4 GHz*
A5	54904-64401	1	Cabinet Assembly

**Chapter 7: Replaceable Parts**  
**Replaceable Parts List**

---

**Replaceable Parts**

---

<b>Ref. Des.</b>	<b>Agilent Part Number</b>	<b>QTY</b>	<b>Description</b>
A6	54904-62301	1	Accessory Pouch
A7	54904-44902	1	Handle Keeper
A8	54904-44901	1	Handle
A9	54904-44102	1	Air Duct
A10	54904-44101	1	Cover - front
A11	54904-43901	1	Shaft - power switch
A12	54904-43201	1	Thermal Pad
A13	54904-01202	1	Heat Spreader
A14	54904-01203	1	Heat Spreader - bottom
A15	54904-00102	1	Deck Acquisition
A16	54904-68502	1	Fan 80 mm
A17	54904-68503	1	Fan 60 mm
A19	1400-3411	2	Saddle-Wire Side Entry
A20	54904-68709	2	Fan Assembly with Extra Fan Mounts
A21	54904-00105	1	Rear Cover
A22	54904-00108	1	Bracket - Power Supply
A23	54904-47101	1	Filler Plate
A24	54904-00104	1	Deck - Processor Assembly
A25	0960-2789	1	Motherboard 945GM Flex-ATX Celeron-M 530 2 GB
MP1	54904-94309	1	Label DSO9064A
MP1	54904-94315	1	Label DSO9404A
MP1	54904-94313	1	Label DSO9254A
MP1	54904-94310	1	Label DSO9104A
MP1	54904-94308	1	Label MSO9064A
MP1	54904-94314	1	Label MSO9404A
MP1	54904-94312	1	Label MSO9254A
MP1	54904-94311	1	Label MSO9104A
MP2	54904-94304	1	Label - Autoprobe
MP3	54904-94302	1	Label - I/O Front
MP4	54904-94301	1	Label - Control Panel
MP5	54904-66403	1	PCA - Autoprobe
MP6	54904-66405	1	PCA - Front Panel
MP7	54904-60201	1	Bezel
MP8	54904-41901	1	Switch - Control Panel
MP9	54904-00101	1	Deck - front
MP10	0960-2829	1	Controller Resistive 8W
MP11	54904-42202	1	Keybox
MP12	0403-1116	2	Guide - PC BD BLK POLYC .05-.1 in BD thickness
MP13	54904-01201	1	Bracket - Removable HDD
MP14	54904-04101	1	Plate - Removable HDD
MP15	54904-41202	2	Clamp SATA
MP16	54904-94317	1	Label - Removable HDD Tray
MP17	54904-00107	1	Hard Disk Plate
MP18	54904-68708	1	Touchscreen / Display Assembly
MP19	54904-68706	1	Hard Drive Replacement Kit
MP20	54904-68709	1	Fan with Extra Fan Mounts
MP21	54904-44001	2	One lower rear foot and one upper rear bumper (order twice to get both pairs of rear feet/bumpers)
MP22	54904-41001	2	Tilt Leg (part of bucket)

---

**Replaceable Parts**

---

<b>Ref. Des.</b>	<b>Agilent Part Number</b>	<b>QT Y</b>	<b>Description</b>
MP23	54904-61615	1	MSO Cable
MP24	1250-0080	1	Adapter coaxial female BNC - female BNC
MP25	5063-2174	1	BNC Probe Tip Adapter
MP26	54913-47402	1	Knob 18 mm Flint Gray
MP27	54913-47401	1	Knob 12 mm Flint Gray
MP28	54913-94300	1	Label - Colored Knob Set
MP29	01650-61608	1	Flying Lead Set
MP30	5909-4833	1	Bag of 20 grabbers for Flying Lead Set
MP31	5959-9334	1	Bag if 5 two inch ground leads for use with the Flying Lead Set
MP32	5063-2174	1	BNC to logic probe lead
MP33	1250-0080	1	BNC (f)-(f) barrel
W1	54904-61606	1	Cable - USB Device
W2	54904-61613	1	Cable - ATX Power
W3	54904-61612	1	Cable - Bulk Power
W4	54904-61611	1	Cable - Standby/on-off
W5	54904-61601	1	Cable - AC input
W6	54904-61609	1	Cable - Front Panel Power
W7	54904-61603	1	Cable - LVDS
W8	54904-61614	4	Cable - HDD Power
W9	1520-0686		Cable Clamp

---

\*Customers can only order the exchange acquisition boards. The customer must return the defective acquisition board back to Agilent as a 6950X-DEF board. If the defective board is not returned then the customer is charged the cost of a new board.

**Chapter 7: Replaceable Parts**  
**Replaceable Parts List**

Block-Level Theory 156  
  Power Supply Assembly 157  
  Monitor Assembly 157  
  Acquisition System 157  
  Front Panel 157  
  Motherboard 159

---

## Theory of Operation

## Theory of Operation

This *Service Guide* supports troubleshooting the Agilent Technologies oscilloscopes to assembly level. Theory of operation is included only as supplemental information. It is not comprehensive enough for component-level troubleshooting.

---

### Block-Level Theory

**The front panel provides:**

- Dedicated knobs and pushbuttons for major oscilloscope functions.
- An 15 inch (diagonal) color flat panel display for waveform, measurement, and graphical interface display.
- Three front panel USB 2.0 ports.
- Precision BNC connectors for channel input signals.
- BNC connector for auxiliary output signal.
- AutoProbe interface for probe power and probe control.
- A connection for probe compensation.

**The rear panel provides several connections:**

- A parallel printer connection.
- A serial printer connection
- XGA monitor connection.
- Mouse and keyboard connections.
- LAN 10/1000 connection.
- Auxiliary Trigger Input BNC.
- 10 MHz Reference Output BNC.
- 10 MHz Reference Input BNC.
- TTL trigger output BNC.
- Four rear panel USB 2.0 ports.

The major boards of the oscilloscope are the acquisition board, autoprobe board, and front panel keyboard (there are several additional minor boards). The boards are part of a PC system complete with an motherboard, power supply, and LCD display.

### **Power Supply Assembly**

The AC input to the power supply is 100–240 VAC  $\pm 10\%$ . Maximum input power is 375 W. The AC input frequency is 50 to 60 Hz.

Filtered voltages of +5 V, +3.3 V, +2.5 V, +2.25 V, +1.8 V, +1.6 V, +1.2 V, -12 V, -6 V, -5 V, and -3.8 V are supplied and distributed throughout the oscilloscope.

### **Monitor Assembly**

The Flat Panel Display (FPD) monitor is a thin film liquid-crystal touch screen display (TFT-LCD). This FPD is an 15 inch diagonal, 1024 by 768 pixel XGA color monitor.

### **Acquisition System**

There is one acquisition assembly. The acquisition boards contain the TUT modules, the Onboard ADC, the clock distribution, the data management ASICs, the external acquisition memory, the ADC, the communication and programming FPGA, and the supporting power supply circuitry.

### **Front Panel**

The front panel board and autoprobe board are split into three interconnecting PCAs. The front panel keyboard has a breakaway section that interfaces to the keyboard. This breakaway section receives power supply nets from the acquisition board and generates programmable voltages for the autoprobe interface.

The keyboard links to the scope PC motherboard through a high-speed USB 2.0 interface. The on-board USB hub serves the PIC microcontroller, the touch screen controller board, and up to three front panel USB connectors for a customer's peripherals.

A conductive element on the inside of each key shorts a gap on the underlying keyboard circuit board. The keyboard controller detects this short and sends the proper keypress information to the system controller on the motherboard.

There are 12 knobs located on the front panel.



### **Motherboard**

The motherboard provides all system control and interface functions for the oscilloscope. It contains a CPU, ROM, and RAM; keyboard and mouse interfaces, serial and parallel interfaces, CDROM, hard disk drive interface, PCI buses, etc.

### **Display Board**

The Display Board controls the flat-panel display monitor. It translates the video signals from the motherboard's on-board video system to the Low Voltage Differential Signal (LVDS) signals that drive the monitor.

### **System Fans**

There are five fans: two larger fans that draw air out of the rear of the instrument, two medium fans that are positioned over each ADC to give additional cooling, and one small fan positioned over the trigger IC. They are all controlled by the main FPGA.

**Chapter 8: Theory of Operation**  
**Block-Level Theory**

## A

- accessories 16
  - and options 16
  - supplied 15
- acquisition troubleshooting 105
- airflow requirements 27
- Application software 37
- applying power 33
- Autoscale 35

## B

- back panel connections 28, 30
- backlight 33
- backlight inverter 98
- BIOS setup 104
- blanking
  - screen 33
- BNC connectors 31

## C

- cables 16
  - printer 28
- calibration
  - and repair service 16
  - interval 45
  - MIL-STD 16
  - output 35
  - procedure 45
- cautions
  - cleaning 39
  - disconnecting probes 31
  - environmental 11
  - measurement category 11
- Centronics printers, see parallel printers
- checking the oscilloscope 15
- cleaning the oscilloscope 39
- clearance requirements 27
- configuration
  - default 35
- connecting
  - LAN card 28
  - pointing device 30
  - power 27
  - printers 28
  - probes 31
- contents
  - of oscilloscope package 15

## D

- default setup 35

## Chapter :

direct mail ordering 146

F

feet

using 32

front panel

connections 31

G

GPIB

cables 16

graphical interface

pointing device for 30

I

inspecting the oscilloscope 15

Installing

Application software 37

instrument, see oscilloscope

inverter, backlight 98

L

LAN card 28

line voltage 27

M

making

oscilloscope easier to view 32

manuals 15, 16

MIL-STD calibration 16

mouse

connecting 30

verifying 35

N

notes

screen saver 33

O

operation

verifying 35

options 16

and accessories 16

oscilloscope

cleaning 39

inspecting 15

oscilloscope feet 32

oscilloscope operation

verifying 35

oscilloscope probes, see probes

P

package contents 15

packing for return 115

parallel printers 28

- pointing device 16
  - connecting 30
  - verifying operation 35
- power
  - applying 33
  - connecting 27
  - requirements 27
  - turning off 34
- printer
  - cables 16, 28
- printers 16
  - connecting 28
- probes 16
  - connecting 31
- probing a circuit 31
- R
- repair and calibration services 16
- replacing parts 146
- returning the instrument to Agilent 115
- RJ-45 connector 28
  - LAN card 28
- S
- screen saver 33
- serial printers 28
- service
  - repair and calibration 16
- setup
  - default 35
- standard accessories 15
- T
- tilting the oscilloscope 32
- touchpad 16
  - connecting 30
- trackball 16
  - connecting 30
- U
- using
  - feet 32
- V
- verifying basic operation 35
- W
- Window system settings 38

**Chapter :**

# Safety Notices

This apparatus has been designed and tested in accordance with IEC Publication EN 61010-1:2001, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

## Warnings

- Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuseholders. To do so could cause a shock or fire hazard.
- If you energize this instrument by an auto transformer (for voltage reduction or mains isolation), the common terminal must be connected to the earth terminal of the power source.
- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.
- Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- Do not install substitute parts or perform any unauthorized

modification to the instrument.

- Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.
- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.
- Do not use the instrument in a manner not specified by the manufacturer.

## To clean the instrument

If the instrument requires cleaning: (1) Remove power from the instrument. (2) Clean the external surfaces of the instrument with a soft cloth dampened with a mixture of mild detergent and water. (3) Make sure that the instrument is completely dry before reconnecting it to a power source.

## Safety Symbols



Instruction manual symbol: the product is marked with this symbol when it is necessary for you to refer to the instruction manual in order to protect against damage to the product.



Hazardous voltage symbol.



Earth terminal symbol: Used to indicate a circuit common connected to grounded chassis.

---

# Notices

© Agilent Technologies, Inc.  
2009

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number  
54904-97005, October 2009

Print History  
54904-97005, Oct 2009  
54904-97000, June 2009

Agilent Technologies, Inc.  
1900 Garden of the Gods Road  
Colorado Springs, CO 80907  
USA

## Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or sub-contract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

## Document Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

## CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.