

Agilent

InfiniiScan Event Identification Software for Infiniium 8000 (N5415A) and 80000B (N5414A) Series Oscilloscopes

Data Sheet





Identify signal integrity issues quickly and easily

Today's digital signals are increasingly complex. Designers of serial links and parallel busses want to quickly identify signal anomalies in their designs. Engineers have traditionally relied on hardware triggering and deep memory to capture such illusive events. However, these classic methods fall short in some key areas.

Agilent Technologies' InfiniiScan software allows you to use an oscilloscope to identify signal integrity issues that hardware triggering is unable to find in your electronic designs. This innovative software scans through thousands of acquired waveforms per second to help you isolate signal anomalies, saving you time and improving designs.

Consideration	Classic methods	InfiniiScan software
Number of events that can be monitored simultaneously	One, the hardware trigger event	Up to five different events or the same event on four channels
Number of occurrences of that event that can be identified	One, the occurrence at the hardware trigger point	Unlimited number of events within the acquired time window
Variety of events that can be identified	Approximately ten, fixed and limited by hardware triggering capabilities	Software descriptions provide increased event definition flexibility
Maximum speed of events that can be isolated	Minimum input setting of 300 ps, limited by hardware triggering circuits	Events as narrow as 70 ps can be isolated, limited only by sample rate resolution
Difficulty in defining the proper setup to capture the event	Requires triggering expertise. Many people end up pressing the Single key many times or spending hours scanning though acquired data.	If you can see it, you can capture it using the zone qualify capability or any of InfiniiScan's other power isolation mechanisms
Finding an event of interest in a deep memory capture	Manually inspecting waveforms is impractical, as 1 Mpoint of memory represents 10,000 screens of waveforms	Scope scans the waveform so you don't have to, and no programming is required
Looking for a third state event	Trigger on two events and scan through data to find the third stage	With InfiniiScan and hardware triggering of the 90000 Series, trigger on the first two events and the scope scans for the third

InfiniiScan overcomes these classic limitations by using software to overcome the limitations of hardware triggering. InfiniiScan inspects individual waveforms and lets you know where the anomalies are. InfiniiScan moves an oscilloscope a few steps closer to the ideal of a "Find

Problem" button. InfiniiScan can also isolate events as narrow as 70 ps – well beyond the limitations of hardwarebased approaches. With InfiniiScan, there is no need to manually inspect waveforms as InfiniiScan will scan a waveform automatically to identify a single waveform anomaly out of 10,000 screens of data without requiring programming.

Agilent InfiniiScan consists of three components, InfiniiScan software finders, measurement limit test, and two-stage triggering.

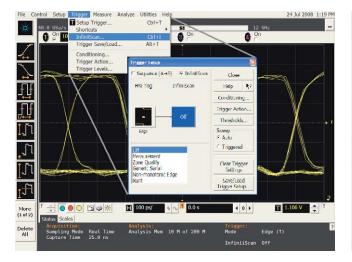


Figure 1. InfiniiScan menu is conveniently located by the trigger menu

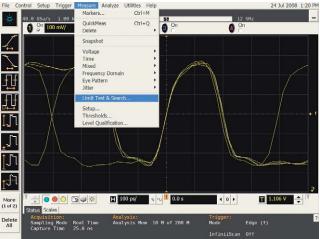


Figure 2. Measurement limit test setup can be found under "limit and test search" in the "acquisition" menu

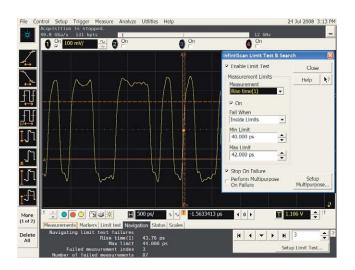


Figure 3. Limit test search allows you to quickly see how many failures you have and then step through the failures one by one

InfiniiScan Software Finders

InfiniiScan software finders consists of five unique features: measurement finder, zone qualify finder, generic serial pattern finder, non-monotonic edge finder and runt finder.

Measurement finder allows you to set boundary conditions to the specified measurement results (inside/outside limits). The oscilloscope will then tell you if it finds such an event. For example, you can set a measurement finder to have the oscilloscope identify a rise time you specify.

Measurement finder will work with only the measurement that the oscilloscope makes. This provides insight that hardware triggering cannot find.

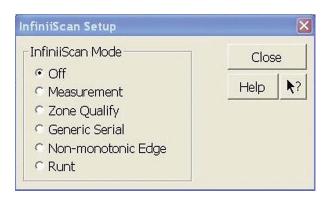


Figure 4. Notice how the InfiniiScan trigger menu and hardware triggers are located together to allow for seamless operation between hardware and software triggers

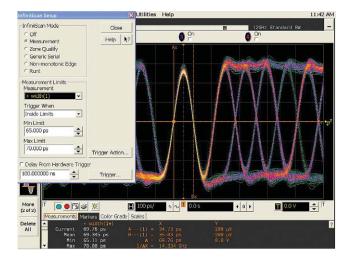


Figure 5. InfiniiScan measurement finder identifies a glitch that occurs between 65 ps and 75 ps

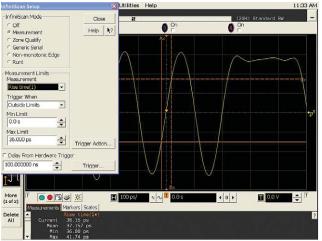


Figure 6. InfiniiScan measurement finder identifies a risetime slower than 36 ps in order to locate ISI issues that are occurring on a single-bit pulse

The *zone qualify finder* allows you to draw a "must pass" and a "must not pass" zone on the oscilloscope screen to visually determine the event identification condition. Essentially, if you can see the event of interest on the screen, you can quickly isolate it without having to try to figure out how to set up a trigger or needing to repeatedly press the Single key.

The *generic serial finder* lets you set up to an 80-bit serial pattern for the oscilloscope to identify up to 8.5 Gbs. Hardware solutions are currently limited to 40 bits and a maximum speed of 3.125 Gbs. Serial patterns can be expressed in hexadecimal or binary. User-definable CDR (clock data recovery) methods are available. Fixed-frequency CDR is standard. Other CDR methods (PLL, explicit, etc.) are available if ordered in conjunction with Agilent's EZJIT jitter analysis or serial data analysis software packages. Combine InfiniiScan with Infiniium's protocol viewer tools for the ultimate protocol analysis on an oscilloscope. Get unprecedented analysis capability.

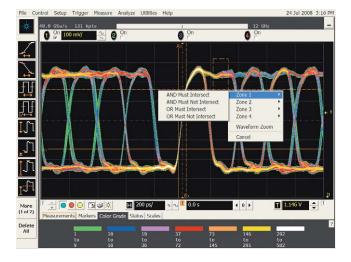


Figure 7. The InfiniiScan zone qualify finder is used to isolate single-bit pulses. Only the waveforms that pass the must-not-intersect (upper left) and must-intersect (lower right) graphical zones are displayed.

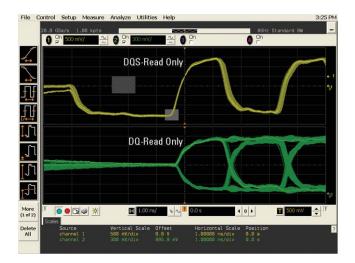


Figure 9. Notice how zone qualify is able to easily isolate the exact signal you need. This is very useful for many applications, including separating reads and writes for memory signals.

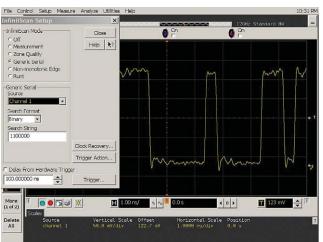


Figure 8. InfiniiScan's generic serial finder is used to isolate a specific portion of a high-speed serial data stream.

InfiniiScan Software Finders (continued)

InfiniScan's *runt finder* allows you to identify under-sized signal pulses to resolutions that are beyond the capability of hardware approaches by using hysterisis and threshold levels you specify.

The *non-monotonic edge*

finder is a unique capability of InfiniiScan. It allows you to identify non-monotonic edges caused by signal reflections. This feature is strongly demanded by the test and measurement industry to help identify poor signal terminations. There is no method for finding such an event with hardware triggering. You can get two stage triggering by using the delay from hardware trigger control. Hardware trigger must be followed by InfiniiScan triggering after specifying a delay between the events. You can use the delay capability to facilitate a higher percentage of pre-finder and post-finder information.

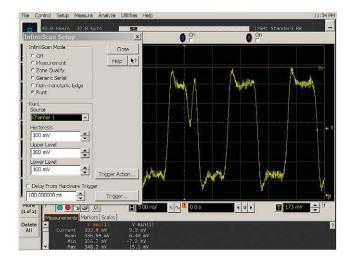


Figure 10. InfiniiScan's runt finder can be used to isolate runt pulses that occur in a signal.



Figure 11. InfiniiScan's non-monotonic edge finder isolates a signal anomaly caused by a poor termination.

InfiniiScan Measurement Limit Test

InfiniiScan measurement limit test counts the number of violations against specified measurement value conditions. This feature lets you set up to five different conditions over all channels. For example, you can monitor the valid rise time window for channel 1 while monitoring the valid signal period window on channel 3. The navigation capability of measurement limit test will move the display to the exact location of any and all anomalous events that have been identified on every waveform. This navigation capability is also not possible with hardware-based approaches or any previous oscilloscope software package.

Measurement limit test operation

- Choose up to five measurements (measurements must be turned on prior to starting InfiniiScan measurement identification)
- Define unacceptable ranges (in range, out of range)
- Scope scans waveforms
- Acquire and repeat until found
- Navigate to anomalous events
- Actions on failure: stop, print, e-mail, screen shot, save setup, save waveform, measurement

The InfiniiScan software will not replace the use of hardware triggering for capturing rare anomalies that occur more infrequently than 1-ms to 1-sec. However, InfiniiScan works as a companion to the hardware triggering system by augmenting these traditional capabilities in new ways via InfiniiScan's innovative searching, measuring and scanning techniques. InfiniiScan identifies signal integrity issues previously difficult or impossible to find with traditional hardware triggering or deep memory approaches, making it a valuable addition to your toolbox for many oscilloscope applications.

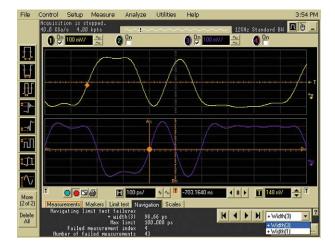


Figure 14. InfiniiScan measurement limit test identifying glitches on two channels simultaneously. Navigation controls (first, previous, next, last) also shown.

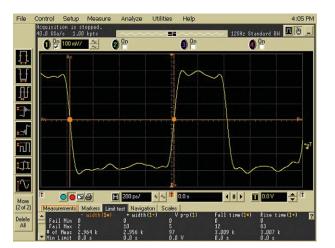


Figure 15. InfiniiScan measurement limit test simultaneously monitoring five different events (positive pulse width, negative pulse width, peak to peak voltage, fall time and rise time) on a single signal.

Ordering Information

Model	Description
N5415A	InfiniiScan Event Identification Software for Infiniium 8000 Series
N5414A	InfiniiScan Event Identification Software for Infiniium 80000B Series

Triggering Support	N5415B	N5415A	N5414B	N5414A
Zone Qualify Zones	8	4	8	4
Supports Multiple Channels Zone Qualify	Х		Х	
Measurement Limit Testing	Х	Х	Х	Х
Generic Serial Trigger	Х	Х	Х	Х
Runt	Х	Х	Х	Х

Agilent Email Updates

www.agilent.com/find/emailupdates Get the latest information on the products and applications you select.

Agilent Direct

www.agilent.com/find/agilentdirect Quickly choose and use your test equipment solutions with confidence.

Agilent Channel Partners

www.agilent.com/find/channelpartners Get the best of both worlds: Agilent's measurement expertise and product breadth, combined with channel partner convenience.

L//\|

www.lxistandard.org

LXI is the LAN-based successor to GPIB, providing faster, more efficient connectivity. Agilent is a founding member of the LXI consortium.

Remove all doubt

Our repair and calibration services will get your equipment back to you, performing like new, when promised. You will get full value out of your Agilent equipment throughout its lifetime. Your equipment will be serviced by Agilenttrained technicians using the latest factory calibration procedures, automated repair diagnostics and genuine parts. You will always have the utmost confidence in your measurements.

Agilent offers a wide range of additional expert test and measurement services for your equipment, including initial start-up assistance, onsite education and training, as well as design, system integration, and project management.

For more information on repair and calibration services, go to:

www.agilent.com/find/removealldoubt

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

www.agilent.com/find/contactus

Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

Europe & Middle East

Laropo a milatio i		
Austria	43 (0) 1 360 277 1571	
Belgium	32 (0) 2 404 93 40	
Denmark	45 70 13 15 15	
Finland	358 (0) 10 855 2100	
France	0825 010 700*	
	*0.125 €/minute	
Germany	49 (0) 7031 464 6333	
Ireland	1890 924 204	
Israel	972-3-9288-504/544	
Italy	39 02 92 60 8484	
Netherlands	31 (0) 20 547 2111	
Spain	34 (91) 631 3300	
Sweden	0200-88 22 55	
Switzerland	0800 80 53 53	
United Kingdom	44 (0) 118 9276201	
Other European Countries:		

www.agilent.com/find/contactus

Product specifications and descriptions in this document subject to change without notice.

October 1, 2009

© Agilent Technologies, Inc. 2009 Printed in USA, December 10, 2009 5989-4605EN

